

## Foyoconven TA7703-UL

# Foyoconven 4-Slice Smart Toaster User Manual

Model: TA7703-UL

## 1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Always unplug the toaster from the outlet before cleaning crumbs from the crumb tray.

## 2. PRODUCT OVERVIEW

The Foyoconven 4-Slice Smart Toaster features a modern stainless steel design with advanced touch screen controls for precise toasting. It is equipped with a 1400W fast heating system and extra-wide slots to

accommodate various bread types.



Image: The Foyoconven 4-Slice Smart Toaster in operation, showcasing its sleek design and the touch screen interface.

## Key Features:

- **1400W Fast Heating System:** Delivers golden toast efficiently.
- **Dual 1.5" Extra-Wide Slots:** Accommodates up to four standard slices or two jumbo items like bagels and Texas toast.
- **Smart Memory Function:** Saves your preferred toasting settings for future use.
- **Smart Touch Pro Control:** Features a full-touch LED screen with 6 precision browning levels and 5 preset modes (Bagel, Waffle, Pastry, Bread, Muffin).
- **Energy-Saving Intelligence:** Automatically detects occupied slots, allowing for single-slice toasting to reduce energy consumption.
- **Effortless Cleaning:** Equipped with a full-width slide-out crumb tray for easy debris removal.

# LED Display Full-Touch Screen

Lifestyle appeal, more than a toaster



Auto  
Shutoff



Digital  
Timer



7.17 in<sup>2</sup>  
Touch screen



Image: Close-up of the toaster's LED display and touch screen, emphasizing the 1400W high power fast baking capability.



Image: Illustration showing the 1.5-inch extra-wide slots, designed to fit various bread sizes including thick slices.

### 3. GETTING STARTED (SETUP)

- 1. Unpack the Toaster:** Carefully remove the toaster and all packaging materials. Ensure all components are present and undamaged.
- 2. Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials like curtains. Ensure adequate ventilation around the appliance.
- 3. First Use (Burn-Off Cycle):** Before toasting food for the first time, operate the toaster without bread for a few cycles at the highest browning setting. This will burn off any manufacturing residues and eliminate initial odors. A slight smoke or odor is normal during this process. Ensure the area is well-ventilated.
- 4. Plug In:** Insert the power plug into a standard 120V AC electrical outlet.

## 4. OPERATING INSTRUCTIONS

### Basic Toasting:

- 1. Insert Bread:** Place slices of bread into the toasting slots.
- 2. Select Bread Type (Optional):** On the touch screen, select the icon corresponding to your bread type (Bread, Bagel, Waffle, Pastry, Muffin). This optimizes the toasting cycle for specific items.
- 3. Adjust Browning Level:** Use the touch screen to select one of the 6 browning levels. Level 1 is the lightest, and Level 6 is the darkest.
- 4. Start Toasting:** Press the lever down until it locks into place. The toaster will begin the toasting cycle, and the display will show a countdown timer.
- 5. Cancel:** To stop the toasting cycle at any time, press the "CANCEL" button on the touch screen.



Image: Visual guide demonstrating the four steps of operation: selecting bread type, choosing function, setting shade, and pressing the lever.

### Special Functions:

- Bagel Mode:** Toasts the cut side of the bagel while gently warming the outer side. Select "Bagel" icon.
- Defrost Mode:** Thaws and toasts frozen bread. Select the snowflake icon.
- Reheat Mode:** Warms previously toasted bread without further browning. Select the wavy lines icon.
- Memory Function:** To save a preferred setting (e.g., Bagel Mode + Level 4), select your desired settings, then press and hold the heart icon until it confirms. The next time you press the heart icon, it will automatically apply your saved settings.
- Single Slice Toasting:** The toaster intelligently detects which slots are occupied and only activates heating for those slots, saving energy.



## 6 Browning Levels



Image: A visual representation of the 6 browning levels, from lightly warm soft to very crispy hearty crunch, with corresponding toast shades.



Image: An illustration highlighting the five dedicated bread modes: Bread, Bagel, Waffle, Pastry, and Muffin, designed for one-click baking.



Image: A graphic illustrating the four primary functions of the toaster: single toasting, memory function, defrost, and reheat.

## 5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your toaster.

- 1. Unplug and Cool:** Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.
- 2. Clean Crumb Tray:** Pull out the full-width slide-out crumb tray from the bottom of the toaster. Discard crumbs and wipe the tray clean with a damp cloth. Dry thoroughly before reinserting.
- 3. Clean Exterior:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as they may scratch the stainless steel finish.
- 4. Do Not Immerse:** Never immerse the toaster in water or any other liquid.
- 5. Storage:** When not in use, store the toaster in a clean, dry place. The integrated wire storage slot on the bottom helps keep the cord tidy.

*Say Goodbye to Buttons!*  
**Digital Touch Technology**



Image: Detailed view of the toaster's features for easy maintenance, including the removable crumb tray, wire storage slot, and extra-lift lever.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure toaster is securely plugged in. Check circuit breaker or try a different outlet.
Lever does not stay down.	Toaster is not plugged in; browning setting is not selected.	Ensure the toaster is plugged into a live outlet. Select a browning level on the touch screen before pressing the lever.
Bread is unevenly toasted.	Uneven bread thickness; crumb buildup.	Ensure bread slices are of uniform thickness. Clean the crumb tray regularly.
Smoke coming from toaster.	Food lodged in slots; excessive crumbs; first use burn-off.	Immediately press CANCEL and unplug. Allow to cool, then carefully remove any lodged food. Clean crumb tray. (Note: Some smoke is normal during first use).

## 7. SPECIFICATIONS

Attribute	Detail
Brand	Foyoconven

Attribute	Detail
Model Number	TA7703-UL
Color	Stainless Steel
Material	Stainless Steel
Product Dimensions	14.76"D x 7.4"W x 6.14"H
Wattage	1400 watts
Voltage	120V
Number of Slices	2 (for 4 standard slices)
Number of Browning Settings	6
Number of Programs (Presets)	5 (Bagel, Bread, Muffin, Pastry, Waffle)
Special Features	Built-In Timer, Cancel Function, Defrost Mode, LED Indicator, Touchscreen, Memory Function, Single-Slice Detection
Item Weight	4.08 pounds

## 8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Foyoconven customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance, please visit the official Foyoconven website or contact their customer support team.