

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Foyoconven](#) /

› [Foyoconven 4-Slice Digital Touchscreen Toaster Instruction Manual](#)

Foyoconven TAC1001-UL

Foyoconven 4-Slice Digital Touchscreen Toaster

MODEL: TAC1001-UL

Introduction

This manual provides essential instructions for the safe and efficient operation, maintenance, and care of your Foyoconven 4-Slice Digital Touchscreen Toaster, Model TAC1001-UL. Please read all instructions carefully before first use and retain this manual for future reference.

Important Safety Information

WARNING: To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plug, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not insert oversized foods, metal foil packages, or utensils into the toaster as this may create a fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when the toaster is plugged in.
- Do not use the appliance for other than intended use.

Product Overview

The Foyoconven 4-Slice Digital Touchscreen Toaster features dual independent control panels, extra-wide slots, and multiple preset functions for versatile toasting.



Front view of the Foyoconven 4-Slice Digital Touchscreen Toaster, showcasing its sleek stainless steel design and dual digital control panels. Four slices of bagels are visible in the toasting slots.

Components:

- Toasting Slots:** Four 1.5-inch wide slots for various bread types.
- Digital Touchscreen Control Panels:** Two independent panels for separate settings.
- Browning Level Indicators:** Digital display for shade settings.
- Function Buttons:** Defrost, Reheat, Bagel, Single Slice, Cancel.
- Bread Type Presets:** Icons for Bread, Bagel, Waffle, Pastry, Muffin, Gluten-Free.
- Toasting Levers:** To lower and raise bread.
- Removable Crumb Trays:** Located at the bottom for easy cleaning.
- Cord Storage:** Integrated slot for neat cord management.

The Full Touch Screen Toaster

Tap, Toast, Taste – Effortless Control at Your Fingertips.



A detailed view of the toaster's responsive full touchscreen, demonstrating its intuitive controls for effortless operation.

Setup

- Unpack:** Carefully remove the toaster and all packaging materials. Ensure all components are present and undamaged.
- Placement:** Place the toaster on a stable, heat-resistant, and dry surface, away from flammable materials. Ensure adequate ventilation around the toaster.
- Initial Cleaning:** Wipe the exterior of the toaster with a damp cloth. Ensure the crumb trays are properly inserted.
- First Use (Burn-off Cycle):** Before toasting food, operate the toaster empty on the highest browning setting (level 6) for a few minutes. This will burn off any manufacturing residues and eliminate initial odors. It is normal for a slight odor or smoke to be present during this first use. Ensure the area is well-ventilated.
- Plug In:** Insert the power plug into a standard 120V AC electrical outlet.

Operating Instructions

Your Foyoconven toaster features dual independent control panels, allowing you to toast different items simultaneously with separate settings.



A sequence of four images demonstrating the toaster's operation: 1) Selecting bread type, 2) Selecting desired function, 3) Setting shade level, and 4) Pressing the lever to start toasting.

Basic Toasting:

- 1. Insert Bread:** Place up to four slices of bread or other items into the toasting slots. The 1.5-inch wide slots accommodate various thicknesses.
- 2. Select Bread Type:** On the desired control panel (left or right), tap the icon corresponding to your bread type (Bread, Bagel, Waffle, Pastry, Muffin, Gluten-Free).
- 3. Adjust Browning Level:** Use the shade selection area to choose your preferred browning level from 1 (lightly warm) to 6 (very crispy).
- 4. Start Toasting:** Press down the toasting lever until it locks into place. The digital display will show a countdown.
- 5. Completion:** Once toasting is complete, the bread will automatically pop up.

6 Browning Levels & Bread Types



A visual guide displaying six distinct browning levels, from lightly warm to very crispy, along with icons for different bread types like bread, bagel, waffle, pastry, muffin, and gluten-free.

Special Functions:

- Defrost Mode:** For frozen items. Insert the frozen item, select the bread type, then tap the **Defrost** button (snowflake icon). Adjust browning level and press the lever. The toaster will automatically adjust the toasting time.
- Reheat Mode:** To warm previously toasted items without further browning. Insert the item, then tap the **Reheat** button (wavy lines icon). Press the lever.
- Bagel Mode:** For bagels and similar items. Insert the bagel (cut side facing inwards), select 'Bagel' bread type, then tap the **Bagel** button. Adjust browning level and press the lever. This mode toasts the cut side while gently warming the outer side.
- Single-Slice Toasting:** To toast a single slice efficiently. Insert one slice into a slot, then tap the **Single Slice** button (icon with '1' and bread slice). Adjust browning level and press the lever. This mode optimizes heat for one slice, saving energy.
- Cancel Function:** To stop the toasting cycle at any time, tap the **Cancel** button (X icon) on the respective control panel. The bread will pop up.



An annotated diagram of the digital touchscreen control panel, pointing out the countdown display, defrost button, reheat button, single slice button, cancel button, toast shade selection area, bread selection area, and power on button.

Maintenance and Cleaning

WARNING: Always unplug the toaster and allow it to cool completely before cleaning.

Crumb Trays:

1. Locate the removable crumb trays at the bottom of the toaster.
2. Pull out the trays to remove accumulated crumbs.
3. Discard crumbs and wipe the trays clean with a damp cloth. Dry thoroughly before reinserting.
4. Push the crumb trays back into place until they click securely.



Removable Crumb Tray
for Easy Cleanup



Wire Storage Slot
for Easy Organization

Two images side-by-side: one showing two removable crumb trays being pulled out for easy cleaning, and the other showing a hand organizing the power cord in the wire storage slot at the bottom of the toaster.

Exterior Cleaning:

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the finish.
- Ensure the toaster is completely dry before plugging it back in or storing.

Troubleshooting

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet malfunction; circuit breaker tripped.	Ensure the toaster is securely plugged into a working outlet. Check your household circuit breaker.
Bread does not stay down when lever is pressed.	Toaster is not plugged in; browning level not selected; internal mechanism issue.	Ensure the toaster is plugged in. Select a browning level on the touchscreen. If the issue persists, contact customer support.
Uneven toasting.	Inconsistent bread thickness; crumb buildup; first use.	Ensure bread slices are of uniform thickness. Clean crumb trays regularly. The first few uses may have slight variations.
Smoke or burning smell.	Food lodged in slots; excessive crumbs; first use burn-off.	Immediately unplug the toaster. Allow to cool, then carefully remove any lodged food. Clean crumb trays. If it's the first use, this is normal.

Specifications

Feature	Specification
Brand	Foyoconven
Model Number	TAC1001-UL
Color	Stainless Steel
Material	Stainless Steel
Product Dimensions	10.98"D x 10.75"W x 7.6"H
Specific Uses	Bagel, Bread, Muffin
Wattage	1800 watts
Number of Slices	4
Special Features	Built-In Timer, Cancel Function, Defrost Mode, LED Indicator, Touchscreen
Item Weight	4.85 Pounds
Voltage	120 Volts (AC)
Number of Settings	6 (Browning Levels)

Warranty and Support

Foyoconven is committed to product quality. For warranty information, technical support, or any questions regarding your toaster, please refer to the warranty card included with your purchase or contact Foyoconven customer service.

directly. Contact details can typically be found on the manufacturer's website or on the product packaging.

© 2025 Foyoconven. All rights reserved.

Related Documents - TAC1001-UL

	<p>Highland 2-Slice Toaster User Manual and Safety Guide</p> <p>This manual provides comprehensive instructions for the Highland 2-Slice Toaster, model number TA1416B-UL. It details essential information for users, ensuring safe and effective operation of the appliance, including package contents, operation, troubleshooting, care, maintenance, and safety guidelines.</p>
	<p>Waring WCT708/WCT708CND Four-Slice Commercial Toaster: Operating and Cleaning Manual</p> <p>Comprehensive operating and cleaning instructions for the Waring WCT708 and WCT708CND four-slice commercial toasters. Includes important safeguards, specifications, operation guidance, care, and warranty information.</p>
	<p>APW Wyott AT Express Horizontal Conveyor Toaster: Installation and Operating Instructions</p> <p>Comprehensive guide for the APW Wyott AT Express Horizontal Conveyor Toaster, covering installation, operation, safety precautions, cleaning, troubleshooting, and warranty information for commercial kitchens.</p>
	<p>AUMATE TO5712A-UL Air Fryer Toaster Oven Instruction Manual</p> <p>Comprehensive instruction manual for the AUMATE TO5712A-UL Air Fryer Toaster Oven, covering safety precautions, specifications, operation, cleaning, and troubleshooting.</p>
	<p>Cosmo COS-12MWDSS Microwave Drawer: Specifications and Dimensions</p> <p>Detailed specifications and dimensions for the Cosmo COS-12MWDSS 24-inch built-in microwave drawer, featuring 1000W power, 1.2 cu. ft. capacity, and advanced presets.</p>



[ServIt SDC-1A 120V One Pan Drop-In Refrigerated Cold Food Well - Spec Sheet](#)

Detailed specifications for the ServIt SDC-1A, a 120V one-pan drop-in refrigerated cold food well designed for commercial food service. Features include durable stainless steel construction, digital controller, and R-290 refrigerant.