

Manuals.plus /

› Zostuic /

› Zostuic 5K 64MP Digital Camera User Manual with 6X Optical Zoom and Wi-Fi

Zostuic 5K 64MP

Zostuic 5K 64MP Digital Camera User Manual

Model: 5K 64MP

INTRODUCTION

This manual provides detailed instructions for the Zostuic 5K 64MP Digital Camera. Please read this manual thoroughly before using your camera to ensure proper operation and to maximize its features. Keep this manual for future reference.

SAFETY INFORMATION

- Do not expose the camera to water or moisture. This camera is not waterproof.
- Avoid dropping the camera or subjecting it to strong impacts.
- Keep the camera away from strong magnetic fields.
- Do not attempt to disassemble or modify the camera. Repairs should only be performed by qualified personnel.
- Use only specified batteries and charging cables.
- Store the camera in a cool, dry place when not in use.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Zostuic 5K 64MP Digital Camera
- 64GB SD Card
- 2 x Lithium-Polymer Batteries
- USB-C Charging Cable
- Camera Case
- Carrying Strap



Image: The Zostuic 5K 64MP Digital Camera shown with its 64GB SD card, two batteries, and a Wi-Fi icon indicating connectivity.

CAMERA OVERVIEW

Familiarize yourself with the various parts and controls of your Zostuic digital camera.

Advanced Travel Camera



Image: A diagram illustrating the camera's components, including the hot shoe, rotating dial, flash, display, battery card slot, and 1/4 screw hole.

- **Hot Shoe:** For attaching external accessories like microphones or lights.
- **Rotating Dial:** Used for mode selection and menu navigation.
- **Flash:** Built-in flash for low-light conditions.
- **Display:** 2.8-inch screen for viewing and menu interaction.
- **Battery Card Slot:** Compartment for battery and SD card.
- **1/4 Screw Hole:** Standard tripod mount.

SETUP

1. Battery Installation

1. Open the battery compartment cover located at the bottom of the camera.
2. Insert a fully charged lithium-polymer battery, ensuring the correct orientation.
3. Close the battery compartment cover securely.

2. SD Card Insertion

1. With the battery compartment open, locate the SD card slot.
2. Insert the 64GB SD card into the slot until it clicks into place. Ensure the card is facing the correct direction.
3. Close the battery compartment cover.

3. Charging the Battery

1. Connect the USB-C cable to the camera's USB-C port.
2. Connect the other end of the USB-C cable to a compatible USB power adapter (not included) or a computer.
3. The charging indicator light will illuminate. It will turn off or change color once charging is complete.

4. Initial Power On

1. Press and hold the power button until the camera display turns on.
2. Follow any on-screen prompts to set the date, time, and language.

OPERATING THE CAMERA

1. Basic Photography

- **Taking Photos:** Press the shutter button halfway to focus, then press fully to capture the image.
- **Zoom:** Use the zoom lever around the shutter button to adjust the 6X optical zoom.

6X Optical Zoom & Autofocus

Higher Quality Photography and Video



Our: Far & Macro Clear

Other Digital Zoom: Blurred

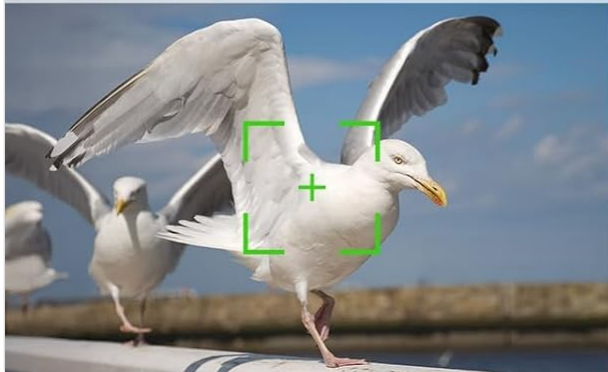


Image: A visual comparison demonstrating the clarity of 6X optical zoom and autofocus compared to digital zoom, using seagulls as an example.

2. Shooting Modes

The camera features a quick switching dial to select various shooting modes:

Selfie Camera Records Any Scene with You



Image: The camera's quick switching dial highlighting modes such as Auto, Program, Video, Timelapse, Slow Motion, Filter, Scene, and Portrait, along with examples of multiple filter choices.

- **Auto Mode:** For general photography with automatic settings.
- **Program Mode:** Allows some manual control over settings while maintaining automatic exposure.
- **Video Mode:** Records 5K 30FPS video.
- **Timelapse Video:** Captures a sequence of images over time and compiles them into a video.
- **Slow Motion:** Records video at a higher frame rate for slow-motion playback.
- **Filter:** Apply various creative filters to your photos.
- **Scene Mode:** Optimized settings for specific scenes (e.g., landscape, night, sports).
- **Portrait:** Enhances portrait shots.

3. Autofocus and Image Stabilization

The camera features fast autofocus for sharp images and built-in image stabilization to reduce blur from camera shake.

4. Using the Flash

The integrated flash provides illumination in low-light conditions. You can adjust flash settings (e.g., auto, fill-flash, red-eye reduction) through the camera menu.

Bright Flash, Night As Day
Easily Shoot HD Night Scenes/Portraits

MIC USB HD

Long-lasting Batteries
1050mAh*2

Exposure compensation -2.0~+2.0

Image: The camera's bright flash illuminating a night scene, demonstrating its capability for clear night shots and portraits. Also shows exposure compensation range.

5. Wi-Fi Connectivity

The camera supports Wi-Fi for easy transfer of images and videos to your smartphone or tablet, allowing for

quick sharing on social media platforms.

1. Access the Wi-Fi settings in the camera menu.
2. Enable Wi-Fi and connect to your desired device using the provided SSID and password.
3. Use a compatible app on your smartphone to transfer files.



Image: The camera display showing Wi-Fi connection details, with a smartphone screen illustrating image transfer and social media sharing.

6. Webcam Functionality

Connect the camera to a computer via USB-C to use it as a webcam for live streaming or video calls on platforms like YouTube or Facebook.

7. Playback and Review

Press the playback button (often labeled with a triangle icon) to view your captured photos and videos on the camera's display.

8. Menu Navigation

Use the directional buttons and the 'OK' button to navigate through the camera's menu system to adjust settings such as ISO, exposure, self-timer, and more.

MAINTENANCE

1. Cleaning

- **Lens:** Use a soft, lint-free cloth specifically designed for camera lenses. For stubborn smudges, use a small amount of lens cleaning solution.
- **Body:** Wipe the camera body with a soft, dry cloth. Do not use harsh chemicals or solvents.

2. Battery Care

- Charge batteries fully before use.
- Remove batteries from the camera if it will not be used for an extended period.
- Store batteries in a cool, dry place.

3. Storage

When not in use, store the camera in its protective case in a cool, dry environment, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Camera Does Not Turn On

- Ensure the battery is fully charged and correctly inserted.
- Try using the second included battery.

Poor Image Quality

- Check if the lens is clean and free of smudges.
- Ensure adequate lighting for your shot.
- Verify that the correct shooting mode is selected for the scene.
- Avoid excessive digital zoom; rely on the 6X optical zoom for clarity.

Wi-Fi Connection Issues

- Ensure Wi-Fi is enabled on both the camera and your connecting device.
- Verify the SSID and password are entered correctly.
- Move closer to the connecting device to improve signal strength.

Flash Not Firing

- Check flash settings in the camera menu to ensure it is enabled or set to auto.

- Ensure the battery has sufficient charge.

SPECIFICATIONS

Feature	Specification
Brand	Zostuic
Product Type	Compact Digital Camera
Effective Still Resolution	64 Megapixels
Video Resolution	5K (implied from title)
Optical Zoom	6X
Image Stabilization	Built-in Image Stabilizer
Special Features	Anti-shake, Autofocus, Wi-Fi, Webcam Function
Focal Length	6 millimeters
Aperture	f/2.8 (variable F2.8-F5.6)
Max Shutter Speed	1/4000 seconds
Exposure Control Type	Program, Aperture Priority, Shutter Priority, Manual, Automatic
Battery Type	Lithium-polymer (1050mAh x 2)
Compatible Devices	Smartphones, Tablets, Computers, External storage devices, Microphones, Lights
Water Resistance	Not waterproof
Image Format	16:9
Package Dimensions	17.3 x 14.9 x 10.1 cm

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or visit the official Zostuic website. Keep your proof of purchase for warranty claims.