

Vicco Tessa (Model 54625)

Vicco Tessa Desk with Storage Shelf Instruction Manual

Model: Tessa (Model 54625)

Brand: Vicco

INTRODUCTION

This manual provides essential information for the assembly, safe use, and maintenance of your Vicco Tessa Desk with Storage Shelf. Please read these instructions carefully before assembly and retain them for future reference. This desk is designed for home office use, offering a stable and functional workspace with integrated storage.

SAFETY INFORMATION

WARNING: TIPPING HAZARD! Unanchored furniture can tip over. To prevent this furniture from tipping, it must be securely anchored to the wall. Use appropriate fixing hardware for your specific wall type. If you have any questions, consult your local specialized dealer. Follow each step of the instructions carefully.

Ensure all components are present and undamaged before assembly. Do not use the product if any parts are missing or broken. Keep small parts and packaging materials away from children.

SETUP INSTRUCTIONS

The Vicco Tessa Desk requires assembly. Detailed assembly instructions and all necessary mounting materials are included in the package. Please follow the step-by-step guide provided with your product.

Assembly Steps:

- Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches. Verify that all parts listed in the assembly manual are present.
- Identify Hardware:** Separate and identify all screws, dowels, and other hardware components.
- Follow Illustrated Guide:** Refer to the included assembly manual for a visual, step-by-step guide. Each step will show which parts to connect and which hardware to use.
- Secure Connections:** Ensure all screws and fasteners are tightened securely, but do not overtighten to avoid damaging the material.
- Wall Anchoring:** As per the safety warning, securely anchor the desk to a suitable wall using the provided hardware.

This is crucial for stability and safety.



Image: Dimensions of the Vicco Tessa Desk. The desk measures 122.9 cm in width, 52 cm in depth, and 168.5 cm in height, including the storage unit.



Image: Various configurations of the Tessa Desk, highlighting its reversible design and integrated storage.

OPERATING INSTRUCTIONS

The Vicco Tessa Desk is designed for versatile use as a computer desk and workspace. Its integrated shelves and cabinet provide ample storage for office supplies, books, and personal items.

Key Features:

- **Spacious Work Surface:** The desk offers a generous area for your computer, documents, and other work essentials.
- **Integrated Shelving:** Multiple open shelves are available for organizing books, decorative items, or frequently accessed files.
- **Closed Storage:** A cabinet with doors provides discreet storage for items you wish to keep out of sight.
- **Reversible Design:** The desk can be assembled with the storage unit on either the left or right side to suit your room layout.



Image: The Tessa Desk set up in a room, showcasing its functional design with a laptop, lamp, and organized shelves.



Image: A detailed view of the desk's work surface and upper shelves, demonstrating storage capacity for books and office accessories.



Image: The interior of the desk's storage cabinet, revealing multiple shelves for organized storage of various items.

Your browser does not support the video tag.

Video: This video demonstrates the functionality and storage capabilities of a similar office desk with shelving and storage, highlighting its practical design for an organized workspace.

MAINTENANCE

To ensure the longevity and appearance of your Vicco Tessa Desk, follow these maintenance guidelines:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Spills:** Promptly clean up any spills to prevent staining or water damage to the particle board material.
- **Protection:** Use coasters for drinks and protective pads under hot items or objects that could scratch the surface.
- **Sunlight Exposure:** Avoid prolonged direct sunlight exposure to prevent fading or discoloration of the desk's finish.

- **Tighten Hardware:** Periodically check and tighten all screws and fasteners to maintain stability.

TROUBLESHOOTING

If you encounter any issues with your Vicco Tessa Desk, please refer to the following common solutions:

- **Instability/Wobbling:**
 - Ensure all assembly screws are fully tightened.
 - Verify that the desk is placed on a level surface.
 - Confirm that the wall anchoring system is correctly installed and secure.
- **Damaged Parts:** If any part arrived damaged or breaks during assembly/use, do not attempt to force it. Contact customer support for replacement parts.
- **Missing Hardware:** If you find that hardware is missing, check all packaging thoroughly. If still missing, contact customer support.

For issues not covered here, please contact Vicco customer support.

PRODUCT SPECIFICATIONS

Brand	Vicco
Model Name	Tessa
Model Number	54625
Color	White/Goldkraft Oak
Dimensions (D x W x H)	52 cm x 122.9 cm x 168.5 cm
Material	16 mm Particle Board (Aglomerado)
Weight	43.1 kg
Number of Shelves	3 (open) + 2 (closed within cabinet)
Assembly Required	Yes
Special Features	Integrated shelves, closed storage cabinet, reversible design, wall anchoring included.

WARRANTY INFORMATION

This Vicco product comes with a**Limited Warranty**. Details regarding the terms and conditions of this warranty are typically provided with your purchase documentation. Please retain your proof of purchase for any warranty claims. The warranty covers manufacturing defects under normal use. It does not cover damage resulting from improper assembly, misuse, accidents, or normal wear and tear.

CUSTOMER SUPPORT

For any questions, missing parts, or assistance with assembly or product issues, please contact Vicco customer support. Refer to your purchase documentation or the retailer's website for specific contact information. You can also visit the official Vicco store on Amazon for more information and product details:[Vicco Amazon Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question