

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Sinaopus](#) /
- › [Sinaopus 10L Dual Chamber Air Fryer Instruction Manual \(Model 9L-802TS\)](#)

## Sinaopus 9L-802TS

# Sinaopus 10L Dual Chamber Air Fryer Instruction Manual

Model: 9L-802TS

## INTRODUCTION

---

Thank you for choosing the Sinaopus 10L Dual Chamber Air Fryer. This appliance is designed to provide a healthy and efficient way to cook a variety of meals using 360° hot air circulation technology. Please read this manual thoroughly before operating the appliance to ensure safe and optimal performance. Keep this manual for future reference.



*Image: The Sinaopus 10L Dual Chamber Air Fryer, a black and silver appliance with two cooking baskets visible.*

## IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for assistance.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface, away from walls or other appliances to allow for proper air circulation.

## PRODUCT OVERVIEW

---

### Key Features:

- **Healthy Cooking Method:** Utilizes 360° hot air circulation to achieve crispy results with up to 85% less fat compared to traditional frying.
- **Inclined Color Touch Screen:** User-friendly interface for quick adjustment of time, temperature, and programs.
- **Large Viewing Window:** Illuminated window allows monitoring of cooking progress without opening the baskets.
- **10L Capacity with Removable Partition:** Flexible cooking with two separate 5L baskets or one large cooking space.
- **10 Smart Cooking Programs:** Pre-set programs for various foods including fish, fries, bacon, pastries, chicken, steak, vegetables, and shrimp.
- **Synchronous Heating Function:** Ensures both baskets finish cooking at the same time.
- **Non-Stick Coating:** Interior surfaces are non-stick for easy food release and cleaning.

### Components:

The Sinaopus 10L Dual Chamber Air Fryer consists of the main unit, two cooking baskets, two crisping plates, and a removable partition.



# EIN GERÄT ZWEI FUNKTIONEN

Sie können den Garstatus der Speisen jederzeit überprüfen, was intuitiver und bequemer ist.

## Bratkorb-Schublade



## Trennwand

Image: A visual representation of the air fryer's components, including the main unit, two cooking baskets, two crisping plates, and the removable partition.

## SETUP

- Unpack:** Carefully remove all packaging materials, stickers, and labels from the appliance.
- Clean:** Wash the cooking baskets and crisping plates with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.
- Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is at least 10 cm (4 inches) of clear space around the back and sides of the appliance to allow for proper ventilation. Do not place it directly against a wall or under cabinets.
- Power Connection:** Plug the power cord into a grounded wall outlet.
- First Use (Burn-in):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 180°C (350°F) to eliminate any manufacturing odors. A slight smell or smoke may occur, which is normal. Ensure the area is well-ventilated.

## OPERATING INSTRUCTIONS

### Control Panel Overview:

The air fryer features an intuitive inclined color touch screen. It displays temperature, time, and various cooking programs. There are separate controls for the left and right baskets, along with a 'Match Cook' function for synchronous cooking.



# TRANSPARENTES SICHTFENSTER

Sie können den Garstatus der Speisen jederzeit überprüfen,  
was intuitiver und bequemer ist.

*Image: A close-up of the air fryer's digital control panel, showing touch buttons for temperature, time, and various food presets like chips, wings, chicken, fish, roast, pizza, cake, egg tart, sweet potato, and defrost.*

### Basic Operation:

- 1. Prepare Food:** Place your food in the cooking baskets. Ensure not to overfill. For best results, food should be in a single layer or shaken periodically.
- 2. Insert Baskets:** Slide the cooking baskets firmly into the main unit.
- 3. Power On:** The display will illuminate.
- 4. Select Basket (Left/Right):** Press the 'LEFT' or 'RIGHT' button to select the basket you wish to program.
- 5. Adjust Temperature and Time:** Use the 'TEMP +/-' and 'TIME +/-' buttons to set your desired cooking

temperature and time.

6. **Start Cooking:** Press the 'START' button to begin the cooking process.
7. **Monitor Progress:** Use the illuminated viewing window to check on your food without interrupting the cooking cycle.
8. **Shake/Flip Food:** For even cooking, especially with smaller items, pull out the basket(s) and shake or flip the food halfway through the cooking time. The air fryer will pause automatically when a basket is removed and resume when reinserted.
9. **Finish:** The air fryer will beep when the cooking cycle is complete. Carefully remove the baskets and transfer food to a serving plate.

### **Using Preset Programs:**

The air fryer comes with 10 intelligent preset programs for common dishes. To use them:

1. Select 'LEFT' or 'RIGHT' basket.
2. Press the icon corresponding to your desired food (e.g., 'CHIPS', 'CHICKEN', 'FISH'). The air fryer will automatically set the optimal temperature and time.
3. Press 'START'. You can manually adjust the time and temperature even after selecting a preset if needed.

# 10 intelligente Kochprogramme



Image: The air fryer displaying its 10 intelligent cooking programs on the touch screen, with various food items like fries and chicken in the baskets.

## Dual Chamber and Synchronous Cooking:

The 10L capacity can be used as two independent 5L zones or combined into one large zone by removing the central partition.

- **Independent Cooking:** Place different foods in each basket and set separate temperatures and times.
- **Match Cook Function:** If you are cooking the same food in both baskets and want them to finish simultaneously, set the desired time and temperature for one basket, then press 'Match Cook'. This will apply the same settings to the other basket.
- **Large Capacity Cooking:** To use the full 10L capacity, remove the central partition. This is ideal for larger items like a whole chicken. Ensure the partition is securely removed before cooking.

# 10L FASSUNGSVERMÖGEN

Das großzügige Fassungsvermögen macht das Kochen effizienter.



Image: The air fryer illustrating its 10L capacity, showing two 5L compartments filled with different foods like chicken nuggets and fries.

## CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
2. **Clean Baskets and Crisping Plates:** The cooking baskets and crisping plates have a non-stick coating. Wash them with hot water, dish soap, and a non-abrasive sponge. They are also dishwasher safe.
3. **Clean Removable Partition:** Wash the partition with hot water and dish soap.
4. **Clean Interior:** Wipe the interior of the appliance with a damp cloth. For stubborn food residue, use a mild detergent. Avoid abrasive cleaners or metal scouring pads.
5. **Clean Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water or any other liquid.
6. **Storage:** Ensure all parts are clean and dry before storing the appliance. Store it in a cool, dry place.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in. Power outlet is not working.	Ensure the power cord is securely plugged into a grounded outlet. Check if the outlet is functional by plugging in another appliance.
Food is not cooked evenly.	Baskets are overloaded. Food was not shaken or flipped. Temperature or time settings are incorrect.	Do not overload baskets; cook in smaller batches if necessary. Shake or flip food halfway through cooking. Adjust temperature and time as needed.
White smoke coming from the appliance.	Grease residue from previous use. Fatty food being cooked.	Clean the baskets and crisping plates thoroughly after each use. For fatty foods, place a piece of aluminum foil at the bottom of the basket to catch excess grease.
Food is not crispy.	Too much moisture in food. Not enough oil (if required). Temperature too low or cooking time too short.	Pat food dry before air frying. Lightly spray or brush food with oil for crispier results. Increase temperature or cooking time.

## SPECIFICATIONS

<b>Brand:</b>	Sinaopus
<b>Model Number:</b>	9L-802TS (AF-DH-901A-W)
<b>Color:</b>	Black
<b>Capacity:</b>	10 Liters (2 x 5L chambers)
<b>Power:</b>	2200 Watts
<b>Material:</b>	Stainless Steel
<b>Product Dimensions (L x W x H):</b>	40.7 x 47.2 x 38.5 cm
<b>Item Weight:</b>	9 Kilograms
<b>Special Features:</b>	Dual Zone Functions, Synchronous Heating Function, LED Touch Screen, Viewing Window, Removable Partition



# Parameter

Heißluftfritteuse: 47.2X40.7x38.5 cm  
Kapazität: 4.5x2=9L



Alle Angaben sind ca.-Maße

*Image: A diagram showing the dimensions of the Sinaopus 10L Dual Chamber Air Fryer, with measurements in centimeters.*

## WARRANTY AND SUPPORT

Sinaopus products are manufactured to high-quality standards. For any questions, concerns, or warranty claims, please contact Sinaopus customer support. Please refer to your purchase documentation for specific warranty terms and contact information.

For further assistance, you may visit the manufacturer's website or contact the retailer where the product was purchased.