

Auertech 7750AT-AU

Auertech Portable Washing Machine User Manual

Model: 7750AT-AU

INTRODUCTION

Thank you for choosing the Auertech Portable Washing Machine. This fully automatic washing machine is designed for convenience and efficiency, making it ideal for apartments, RVs, dorms, and homes with limited space. With its versatile programs and user-friendly features, you can achieve clean laundry with ease.

This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your new washing machine. Please read it thoroughly before first use and keep it for future reference.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the washing machine is connected to a properly grounded outlet.
- Do not operate the machine if the power cord or plug is damaged.
- Keep children and pets away from the machine during operation. The built-in child lock feature helps prevent accidental changes to settings.
- Do not wash items that are soiled with flammable or explosive substances.
- Unplug the machine from the power supply before cleaning or performing any maintenance.
- A small amount of water may remain in some machines due to factory testing procedures. This is normal and does not indicate a defect.

WHAT'S IN THE BOX

Upon unpacking, please verify that all the following components are included:

- Auertech Portable Washing Machine
- Bottom Cover
- Inlet Hose
- Drain Hose

- Faucet Adapter
- User Manual
- Power Cord

SETUP

Follow these steps to set up your Auertech Portable Washing Machine:

1. Unpacking and Placement

Carefully remove the washing machine from its packaging. Place the machine on a flat, stable surface. The adjustable feet can be used to ensure stability on uneven floors.



Image: Front view of the Auertech Portable Washing Machine, showing its compact design.

2. Connecting the Water Inlet Hose

Connect the water inlet hose to a suitable faucet. The faucet adapter is provided for compatibility with various faucet types. Ensure a secure connection to prevent leaks.

Your browser does not support the video tag.

Video: Demonstrates how to connect the water inlet hose to a faucet and then to the washing machine. This video is titled "Auertech Portable Washer Easy To Use" and is provided by the seller.

After connecting to the faucet, connect the other end of the inlet hose to the water inlet port on the back of the washing machine. Tighten securely by hand.

3. Connecting the Drain Hose

Attach the drain hose to the drain outlet on the washing machine. Position the other end of the drain hose into a sink or drain pipe, ensuring it is securely placed to prevent water overflow during drainage.

4. Power Connection

Plug the power cord into a standard 110V/60Hz electrical outlet. Ensure the outlet is properly grounded.

OPERATING INSTRUCTIONS

Your Auertech Portable Washing Machine offers a variety of settings to suit your laundry needs.

1. Loading Laundry

Open the top lid and place your clothes into the stainless steel inner drum. The machine has a capacity of 1.5 cu.ft and can wash up to 18 lbs of clothes. Do not overload the machine.

The stainless steel inner drum features a unique design for efficient cleaning with gentle care for fabrics.

2. Adding Detergent

Add the appropriate amount of laundry detergent directly into the drum with the clothes, or into the designated dispenser if available (refer to specific model features).

3. Selecting Water Level

The machine features 4 adjustable water levels. Select the water level appropriate for your load size to ensure optimal water usage and cleaning efficiency.

4. Choosing a Washing Program

Your washing machine comes with 7 customizable washing programs:

- **Normal:** For everyday laundry.
- **Heavy:** For heavily soiled items like jeans or work clothes.
- **Standard:** A balanced cycle for mixed loads.
- **Quick Wash:** For lightly soiled items that need a fast cycle (approx. 26 mins).
- **Baby Care:** Gentle cycle for delicate baby clothes.
- **Tub Air Dry:** For drying the tub after use.
- **Tub Clean:** For cleaning the washing machine tub.

Use the control panel to select your desired program. Press the "Procedure" button to cycle through the available programs.

5. Child Lock Feature

To activate the child lock, press and hold the "Procedure" and "Water Level Program" buttons simultaneously for 3 seconds. This will lock the control panel to prevent accidental changes during operation. Repeat the process to deactivate.

6. Starting the Wash Cycle

Once the program and water level are selected, press the "Start/Pause" button to begin the wash cycle. The machine will automatically proceed through the wash, rinse, and spin phases.

The powerful 380W motor ensures efficient cleaning and can quickly spin out up to 95% of the water from your clothes, reducing drying time.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

1. Cleaning the Detachable Lint Filter

The washing machine is equipped with a detachable lint filter that collects residue such as wire chips and hair. It is recommended to clean this filter regularly to maintain washing efficiency and prevent blockages.

- Locate the lint filter inside the drum.
- Carefully remove the filter.
- Open the filter and remove any accumulated lint or debris.
- Rinse the filter under running water.
- Reinsert the clean filter securely into its position.

2. Tub Cleaning

Use the "Tub Clean" program periodically to clean the washing machine tub and prevent residue buildup, ensuring a fresh and clean washing machine for every use.

3. Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

4. Storage

If storing the machine for an extended period, ensure it is completely drained and dry. Unplug the power cord and store the hoses neatly.

TROUBLESHOOTING

If you encounter issues with your washing machine, please refer to the following common problems and solutions before contacting customer support.

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; Lid not closed properly; Child lock activated.	Check power connection; Ensure lid is fully closed; Deactivate child lock.
Water leakage	Hoses not securely connected; Drain hose improperly positioned.	Check and tighten all hose connections; Ensure drain hose is properly placed in sink/drain.

Problem	Possible Cause	Solution
Clothes not clean	Overloaded machine; Insufficient detergent; Incorrect program/water level.	Reduce load size; Use appropriate amount of detergent; Select suitable program and water level.
Excessive vibration/noise	Machine not level; Load unbalanced.	Adjust leveling legs; Redistribute clothes evenly in the drum.

SPECIFICATIONS

Feature	Detail
Brand	Auertech
Model Number	7750AT-AU
Capacity	1.5 Cubic Feet
Dimensions (LxWxH)	19" x 19" x 33"
Item Weight	46 Pounds
Voltage	120 Volts
Max Spin Speed	1600 RPM
Material Type	Plastic, Stainless Steel
Control Console	Touch
Access Location	Top Load
Special Features	Adjustable Leveling Legs, Child Lock, Drum Clean, Protective Rat Mesh

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Auertech website. Keep your purchase receipt for warranty claims.

If you require further assistance or have questions not covered in this manual, please contact Auertech customer service.

© 2025 Auertech. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question