



Manuals.plus /

› TopMade /

› TopMade MF76 MagSafe Wallet User Manual with Apple Find My

TopMade MF76

TopMade MF76 MagSafe Wallet User Manual


Model: MF76 | Brand: TopMade

1. INTRODUCTION

Thank you for choosing the TopMade MF76 MagSafe Wallet. This multi-functional accessory is designed to enhance your iPhone experience by combining a secure card holder, a money clip, and a versatile stand, all while integrating with Apple's Find My network for enhanced security. This manual provides essential information for setup, operation, maintenance, and troubleshooting to ensure optimal use of your device.

2. PRODUCT OVERVIEW

The TopMade MF76 MagSafe Wallet features a robust magnetic attachment, allowing it to securely connect to your iPhone 12 series or newer, or MagSafe-compatible cases. It offers smart storage for up to 8 cards and cash, along with a multi-view stand for hands-free use. Integrated Apple Find My functionality provides location tracking and alerts.

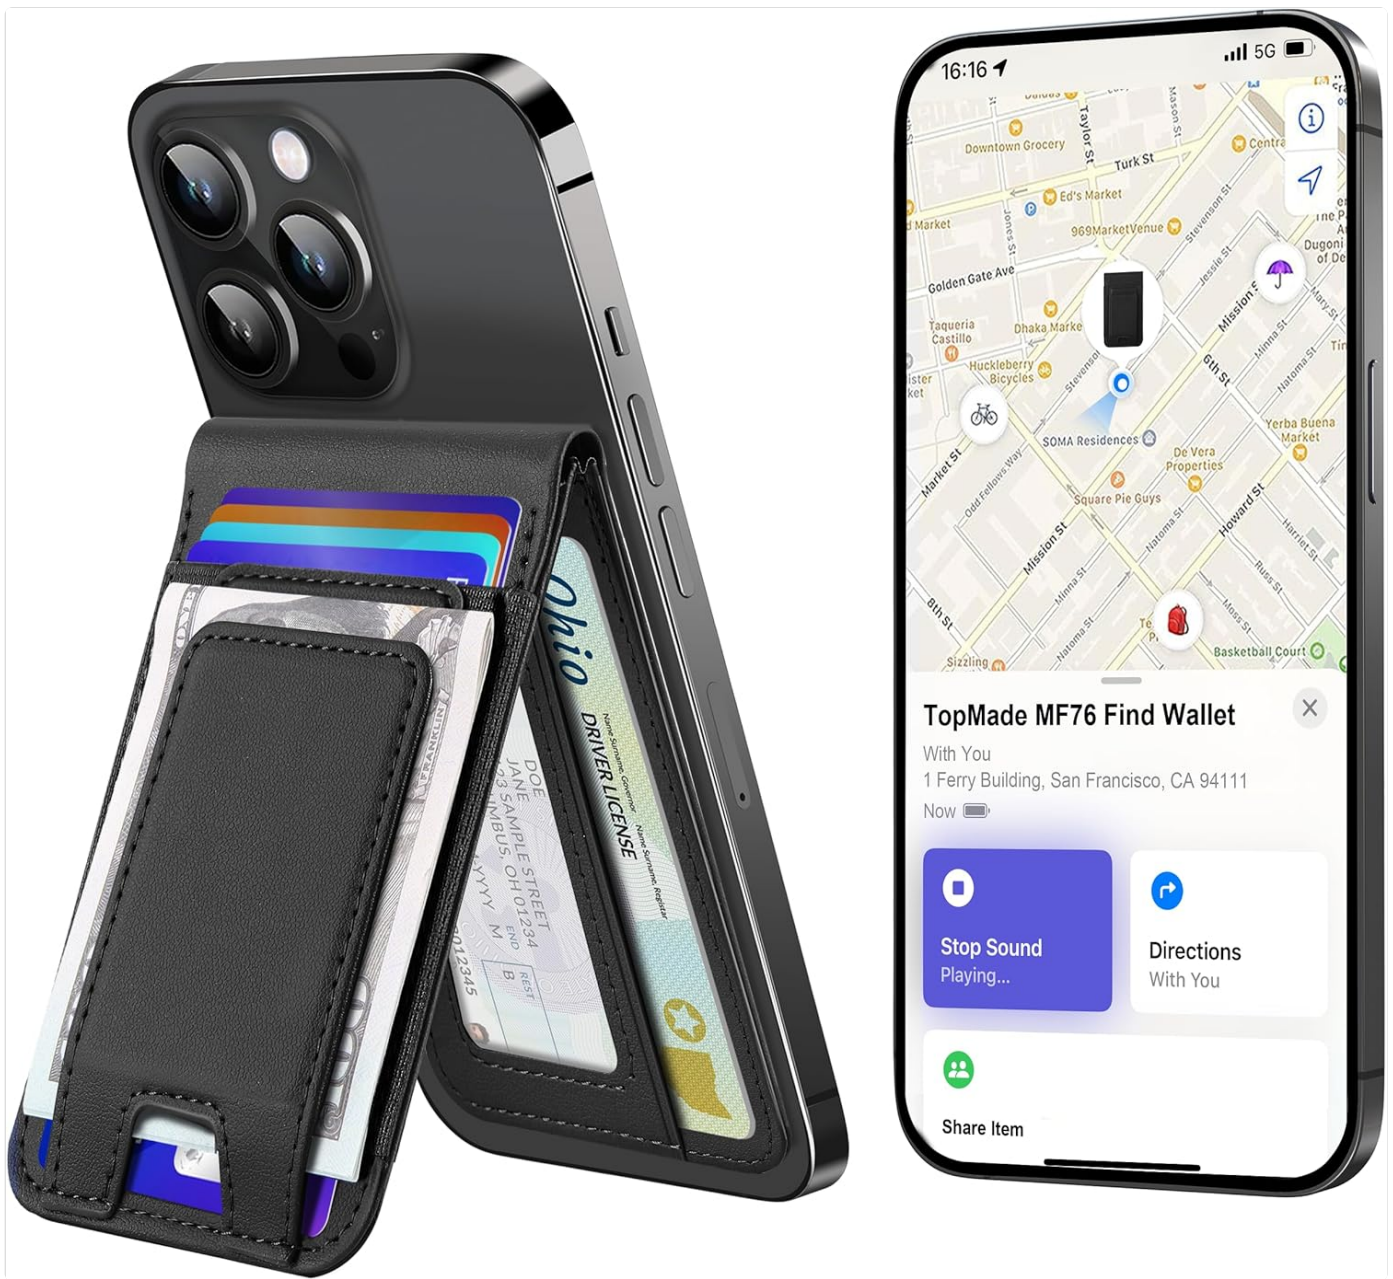

The TopMade MF76 MagSafe Wallet securely attached to an iPhone, with the Apple Find My app showing its location.

2.1. Strong Magnetic Attachment

The wallet features upgraded magnets with up to 4200 Gs of magnetic force, ensuring a secure connection to your iPhone. This prevents accidental detachment during daily use.

Strongest Magnetic Force

6X Stronger than other magnetic wallets



4200Gs



Magnetic Strength

TopMade

4200Gs

Others

700Gs

Note: Gs is the unit of magnetic force. The higher the Gauss, the stronger the magnetic force.

Visual representation of the strong magnetic force (4200 Gs) of the TopMade MF76 MagSafe Wallet.

3. SETUP

3.1. Pairing with Apple Find My

The TopMade MF76 Wallet is fully compatible with the Apple Find My network. Follow these steps to pair your wallet with your iPhone:

1. Press the power button on the wallet once to turn it on.
2. Ensure Bluetooth is enabled on your iPhone.
3. Open the 'Find My' app on your iPhone.
4. Navigate to 'Items' > 'Add New Item' > 'Other Supported Item'.
5. Follow the on-screen prompts to connect your TopMade MF76 Wallet.
6. Activate 'Lost Mode' and 'Left Behind Notifications' within the Find My app settings for your wallet.

Note: Android devices are not supported for Find My functionality.

Works with Apple Find My

Global reach, accuracy and security



Works with
Apple Find My

Note: Android devices are not supported.

The Apple Find My app displaying the TopMade MF76 Wallet, ready for connection.

3.2. Charging the Wallet

The wallet tracker supports wireless charging only. It is compatible with all standard wireless chargers and magnetic wireless power banks. A single charge can provide up to 4 months of use for the Find My functions. The wireless charger

is not included in the package.

Long-Lasting Battery

Supports magnetic wireless charging and lasts 4 months on a single charge



- Charge Complete
- Charging



Rechargeable



Long Battery Life



Note:

1. Only power the Find My functions, not a power bank for phone.
2. Charger is not included in the package.



Special charging cable,
easy losing

The TopMade MF76 MagSafe Wallet undergoing wireless charging, indicating its long-lasting battery.

4. OPERATING INSTRUCTIONS

4.1. Card and Cash Storage

The wallet features 3 card slots and a strong magnetic money clip. It can securely hold 1-8 cards and some cash. The thumb slot design allows for quick access to your most frequently used cards, and a clear window is provided for displaying your ID.

Smart Card Storage

Easily to holds 8 cards and some cash



Elastic Band Design



Magnetic Money Clip



1 Card

Clear ID Window

Detailed view of the smart card storage and magnetic money clip features of the wallet.

4.2. Using as a Multi-view Stand

The strong hinge allows you to position your iPhone in either portrait or landscape orientation, with adjustable angles between 0° and 180°. This feature is ideal for watching videos, making video calls, or browsing the web hands-free.

Multi-view Stand Frees Up Your Hands

Adjust your most comfortable viewing angle




The multi-view stand functionality demonstrated with an iPhone in both portrait and landscape modes.

4.3. Locating Your Wallet with Find My

If your wallet is within Bluetooth range (up to 164 feet / 50 meters), you can tap the 'Play Sound' option in the 'Find My' app or ask Siri to activate the built-in speaker to locate it. If the wallet is out of Bluetooth range, your iPhone will receive a

notification with its last known location. You can also activate 'Lost Mode' to leverage the Apple Find My network for broader tracking.

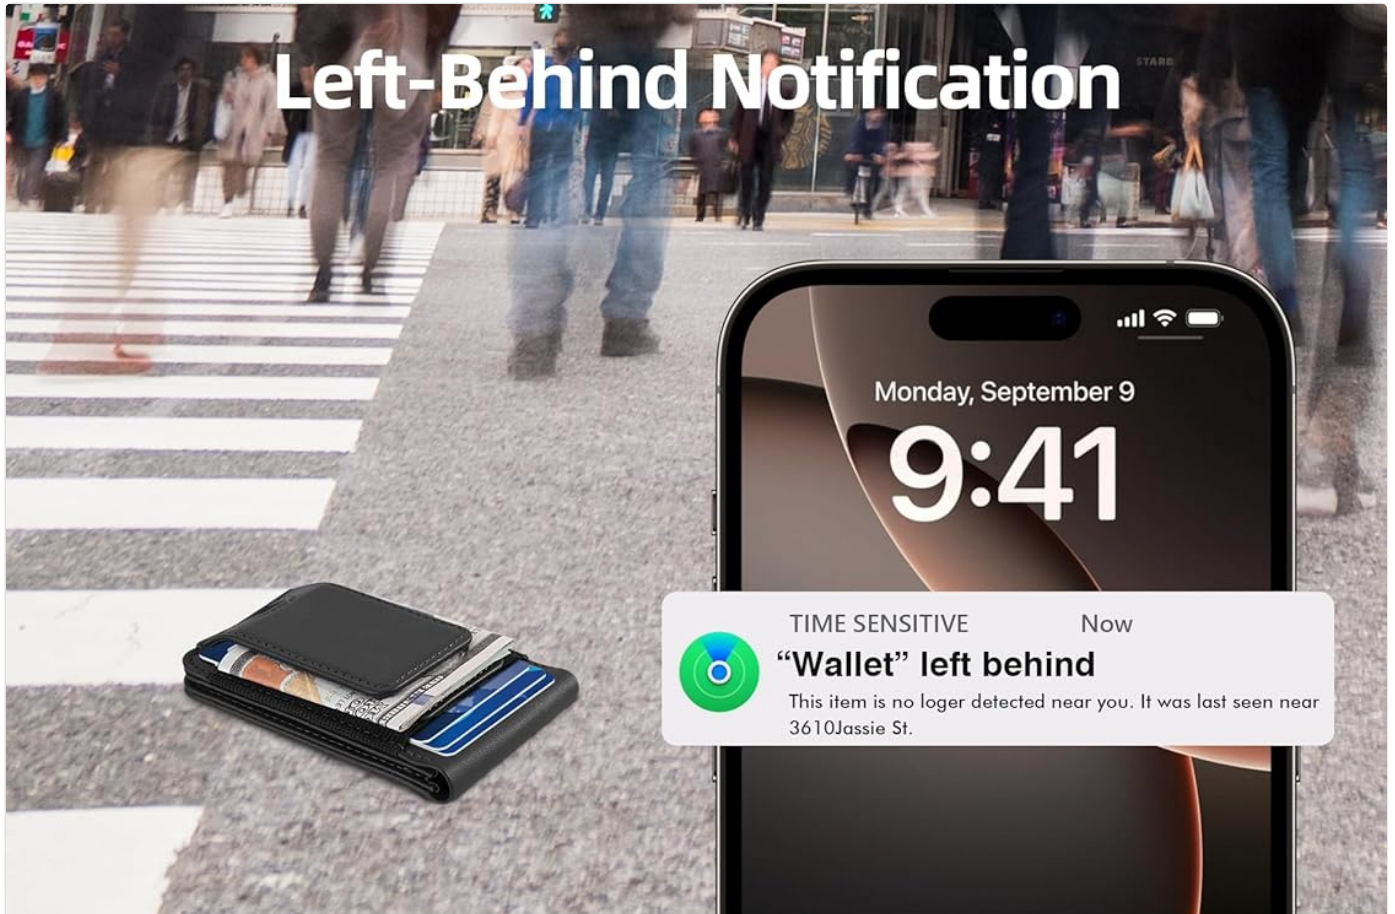

Illustrating the 'Left-Behind Notification' and 'Play Sound' features of the Apple Find My app for the wallet.

4.4. Security Features

The TopMade MF76 wallet blocks RFID signals at 13.56 MHz or higher, protecting your credit cards from unauthorized scanners. Its metal mesh lining also safeguards your cards from degaussing and demagnetization.



Security & Convenient

Secure card information and easy access



The wallet's security features, including RFID blocking and convenient card access.

5. COMPATIBILITY

The TopMade MF76 MagSafe Wallet is designed for iPhone 17/16/15/14/13/12 series and MagSafe-compatible cases. It is compatible with models such as iPhone 17 Pro Max/17 Pro/17 Air/17, iPhone 16 Pro Max/16 Plus/16 Pro/16, iPhone 15/15 Pro/15 Pro Max/15 Plus/14 Pro Max/14 Plus/14 Pro/14, iPhone 13 Pro Max/13 Pro/13, and iPhone 12/12 Pro/12 Pro Max.

Not compatible with iPhone 13/12 mini and non-magnetic cases.

6. MAINTENANCE

To ensure the longevity and appearance of your TopMade MF76 MagSafe Wallet, follow these maintenance guidelines:

- Clean the wallet with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- Keep the wallet away from extreme temperatures and direct sunlight to prevent material degradation.
- Avoid overfilling the card slots or money clip, as this can stretch the material and weaken the magnetic closure over time.
- Regularly check the magnetic attachment area on your iPhone and the wallet for any debris that might interfere with the magnetic connection.

7. TROUBLESHOOTING (FAQ)

7.1. How to quickly find your lost wallet using the 'Find My' feature?

- Within a Bluetooth range of up to 164 feet (50 meters), tap the 'Play Sound' option on the 'Find My' app or ask Siri to trigger the built-in speaker to locate your wallet.
- When the wallet tracker is out of Bluetooth range, your iPhone will receive a notification with the last known location. You can also activate 'Lost Mode' on your wallet finder to locate your wallet with the help of the Apple Find My network.

7.2. How to charge the wallet?

The TopMade MF76 Wallet supports wireless charging only. It is compatible with all wireless chargers and magnetic wireless power banks. One charge can provide up to 4 months of use for the Find My functions. The wireless charger is not included in the package.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions	4.09 x 2.6 x 0.71 inches
Item Weight	3.6 ounces
Model Number	MF76
Battery	1 Lithium Ion battery (included)
Special Features	Long-Lasting Rechargeable Battery, Magnetic Money Clip, Multi-view Adjustable Stand, Slim, Lightweight, RFID Blocking, Pocket Friendly, Works with Apple Find My App
Form Factor	MagSafe Wallet with Money Clip
Color	Black
Manufacturer	TopMade

9. WARRANTY AND SUPPORT

Your TopMade MF76 MagSafe Wallet comes with:

- 12 months of full technical support.
- 24 hours friendly customer service.

For any inquiries or support needs, please refer to the contact information provided with your product packaging or visit the official TopMade website.