

manuals.plus /

› [Hikiddo](#) /

› [Hikiddo 24V Ride-On Toy Car Instruction Manual \(Model B0F1F98P45\)](#)

Hikiddo B0F1F98P45

Hikiddo 24V Ride-On Toy Car Instruction Manual

Model: B0F1F98P45 | Brand: Hikiddo

INTRODUCTION

Thank you for choosing the Hikiddo 24V Ride-On Toy Car. This manual provides essential information for the safe assembly, operation, and maintenance of your new electric vehicle. Please read all instructions carefully before use and retain this manual for future reference.



Image: Front view of the Hikiddo 24V Ride-On Toy Car in purple, showcasing its robust design and bright headlights.

SETUP

1. Unboxing and Parts Identification

Carefully remove all components from the packaging. Verify that all parts listed in the packing list are present and undamaged. If any parts are missing or damaged, contact customer support immediately.

2. Assembly Instructions

Follow the steps outlined in the assembly guide video to correctly put together your ride-on car. Ensure all screws and fasteners are securely tightened before proceeding.

Video: Detailed assembly guide for the 24V Ride-On Car, demonstrating step-by-step installation of components.

3. Battery Connection

Locate the battery compartment, typically under the seat. Connect the red battery terminal to the corresponding red wire and the black terminal to the black wire. Ensure connections are firm to prevent power interruptions.

1. Power On/Off

To power on the vehicle, press the 'Start' button on the dashboard. To power off, press and hold the 'Stop' button.

2. Driving Modes

The Hikiddo 24V Ride-On Toy Car offers two driving modes:

- **Manual Driving Mode:** The child operates the vehicle using the steering wheel and foot pedal.
- **Parental Remote Control Mode:** An adult can control the vehicle's movement (forward, backward, left, right) and speed using the 2.4G remote control. This mode overrides manual operation for safety.



Image: A parent's hands holding the white remote control, with two ride-on cars (green and pink) in the background, demonstrating parental control functionality.

3. Speed Settings

The vehicle features 3 adjustable speeds. Use the speed selection buttons on the dashboard or remote control to choose the desired speed. Always start at the lowest speed for new users.

4. Entertainment Features

The dashboard includes built-in wireless connectivity, MP3, and music playback options. Connect your device via Bluetooth to play music through the vehicle's speakers.



Image: Close-up of the ride-on car's dashboard, showing the media console and a smartphone connected via Bluetooth, playing music.

5. Safety Features

The vehicle is equipped with a safety belt, four-wheel suspension, and a soft start function for a secure and comfortable ride. Always ensure the safety belt is fastened before operation.

Child-Friendly Design

Seat harnesses and locking doors keep kids safe



Image: A child securing the seatbelt in the ride-on car, highlighting the child-friendly design and safety features.

Soft Start Technology

Guaranteeing your kid's safety



Uniform Deceleration

Braking Time: $\leq 0.5S$



Image: A side view of the ride-on car in motion, illustrating the smooth acceleration provided by the soft start technology.

MAINTENANCE

1. Charging the Battery

Use only the charger provided with the vehicle. Plug the charger into the charging port (usually located on the dashboard or under the seat) and then into a standard wall outlet. The charging indicator will show when the battery is charging and when it is full. Do not overcharge the battery.

2. Cleaning

Clean the vehicle with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these can damage the plastic and electronic components. Avoid spraying water directly onto the vehicle.

3. Storage

Store the vehicle in a dry, cool place away from direct sunlight and moisture. If storing for an extended period, ensure the battery is fully charged and disconnect it from the vehicle to prolong its lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Vehicle does not move	Battery not connected or low charge; loose wiring; motor issue.	Check battery connections and charge; inspect wiring; contact support if motor is faulty.
Remote control not working	Remote battery low; remote not paired; interference.	Replace remote batteries; re-pair remote (refer to remote manual); move away from interference sources.
Vehicle runs slowly	Low battery charge; overloaded vehicle; rough terrain.	Charge battery fully; ensure vehicle is not overloaded; operate on smoother surfaces.

If you encounter issues not listed here or if the suggested solutions do not resolve the problem, please contact Hikiddo customer support.

SPECIFICATIONS


- **Product Dimensions:** 39.4 x 24.8 x 25.6 inches
- **Recommended Age:** 3 - 5 years
- **Motor:** 2 x 200W
- **Battery:** 24V
- **Features:** Remote Control, 3 Speeds, Bluetooth, MP3, Music, Safety Belt, Four-Wheel Suspension, Soft Start
- **Certifications:** ASTM, CPSIA

WARRANTY AND SUPPORT

Hikiddo products are designed for quality and durability. For warranty information or technical assistance, please visit the official Hikiddo store or contact their customer service directly. Keep your purchase receipt as proof of purchase.

Visit the [Hikiddo Store](#) for more information.

Related Documents - B0F1F98P45

	<p>Hikiddo Kids Electric ATV 4 Wheeler 24V Ride-On Toy - Installation and Operating Instructions</p> <p>Comprehensive installation, operating, safety, and troubleshooting guide for the Hikiddo Kids 24V Electric ATV 4 Wheeler ride-on toy. Includes specifications, parts list, and charging instructions.</p>
---	---