



[Manuals.plus](#) /

> [GLOGLOW](#) /

> GLOGLOW 3-in-1 Breakfast Station User Manual (Model HEEPDDo1trf6k5hu-12)

GLOGLOW HEEPDDo1trf6k5hu-12

GLOGLOW 3-in-1 Breakfast Station User Manual

Model: HEEPDDo1trf6k5hu-12

1. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, drapes, walls, and the like, when in operation.
- Do not place any non-food items in the toaster oven.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place paper, cardboard, plastic, or other flammable materials in the oven.

2. PRODUCT OVERVIEW

The GLOGLOW 3-in-1 Breakfast Station is a compact appliance designed to prepare coffee, toast, and griddle-cooked foods simultaneously. It features a coffee maker, a 4-slice toaster oven, and a non-stick griddle.



Figure 2.1: Overall view of the GLOGLOW 3-in-1 Breakfast Station, showcasing its integrated coffee maker, toaster oven, and top griddle.

Components:

- **Coffee Maker:** Integrated brewing system with a carafe for hot beverages.
- **Toaster Oven:** 4-slice capacity for baking, toasting, and reheating. Includes baking pan and wire rack.
- **Non-Stick Griddle:** Top cooking surface ideal for eggs, pancakes, and other breakfast items. Features a glass lid.
- **Control Panel:** Dials for temperature and time, and a switch for the coffee maker.



Figure 2.2: Detailed view of the control panel, showing the coffee maker switch, temperature dial, and timer dial.

3. SETUP

1. **Unpack:** Carefully remove all packaging materials, including any protective films or inserts from the oven and griddle.
2. **Placement:** Place the breakfast station on a stable, level, heat-resistant surface, away from walls and flammable materials. Ensure adequate ventilation around the unit.
3. **Initial Cleaning:** Before first use, wash the coffee carafe, filter basket, griddle lid, baking pan, and wire rack in warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the unit with a damp cloth.
4. **Power Connection:** Ensure the voltage of your power outlet matches the appliance's requirements (110V US Plug).

Plug the power cord into a grounded electrical outlet.

5. **First Use Cycle (Oven/Griddle):** To eliminate any manufacturing odors, operate the toaster oven and griddle empty for approximately 15 minutes at maximum temperature. Ensure the area is well-ventilated during this process.
6. **First Use Cycle (Coffee Maker):** Run a cycle with only water through the coffee maker to clean the internal components. Discard the water.



Figure 3.1: View of the removable components, such as the griddle lid and coffee carafe, for initial cleaning.

4. OPERATING INSTRUCTIONS

4.1. Using the Coffee Maker

1. Open the coffee maker lid and fill the water reservoir with cold water up to the desired level. Do not exceed the MAX fill line.
2. Place a paper filter (or reusable filter, if included) into the filter basket. Add the desired amount of ground coffee.
3. Close the coffee maker lid securely.
4. Place the empty glass carafe on the warming plate.
5. Flip the 'Coffee maker' switch to the 'On' position. The indicator light will illuminate, and brewing will begin.
6. Once brewing is complete, the coffee maker will automatically switch to a 'Keep Warm' function.
7. To turn off, flip the 'Coffee maker' switch to 'Off'.

4.2. Using the Toaster Oven

1. Open the oven door. Place food items on the wire rack or baking pan. Ensure food does not touch the heating

elements.

2. Close the oven door.
3. Turn the 'Temp' dial to the desired temperature setting.
4. Turn the 'Time' dial to the desired cooking duration. The oven will begin heating, and the power indicator light will turn on.
5. When the timer reaches zero, the oven will automatically turn off, and a bell will sound.
6. Carefully remove cooked food using oven mitts.



Figure 4.1: The toaster oven interior, showing the removable baking pan and wire rack for food placement.

4.3. Using the Non-Stick Griddle

The griddle utilizes the heat generated by the toaster oven. It does not have a separate temperature control.

1. Ensure the griddle surface is clean and dry.
2. Place the griddle lid on top of the griddle surface.
3. Turn on the toaster oven by setting the 'Temp' and 'Time' dials as described in section 4.2. The griddle will heat up as the oven heats.
4. Allow the griddle to preheat for 5-10 minutes.
5. Carefully lift the griddle lid and place food items (e.g., eggs, pancakes, bacon) directly onto the non-stick surface.
6. Monitor food cooking and adjust oven temperature/time as needed.
7. Once cooking is complete, turn off the toaster oven. Carefully remove food and allow the griddle to cool before cleaning.



Figure 4.2: Close-up view of the non-stick griddle surface, suitable for cooking various breakfast foods.

5. MAINTENANCE AND CLEANING

Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.

5.1. Coffee Maker Cleaning

- Wash the glass carafe and filter basket in warm, soapy water. These parts are generally dishwasher safe (top rack only), but hand washing is recommended for longevity.
- Wipe the exterior of the coffee maker with a damp cloth. Do not immerse the unit in water.
- **Descaling:** Periodically descale the coffee maker to remove mineral deposits. Fill the water reservoir with a mixture of equal parts water and white vinegar. Run a brewing cycle. After the cycle, run two more cycles with clean water to rinse thoroughly.

5.2. Toaster Oven and Griddle Cleaning

- Remove the wire rack, baking pan, and griddle lid. Wash these parts in warm, soapy water. They are not dishwasher safe.
- Wipe the interior of the toaster oven with a damp cloth and mild detergent. For stubborn stains, a non-abrasive cleaner can be used. Ensure all cleaner residue is removed.
- Clean the non-stick griddle surface with a soft sponge and warm, soapy water. Do not use abrasive scrubbers or metal utensils, as this can damage the non-stick coating.
- Wipe the exterior of the unit with a damp cloth.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; coffee maker switch or oven timer not set.	Ensure the unit is securely plugged into a working outlet. Check the coffee maker switch is 'On' or the oven timer is set.
Coffee is not brewing.	No water in reservoir; coffee maker switch is 'Off'; clogged filter.	Fill water reservoir. Turn coffee maker switch 'On'. Clean filter basket and ensure no clogs.
Toaster oven not heating.	Temperature dial not set; timer not set.	Ensure both the 'Temp' and 'Time' dials are set to desired settings.
Griddle not getting hot enough.	Oven temperature set too low; insufficient preheating time.	Increase the oven 'Temp' dial setting. Allow 5-10 minutes for preheating.
Smoke or unusual odor during first use.	Manufacturing residues burning off.	This is normal for initial use. Ensure good ventilation. If it persists after 15-20 minutes, discontinue use and contact support.

7. SPECIFICATIONS

Feature	Specification
Brand	GLOGLOW
Model Number	HEEPDDo1trf6k5hu-12
Product Dimensions (D x W x H)	7.48" x 7.68" x 7.48" (190mm x 455mm x 195mm)
Capacity (Oven)	10 Liters
Wattage	1050 watts
Material	Plastic, Stainless Steel
Control Type	Dials (Temperature, Time), Switch (Coffee Maker)
Power Source	Electric (110V US Plug)



Figure 7.1: Dimensional diagram of the breakfast station, indicating width, depth, and height.

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact GLOGLOW customer service. Keep your purchase receipt as proof of purchase.

Contact information for GLOGLOW can typically be found on the product packaging or on the official GLOGLOW website.