

tessler TXTS-2591

Tessler 4-Slice Toaster with Touch Screen Control (Model TXTS-2591) Instruction Manual

Model: TXTS-2591 | Brand: Tessler

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Do not operate unattended.
- Do not use the appliance in a garage or under a wall cabinet.

SAVE THESE INSTRUCTIONS

2. PRODUCT OVERVIEW

2.1 Components



Figure 1: Tessler 4-Slice Toaster with Touch Screen Control (Black model shown).

The Tessler 4-Slice Toaster features a sleek design with a large touch screen interface for intuitive control. It includes two long, wide slots to accommodate various bread types.

- **Toasting Slots:** Two extra-long, 1.5-inch wide slots for various bread sizes.
- **Touch Screen Display:** Intuitive interface for selecting settings and monitoring toasting progress.
- **Toast Lever:** Manual lever to lower and raise bread into the slots.
- **Removable Crumb Tray:** Located at the bottom for easy cleaning.
- **Cord Storage:** Integrated into the base for tidy storage.

2.2 Key Features

- **Intuitive Touchscreen Display:** Large panel showing cooking time and settings.
- **Customizable Toasting Options:** 6 browning levels and 6 bread types (White, Bagel, Gluten, Pastry, Muffin, Waffle).
- **Extra-Wide Slots:** 1.5-inch wide, long slots for various bread sizes.
- **Convenient Functions:** Defrost, Reheat, and Cancel options.
- **Memory Function ('Like'):** Records preferred settings for quick access.
- **Easy Cleanup:** Removable crumb tray.

3. SETUP

1. **Unpack:** Carefully remove the toaster and all packaging materials from the box.

2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials.
3. **Power Connection:** Plug the power cord into a standard 120V AC electrical outlet. The touch screen will illuminate.
4. **First Use (Burn-off):** It is recommended to operate the toaster empty on the highest browning level for a few minutes to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal. Ensure good ventilation.

4. OPERATING INSTRUCTIONS

4.1 Basic Toasting

1. **Insert Bread:** Place up to four slices of bread or other items into the toasting slots.
2. **Select Browning Level:** On the touch screen, choose your desired browning level from 1 (lightest) to 6 (darkest).
3. **Select Bread Type:** Choose the appropriate bread type (White, Bagel, Gluten, Pastry, Muffin, Waffle) from the touch screen options. This optimizes toasting time and heat.
4. **Lower Lever:** Push the toast lever down until it locks into place. The digital timer will start counting down.
5. **Toasting Complete:** Once toasting is complete, the bread will automatically pop up, and a chime will sound.



Figure 2: Touch screen interface showing bread type and browning level selections.

4.2 Special Functions

- **Defrost:** For frozen bread. Select the bread type, then press the "Defrost" button. The toaster will automatically adjust the time for defrosting and toasting.
- **Reheat:** To warm up already toasted bread without further browning. Select the bread type, then press the "Reheat" button.
- **Cancel:** To stop the toasting cycle at any time, press the "Cancel" button on the touch screen.
- **Memory Function ('Like'):** After selecting your preferred browning level and bread type, press the "Like" button (heart icon) to save these settings. The next time you use the toaster, you can simply press "Like" to recall your favorite settings.

Smart Toast Food Menu

One Click to Satisfy Your Taste



6 Different Selections

Figure 3: Visual representation of 6 browning levels, from light to dark.

4.3 Official Product Video

Your browser does not support the video tag.

Video 1: Overview of the Tesslux Smart 4 Slice Toaster with Large Touch Screen, demonstrating its features and operation.

5. MAINTENANCE

5.1 Cleaning the Crumb Tray

1. **Unplug:** Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.
2. **Remove Tray:** Locate the "PUSH" button on the side of the toaster. Press it to release and slide out the removable crumb tray from the bottom.
3. **Discard Crumbs:** Empty the crumbs into a waste bin.
4. **Clean Tray:** Wipe the tray with a damp cloth or wash with warm soapy water. Rinse thoroughly and dry completely before reinserting.
5. **Reinsert Tray:** Slide the crumb tray back into its position until it clicks securely.



Figure 4: Image showing the removable crumb tray being pulled out for cleaning.

5.2 Cleaning the Exterior

- Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads.
- Never immerse the toaster in water or any other liquid.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in or power outlet issue.	Ensure the toaster is securely plugged into a working electrical outlet. Check the circuit breaker.
Bread does not toast evenly.	Inconsistent bread thickness or moisture.	Ensure bread slices are of uniform thickness. Adjust browning level as needed.
Bread gets stuck in slots.	Oversized bread or foreign object.	Unplug the toaster and carefully remove the bread. Avoid inserting oversized items.
Smoke coming from toaster.	Food particles or crumbs burning.	Immediately press "Cancel" and unplug. Clean the crumb tray and check for lodged food.
Touch screen unresponsive.	Temporary software glitch.	Unplug the toaster for 30 seconds, then plug it back in to reset.

7. SPECIFICATIONS

- **Brand:** Tesslux
- **Model Number:** TXTS-2591
- **Color:** BLACK
- **Material:** Plastic
- **Product Dimensions:** 16.73"D x 7.68"W x 7.28"H
- **Wattage:** 1250 watts
- **Voltage:** 120 Volts
- **Number of Slices:** 4 (long slots)
- **Browning Settings:** 6 levels
- **Special Features:** Built-In Timer, Cancel Function, High Lift Carriage, Removable Crumb Tray, Touchscreen, Memory Function
- **Item Weight:** 4.76 Pounds
- **UPC:** 703387843702

8. WARRANTY AND SUPPORT

The Tesslux 4-Slice Toaster (Model TXTS-2591) is backed by a comprehensive **12-month warranty** from the date of purchase. For any product inquiries, technical assistance, or warranty claims, please contact the Tesslux customer service team. Refer to the contact information provided in your product packaging or on the official Tesslux website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question