



Manuals.plus /

› TPOB /

› TPOB X Deluxe Professional Hair Trimmer User Manual

TPOB X Deluxe

TPOB X Deluxe Professional Hair Trimmer User Manual

1. INTRODUCTION

Thank you for choosing the TPOB X Deluxe Professional Hair Trimmer. This manual provides essential information for the safe and effective use, maintenance, and care of your new trimmer. Please read it thoroughly before first use and keep it for future reference.

2. SAFETY INFORMATION

To reduce the risk of electric shock, injury, or damage, always follow these basic safety precautions:

- Always keep the trimmer away from water sources. Do not use it near bathtubs, showers, basins, or other vessels containing water.
- Avoid use on infants.
- Follow recommended cleaning and maintenance procedures as outlined in this manual.
- Keep the trimmer out of reach of children.
- Always unplug the trimmer when not in use, before cleaning, or before performing any maintenance.
- Do not use the trimmer while it is charging.
- Do not operate the trimmer with a damaged cord or plug, or if it is not working properly.
- Do not attempt to repair or disassemble the trimmer yourself. Contact qualified service personnel for repairs.

3. PRODUCT OVERVIEW

3.1 Key Features

- Equipped with Krazy Blade for precise cutting.
- Lithium-ion battery provides 4 hours of continuous wireless runtime.
- Operates at 7200 RPM for efficient performance.
- Durable all-metal body construction.
- Digital brushless motor for consistent power.

3.2 Components

Familiarize yourself with the main components of your TPOB X Deluxe Trimmer:



Figure 1: TPOB X Deluxe Trimmer, main view showing the white body and black rubber grip.



Figure 2: Side view of the TPOB X Deluxe Trimmer, highlighting its ergonomic design.



Figure 3: Close-up view of the Krazy Blade Deep 2.0 on the TPOB X Deluxe Trimmer.



TPOB

KRAZY

DEEP 2.0



TPOB

Model: X
5V-2A 10W
2600mAh



MADE IN P.R.C



Figure 4: Back view of the TPOB X Deluxe Trimmer, showing model and electrical specifications.



Figure 5: Side view of the TPOB X Deluxe Trimmer, illustrating the power switch location.

4. SETUP

4.1 Initial Charging

1. Before first use, fully charge the trimmer for approximately 4 hours.
2. Connect the charging cable to the trimmer and plug the adapter into a suitable power outlet.
3. The charging indicator light will illuminate during charging and change color or turn off when fully charged.

4.2 Blade Inspection

Inspect the Crazy Blade for any signs of damage or misalignment before each use. Ensure the blade is securely attached.

5. OPERATING INSTRUCTIONS

5.1 Turning On/Off

Locate the power switch on the side of the trimmer. Slide the switch to the 'ON' position to activate the trimmer. Slide it back to the 'OFF' position to turn it off.

5.2 Trimming Hair

1. Ensure hair is clean and dry for optimal results.
2. Hold the trimmer at a slight angle against the skin.
3. Move the trimmer slowly and steadily against the direction of hair growth.
4. For detailed work, use light pressure and short strokes.
5. Regularly clear any accumulated hair from the blade during use to maintain performance.

6. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your trimmer.

6.1 Cleaning the Blade

1. Turn off the trimmer and unplug it from any power source.
2. Use the provided cleaning brush to remove loose hair from the blade and cutting head.
3. For a more thorough cleaning, the blade can be carefully detached (refer to specific instructions if provided with your model for blade removal).
4. Do not rinse the entire trimmer under water. The blades may be rinsed if explicitly stated as waterproof, but always ensure the main body remains dry.
5. Allow the blade to air dry completely before reattaching or storing.

6.2 Oiling the Blade

After every few uses, or if the trimmer feels sluggish, apply a small drop of clipper oil (not included) to the teeth of the blade. Turn the trimmer on for a few seconds to distribute the oil evenly, then wipe off any excess.

6.3 Storage

Store the trimmer in a cool, dry place, away from direct sunlight and moisture. Ensure it is turned off and unplugged before storing.

7. TROUBLESHOOTING

If you encounter issues with your trimmer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer fully.
Trimmer runs slowly or pulls hair.	Blades are dirty or dull.	Clean and oil the blades. If dull, consider blade replacement.
Trimmer makes unusual noise.	Blades are misaligned or damaged.	Inspect blades for damage or misalignment. Contact support if issue persists.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model	X Deluxe
Brand	TPOB
Motor Speed	7200 RPM
Battery Type	Lithium Ion (1 included)
Runtime	Up to 4 hours (wireless)
Power Source	Battery Powered
Item Weight	0.45 Kilograms (15.84 ounces)
Color	White
Recommended Use	Professional Barber
Package Dimensions	8.23 x 3.62 x 2.32 inches

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact TPOB customer service directly. Keep your proof of purchase for warranty claims.