

Ufesa 70105913

Ufesa Jupiter 1500 Max Plus Hand Blender Instruction Manual

Model: 70105913

1. INTRODUCTION

Thank you for choosing the Ufesa Jupiter 1500 Max Plus Hand Blender. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new appliance. Please read it thoroughly before first use and keep it for future reference. This powerful 1500W hand blender is designed for versatility in your kitchen, making blending, chopping, and whisking tasks effortless.

Safety Information

- Always unplug the appliance before cleaning or when not in use.
- Keep hands and utensils out of the container while blending to prevent injury.
- Do not immerse the motor unit in water or other liquids.
- This appliance is not intended for use by children or persons with reduced physical, sensory, or mental capabilities unless supervised.
- Ensure all attachments are securely locked before operation.

2. PRODUCT OVERVIEW AND COMPONENTS

The Ufesa Jupiter 1500 Max Plus Hand Blender comes with several components to enhance your cooking experience. (Note: Images are for illustrative purposes and may not depict the exact model.)

- Motor Unit:** The main body containing the 1500W motor, speed control, and Turbo Boost function.
- Blender Shaft:** Stainless steel shaft with sharp blades for blending and pureeing.
- Emulsifier Whisk:** For whipping cream, beating eggs, and preparing light batters.
- Chopper (600ml):** A container with a sharp blade for chopping nuts, herbs, vegetables, and meat.
- Measuring Beaker:** A container for blending liquids and measuring ingredients.

3. SETUP AND ASSEMBLY

Before using your hand blender, ensure all parts are clean and dry. Assemble the desired attachment to the motor unit as follows:

- Attaching the Blender Shaft:** Align the blender shaft with the motor unit and twist until it locks securely into place.
- Attaching the Emulsifier Whisk:** Insert the whisk into its adapter, then align the adapter with the motor unit and twist to lock.

3. **Attaching the Chopper:** Place the chopping blade onto the central pin inside the chopper bowl. Add your ingredients. Place the chopper lid onto the bowl, ensuring it's properly seated. Then, align the motor unit with the lid and twist to lock.

Ensure all connections are firm before plugging the appliance into a power outlet.

Video: Hand Blender Kit Assembly (Illustrative)

4. OPERATING INSTRUCTIONS

The Ufesa Jupiter 1500 Max Plus Hand Blender offers adjustable speed control and a Turbo Boost function for optimal results.

1. **Preparation:** Prepare your ingredients and place them in the appropriate container (measuring beaker, chopper bowl, or another suitable bowl).
2. **Power On:** Plug the hand blender into a power outlet.
3. **Speed Control:** Use the adjustable speed dial on the top of the motor unit to select your desired speed. Start with a lower speed for larger pieces and gradually increase as needed.
4. **Blending/Chopping:** Press and hold the power button to start the appliance. Move the blender shaft up and down gently for even blending. For chopping, press the power button in short pulses.
5. **Turbo Boost:** For maximum power and tougher ingredients, press and hold the Turbo Boost button. Release to stop.
6. **Finish:** Once desired consistency is achieved, release the power button and unplug the appliance before disassembling or cleaning.

Always ensure the blades are fully immersed in the ingredients during operation to prevent splashing.

Video: Hand Blender Operation Demonstration (Illustrative)

Video: Product Demonstration (Illustrative)

5. MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your Ufesa Jupiter 1500 Max Plus Hand Blender.

1. **Unplug:** Always unplug the appliance from the power outlet before cleaning.
2. **Disassemble:** Detach all accessories (blender shaft, whisk adapter, chopper lid, chopper blade) from the motor unit.
3. **Cleaning the Motor Unit:** Wipe the motor unit with a damp cloth. Never immerse it in water or other liquids.
4. **Cleaning Accessories:** The blender shaft, whisk, chopper blade, chopper bowl, and measuring beaker can be washed in warm soapy water or placed in the dishwasher (refer to specific accessory instructions for dishwasher compatibility). Be extremely careful when handling the sharp blades.
5. **Drying and Storage:** Ensure all parts are thoroughly dry before reassembling or storing. Store the appliance and its accessories in a dry place.

6. TROUBLESHOOTING

If you encounter any issues with your hand blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outage; attachment not correctly assembled.	Check power connection; check circuit breaker; ensure attachments are securely locked.

Problem	Possible Cause	Solution
Motor stops during operation.	Overheating due to prolonged use or too much load.	Unplug and let cool down for 30 minutes. Reduce ingredient quantity or processing time.
Ingredients are not blending properly.	Too little liquid; ingredients too large; blades are dull.	Add more liquid; cut ingredients into smaller pieces; contact customer support if blades are dull.
Excessive vibration or noise.	Attachment not properly secured; foreign object in blades.	Ensure all attachments are locked; unplug and check for obstructions.

7. SPECIFICATIONS

- Brand:** Ufesa
- Model Number:** 70105913
- Power:** 1500 Watts
- Special Features:** Adjustable Speed Control, Turbo Boost
- Blade Material:** Stainless Steel
- Included Components:** Emulsifier Whisk, Chopper (600ml), Measuring Beaker
- Product Dimensions:** Approximately 1 x 1 x 1 cm (Note: This dimension is likely a placeholder and refers to packaging or a small component. Actual product dimensions will vary.)

8. WARRANTY AND SUPPORT

Your Ufesa Jupiter 1500 Max Plus Hand Blender is covered by a manufacturer's warranty. Please refer to the warranty card included in your product packaging for detailed terms and conditions. For technical support, spare parts, or any other inquiries, please contact Ufesa customer service or your retailer.