

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ECOPAD](#) /

› [ECOPAD T30 Android 15 Tablet User Manual](#)

ECOPAD T30

ECOPAD T30 Android 15 Tablet User Manual

Comprehensive Guide for Setup, Operation, and Maintenance

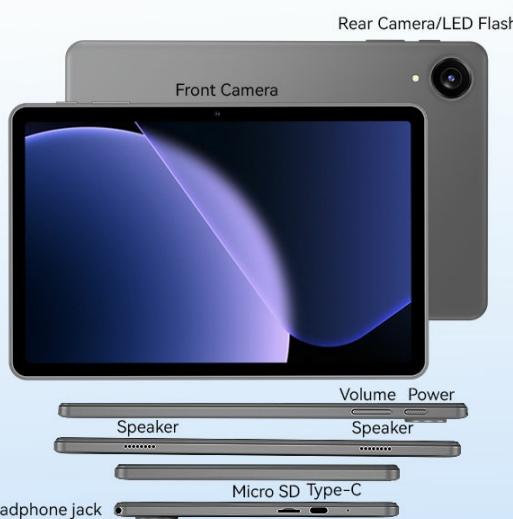
1. INTRODUCTION

Welcome to the ECOPAD T30 Android 15 Tablet user manual. This guide provides essential information to help you set up, operate, and maintain your new tablet. Please read this manual thoroughly to ensure optimal performance and longevity of your device.

2. PACKAGE CONTENTS

Before you begin, please verify that all items are present in your package:

- ECOPAD T30 Android 15 Tablet
- USB Type-C Cable
- 18W Power Adapter
- User Manual (this document)



What's in the box?



1.ECOPAD Pad T30



3.Tpye-C Cable

2.18W Charger



4.User Manual

Image: Contents of the ECOPAD T30 Tablet package, showing the tablet, USB cable, 18W charger, and user manual.

3. DEVICE OVERVIEW

Familiarize yourself with the physical components of your ECOPAD T30 tablet.



Image: Front and rear view of the ECOPAD T30 Tablet, illustrating the screen, rear camera, and various ports and buttons.

Key Components:

- Front Camera:** For video calls and selfies.
- Rear Camera:** For capturing photos and videos.
- Power Button:** To turn the tablet on/off or put it to sleep.
- Volume Buttons:** To adjust the audio volume.
- USB Type-C Port:** For charging and data transfer.
- 3.5mm Headphone Jack:** For connecting wired headphones.
- Micro SD Card Slot:** For expanding storage.
- Speakers:** For audio output.

4. SETUP

4.1 Charging the Tablet

Before first use, fully charge your tablet. Connect the USB Type-C cable to the tablet's charging port and the 18W power adapter to a wall outlet.



Image: The ECOPAD T30 Tablet connected to its 18W fast charger, illustrating its 6000mAh battery and various usage durations.

4.2 Power On/Off

- **To Power On:** Press and hold the Power button until the ECOPAD logo appears.
- **To Power Off:** Press and hold the Power button, then select "Power off" from the options on the screen.
- **To Restart:** Press and hold the Power button, then select "Restart" from the options.

4.3 Initial Setup

Upon first power-on, the tablet will guide you through the initial setup process. This includes selecting your language, connecting to Wi-Fi, setting up your Google account, and configuring basic security settings.

4.4 Wi-Fi Connection

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle Wi-Fi **On**.
3. Select your desired Wi-Fi network from the list.
4. Enter the password if prompted, then tap**Connect**.

5. OPERATING THE TABLET

5.1 Android 15 Operating System

Your ECOPAD T30 runs on the latest Android 15, offering enhanced security, improved privacy controls, and a customizable user experience.

Powered by Android 15

Enjoy the latest Android 15 features, enhanced security, and a smooth, intuitive user experience tailored for your needs.

Seamless Multitasking Power

Switch between apps effortlessly for work, play, and everything in between.

Enhanced Privacy Controls

Take charge of your data with advanced, easy-to-use privacy settings.

Customizable to Your Style

Personalize your tablet easier with new themes, widgets, and layouts.

Faster, Smarter Performance

Experience quicker load times and responsive navigation across all apps.

Secure and Up-to-Date

Stay protected with the latest security updates and features.



Image: A visual representation of the Android 15 operating system, highlighting its key features such as multitasking, privacy controls, customization, and performance.

5.2 Display Settings

The tablet features a 10.1-inch HD IPS touchscreen with a resolution of 1280x800 pixels and a 16:9 aspect ratio.



Immersive 10.1-Inch Display

Experience stunning visuals on the 10.1-inch IPS touchscreen, featuring 1280x800 resolution and a 16:9 aspect ratio for lifelike images.

 **10.1 Inch**
Display Size

 **1280*800**
Resolution

 **16:9**
Golden Ratio

 **Eye-protection**
Screen

Image: The 10.1-inch HD IPS display of the ECOPAD T30, showcasing its resolution, aspect ratio, and eye-protection capabilities. Adjust brightness, font size, and display mode (e.g., dark theme) via **Settings > Display**.

5.3 Storage Management

The tablet comes with 128GB of internal storage, expandable up to 1TB using a Micro SD card.



Store More, Do More

Featuring up to 12GB RAM and 128GB storage, with support for 1TB microSD expansion, never worry about space again.

 **12GB(4+8)RAM**

 **128GB ROM**

 **1TB SD Expand**

Image: An illustration of the ECOPAD T30's memory and storage capabilities, featuring 12GB RAM, 128GB internal storage, and support for up to 1TB Micro SD card expansion.

To manage storage, go to **Settings > Storage**. Here you can view used space and free up storage.

5.4 Connectivity

Your tablet supports various connectivity options:

- Dual-Band Wi-Fi 5 (2.4GHz & 5GHz):** For fast internet access.
- Bluetooth 5.0:** For connecting wireless accessories like headphones and keyboards.
- GPS:** For navigation and location services.
- FM Radio:** For listening to local radio stations.

More Features to Love

Additional features include a 3.5mm jack, built-in mic, dual-band WiFi, Bluetooth 5.0, GPS, and FM radio for a complete experience.

2.4/5GHz WiFi



3.5mm Headphone Jack



Microphone



Bluetooth 5.0



GPS Navigation



FM Radio



Image: A graphic displaying the ECOPAD T30's additional features, including dual-band WiFi, 3.5mm headphone jack, microphone, Bluetooth 5.0, GPS, and FM Radio.

5.5 Camera Usage

The tablet is equipped with an 8MP rear camera and a 2MP front camera.



Capture and Secure

Capture life's moments with the 8MP rear and 2MP front cameras, and enjoy quick, secure access with facial recognition unlock.

 Front 2MP

 Rear 8MP

 Face Unlock

Image: The ECOPAD T30 Tablet highlighting its 2MP front camera, 8MP rear camera, and the Face Unlock security feature. Open the **Camera** app to take photos or record videos. Tap the camera icon to switch between front and rear cameras.

5.6 Security (Face Unlock)

For convenient and secure access, your tablet supports Face Unlock. To set it up, go to **Settings > Security & privacy > Face unlock** and follow the on-screen instructions.

5.7 Multimedia and Streaming

The ECOPAD T30 supports Widevine L1, enabling high-definition streaming from platforms like Netflix, Hulu, YouTube, HBO Max, Prime Video, and Disney+.

HD Streaming Unlocked

Widevine L1 allows you to stream content in high definition from services like Netflix/YouTube/HBO/Disney, ensuring a premium viewing experience.



Image: The ECOPAD T30 Tablet demonstrating Widevine L1 support for high-definition streaming, with logos of compatible services like Netflix and Disney+.

6. MAINTENANCE

6.1 Battery Care

- Avoid extreme temperatures.
- Do not let the battery fully drain frequently.
- Use the provided 18W charger for optimal charging.

6.2 Cleaning

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid harsh chemicals or abrasive materials.

6.3 Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features, security patches, and performance improvements. Go to **Settings > System > System update**.

7. TROUBLESHOOTING

- Tablet not turning on:** Ensure the battery is charged. Connect the charger and try again.
- Screen frozen:** Press and hold the Power button for about 10-15 seconds to force a restart.
- Wi-Fi connection issues:** Restart your tablet and your Wi-Fi router. Check Wi-Fi settings to ensure the correct network and password are used.
- Apps crashing:** Clear the cache of the problematic app **Settings > Apps > [App Name] > Storage & cache > Clear cache**. If the issue persists, try reinstalling the app.
- Low audio volume:** Check volume settings. Ensure no headphones are connected if you intend to use speakers. Consider connecting a Bluetooth speaker for enhanced audio.

8. SPECIFICATIONS

Feature	Specification
Model	ECOPAD T30
Operating System	Android 15
Processor	Unisoc T606 Octa-core (2x Cortex-A75, 6x Cortex-A55)
RAM	12GB (4GB + 8GB Expansion)
Internal Storage	128GB
Expandable Storage	Up to 1TB via Micro SD Card
Display Size	10.1 Inches
Display Type	HD IPS Touchscreen
Resolution	1280 x 800 Pixels
Aspect Ratio	16:9
Rear Camera	8MP
Front Camera	2MP
Wi-Fi	Dual-Band Wi-Fi 5 (802.11ax, 2.4GHz/5GHz)
Bluetooth	Bluetooth 5.0
Battery Capacity	6000mAh
Charging	18W Fast Charge (USB Type-C)

Feature	Specification
Average Battery Life	8 Hours (typical usage)
Dimensions (LxWxH)	9.5 x 6.5 x 0.3 inches
Weight	1.83 pounds
Other Features	GPS, FM Radio, Dual Speakers, Face Unlock, Widevine L1

Powerful Octa-Core Performance

The Unisoc T606 octa-core processor provides the power you need for smooth multitasking, quick app responses, and enjoyable gaming experiences.

- ARM G57
- 12nm Process
- Cortex-A55 x 6
- Cortex-A75 x 2



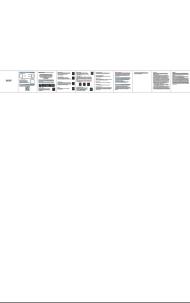
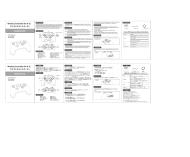
Image: A detailed diagram illustrating the Unisoc T606 Octa-core processor, highlighting its ARM G57 GPU, core configuration (Cortex-A55 x 6, Cortex-A75 x 2), and 12nm manufacturing process.

9. WARRANTY AND SUPPORT

Your ECOPAD T30 Tablet comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects and ensures peace of mind regarding your product's quality. For technical support, warranty claims, or any questions regarding your tablet, please contact ECOPAD customer service through the official channels provided at the time of purchase or on the ECOPAD website.

© 2025 ECOPAD. All rights reserved.

Related Documents - T30

 user manual	<p>Bluebird T30 User Manual: Features, Specifications, Safety, and Support</p> <p>Comprehensive user manual for the Bluebird T30 tablet, covering device features, specifications, safety guidelines, troubleshooting, regulatory information, and warranty support.</p>
 OBDPEAK Android AI Screen User Manual	<p>OBDPEAK Android AI Screen User Manual: Installation & Features</p> <p>Explore the OBDPEAK Android AI Screen user manual for detailed installation guides, function introductions, and connectivity options like Carplay and Android Auto. Learn about system updates and specifications for this advanced car display.</p>
 DOOGEE User Manual	<p>DOOGEE T30 Max User Manual: Setup, Safety, and Maintenance Guide</p> <p>Comprehensive user manual for the DOOGEE T30 Max tablet, covering device overview, SIM card insertion, basic operations, language settings, SAR information, safety precautions, and maintenance tips.</p>
 TUNTURI	<p>Tunturi Platinum T30 Core Treadmill User Manual</p> <p>Comprehensive user manual for the Tunturi Platinum T30 Core Treadmill, covering assembly, safe operation, program guides, maintenance, troubleshooting, and technical specifications. Includes detailed instructions for various workout modes and console functions.</p>
	<p>SmartWatch T30 User Guide: Features, Setup, and Operation</p> <p>Official user guide for the SmartWatch T30 by SHENZHEN HAOCHEGNG TECHNOLOGY CO.,LTD. Learn about component introduction, charging, app installation, main functions, interface navigation, sleep monitoring, precautions, troubleshooting, and FCC/IC statements.</p>
	<p>Wireless Controller for N-SL Model T30 User Manual</p> <p>User manual for the Wireless Controller for N-SL, Model T30. Features include Bluetooth 5.0, NFC, TURBO function, and adjustable vibration. Instructions for pairing, wired connection, PC mode, and troubleshooting.</p>

no relevant documents