

Cecotec Twist&Ice 2600 (A01_EU01_109564)

Cecotec Twist&Ice 2600 Slush Ice Machine User Manual

Model: Twist&Ice 2600 (A01_EU01_109564)

1. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before using the appliance. Keep this manual for future reference.

- Ensure the voltage matches your power supply.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is intended for household use only.
- The appliance features a child lock to prevent accidental operation.

2. PRODUCT OVERVIEW

The Cecotec Twist&Ice 2600 is a versatile slush ice machine designed for home use, capable of preparing a variety of frozen beverages. It features an integrated compressor for efficient cooling and a user-friendly touch control panel.



Figure 2.1: The Cecotec Twist&Ice 2600 Slush Ice Machine, showcasing its sleek design and the variety of frozen drinks it can produce, including slushies, frappes, and cocktails.

Key Features:

- **Capacity:** 2.6 liters total, with a maximum fill line of 1.9 liters for ingredients.
- **Preparation Time:** Drinks are ready in 15-60 minutes, depending on ingredients and desired consistency.
- **Cooling System:** Integrated compressor for direct cooling, eliminating the need for pre-cooling.
- **Control:** Intuitive touch control panel for easy operation.
- **Modes:** 6 specialized modes for Wine, Beer, Mixed Drinks, Frappé, and a Cleaning function.
- **Consistency Control:** Adjustable thickness setting with a percentage status indicator.
- **Safety:** Child lock feature to prevent unintended use.
- **Design:** Ergonomic handle and anti-drip nozzle for convenient and clean serving.

3. SETUP AND ASSEMBLY

1. **Unpacking:** Carefully remove all packaging materials and inspect the appliance for any damage. Retain

packaging for future storage or transport.

2. **Placement:** Place the machine on a stable, flat, and dry surface. Ensure there is adequate ventilation around the unit, especially the side grilles.
3. **Initial Cleaning:** Before first use, clean all removable parts (container, lid, stirring paddle, drip tray) with warm soapy water. Wipe the main unit with a damp cloth. Ensure all parts are completely dry before assembly.
4. **Assemble Container:** Insert the stirring paddle into the main container. Secure the container onto the base unit according to the alignment marks.
5. **Attach Lid:** Place the lid securely on top of the container.
6. **Drip Tray:** Position the drip tray at the front base of the machine.
7. **Power Connection:** Plug the power cord into a grounded electrical outlet.





Figure 3.1: Front view of the Cecotec Twist&Ice 2600, showing the main container, control panel, and drip tray. This view is essential for understanding component placement during setup.

4. OPERATING INSTRUCTIONS

4.1 Preparing Ingredients

For best results, use chilled ingredients. Ensure the liquid level does not exceed the 1.9L MAX fill line marked on the container.

- **Slushies:** Combine fruit juice, water, and sugar. The sugar content is crucial for proper slush consistency.
- **Frappés:** Use coffee, milk, and sweeteners.
- **Cocktails:** Mix spirits with appropriate mixers and flavorings.

Bebidas listas entre 15-60 minutos.

Refrigeración integrada con compresor.

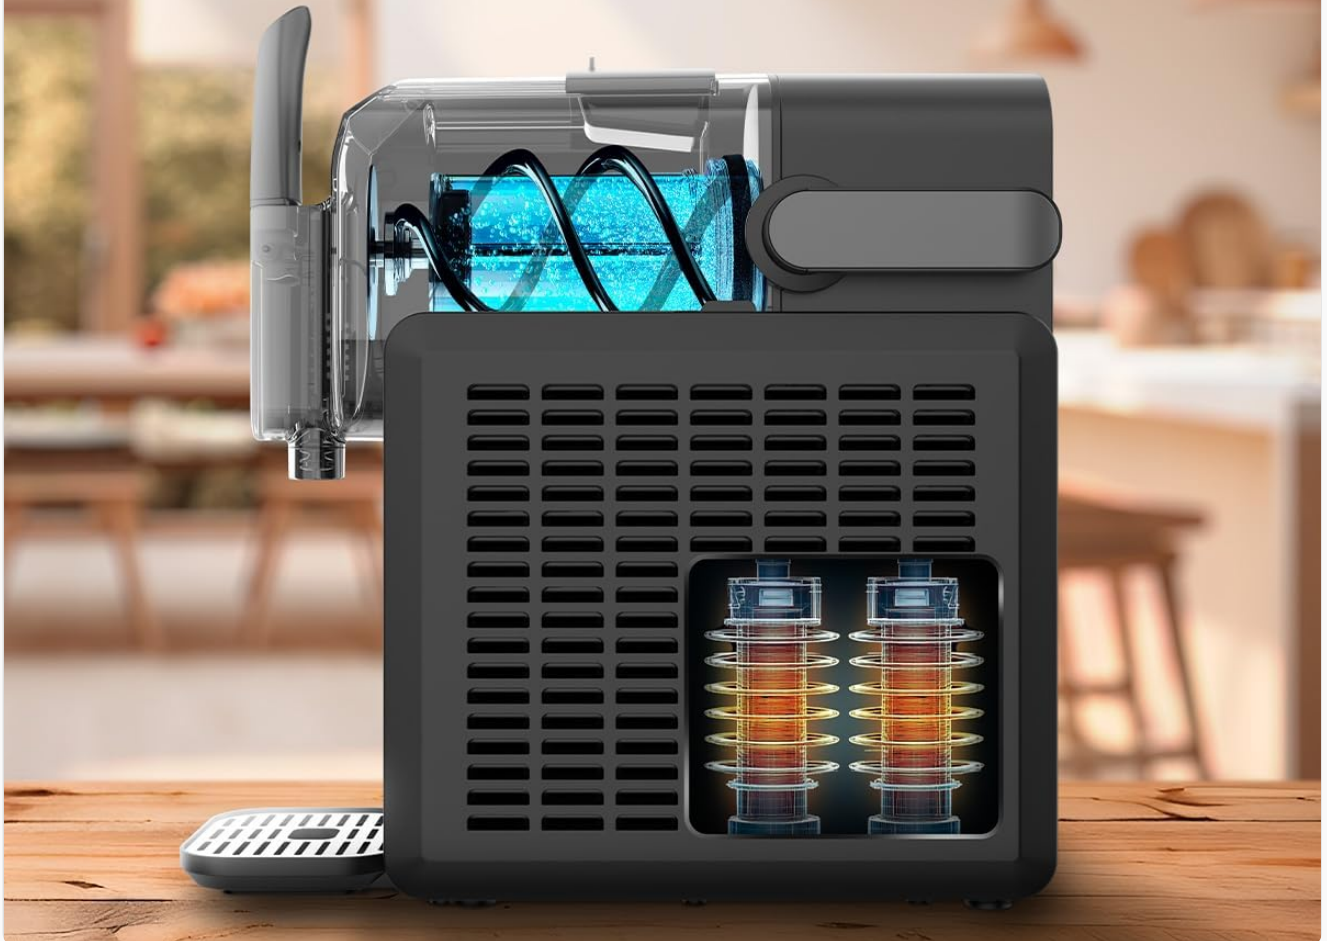


Figure 4.1: The machine in operation, demonstrating the process of pouring liquid ingredients into the container. Note the clear container for easy monitoring of the fill level.

4.2 Using the Touch Control Panel

The machine features an intuitive touch control panel with various settings and modes.

Vino, cerveza, granizado, bebidas mixtas, frappé y limpieza.

6 modos.



Figure 4.2: A detailed view of the touch control panel, highlighting the various mode selections and the thickness adjustment buttons. The percentage indicator shows the current consistency level.

1. **Power On/Off:** Press the power icon to turn the machine on or off.
2. **Mode Selection:** Select one of the 6 available modes: Wine, Beer, Mixed Drinks, Frappé, or Cleaning. Each mode is optimized for specific beverage types.
3. **Thickness Adjustment:** Use the '+' and '-' buttons to adjust the desired thickness of your frozen drink. A percentage indicator on the display shows the current thickness level.
4. **Child Lock:** Activate the child lock feature to prevent accidental changes to settings or operation.
5. **Status Indicator:** The display provides a status indicator to monitor the progress of the preparation process.

4.3 Making a Frozen Drink

1. Pour your prepared ingredients into the main container, ensuring the liquid level is below the MAX fill line.
2. Select the appropriate mode for your beverage using the touch control panel.
3. Adjust the desired thickness using the '+' and '-' buttons.
4. The machine will automatically begin the freezing and stirring process. Preparation typically takes 15-60

minutes.

5. Monitor the status indicator for progress. Once complete, the machine will signal.
6. To dispense, place a glass under the anti-drip nozzle and pull the ergonomic handle.



Control cómodo e intuitivo.
Panel táctil a color.

Figure 4.3: The machine dispensing a perfectly frozen drink into a glass, demonstrating the anti-drip nozzle and ergonomic handle for clean and easy serving.

Your browser does not support the video tag.

Video 4.1: Official product video demonstrating the Cecotec Twist&Ice 2600 in action, from adding ingredients to dispensing various frozen beverages. This video highlights the ease of use and the machine's capabilities.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Cecotec Twist&Ice 2600.

5.1 Daily Cleaning

1. **Unplug:** Always unplug the machine from the power outlet before cleaning.
2. **Empty Container:** Remove any remaining liquid from the container.
3. **Disassemble:** Carefully remove the lid, stirring paddle, and main container.
4. **Wash Removable Parts:** Wash the container, lid, stirring paddle, and drip tray with warm water and a mild dish soap. Rinse thoroughly and dry completely. These parts are not dishwasher safe.
5. **Wipe Main Unit:** Wipe the exterior of the main unit with a soft, damp cloth. Do not use abrasive cleaners or scourers. Do not immerse the main unit in water.
6. **Cleaning Mode:** For internal cleaning, add clean water to the container and select the "Cleaning" mode on the touch panel. This will help flush out residues. After the cycle, empty the water and wipe dry.



Figure 5.1: The machine with its container and stirring mechanism visible, illustrating the ease of access for cleaning. Regular cleaning of these parts is crucial for hygiene and performance.

5.2 Storage

When not in use for extended periods, ensure the machine is clean and dry. Store it in a cool, dry place, away from direct sunlight and extreme temperatures. Keep it upright to prevent damage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outlet malfunction; child lock activated.	Ensure power cord is securely plugged in. Test outlet with another appliance. Deactivate child lock.
Drinks not freezing or too thin.	Insufficient sugar content; ingredients not cold enough; thickness setting too low; ambient temperature too high.	Increase sugar content in recipe. Use pre-chilled ingredients. Adjust thickness setting higher. Operate in a cooler environment.
Drinks too thick or solid.	Thickness setting too high; left in machine too long after freezing.	Adjust thickness setting lower. Dispense immediately once desired consistency is reached.
Machine is noisy during operation.	Normal operation sound of compressor and stirring mechanism.	This is normal. If noise is excessive or unusual, contact customer support.
Liquid leaking from nozzle.	Nozzle not properly closed; seal damaged.	Ensure nozzle is fully closed after dispensing. Inspect and clean the nozzle and its seal. If damaged, contact customer support for replacement parts.

7. SPECIFICATIONS

- **Brand:** Cecotec
- **Model Name:** Twist&Ice 2600
- **Model Number:** A01_EU01_109564
- **Color:** Black
- **Capacity:** 2.6 Liters (total), 1.9 Liters (max fill for ingredients)
- **Product Dimensions:** 42.9 x 17.7 x 45 cm (16.9 x 7.0 x 17.7 inches)
- **Item Weight:** 10.9 Kilograms (24.0 lbs)
- **Cooling Type:** Compressor
- **Control Type:** Touch Panel
- **Number of Modes:** 6

8. WARRANTY AND SUPPORT

Cecotec offers a standard warranty for the Twist&Ice 2600 Slush Ice Machine. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty period and coverage details. For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Cecotec Customer Service:

- **Website:** Visit the official Cecotec website for support resources and contact information.
- **Email:** Refer to your product documentation for the customer support email address.
- **Phone:** Refer to your product documentation for the customer support phone number.

When contacting support, please have your model number (A01_EU01_109564) and purchase date ready.