

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TENGA](#) /

› [TENGA Spinner DX 03 Steps Instruction Manual - Model SPD-003](#)

## TENGA SPD-003

# TENGA Spinner DX 03 Steps Instruction Manual

Model: SPD-003

## 1. INTRODUCTION

This manual provides essential instructions for the safe and effective use, care, and maintenance of your TENGA Spinner DX 03 Steps. Please read this manual thoroughly before first use and retain it for future reference.

## 2. PRODUCT OVERVIEW

The TENGA Spinner DX 03 Steps is designed to provide a unique experience through its dynamic spinning motions and textured internal structure. This model features a bold, textured feel with spinning steps, delivering repeating sensations. It incorporates an internal coil and thick details for spiraling stimulation.

The Spinner DX series offers enhanced tactile details, a larger body, and thicker elastomer compared to the original Spinner models, ensuring a comfortable fit.



Image 2.1: The TENGA Spinner DX 03 Steps, showing its outer packaging and the internal sleeve with red spiral patterns.

Image 2.2: Visual comparison illustrating the larger size and enhanced details of the Spinner DX series compared to the original Spinner.

## Included Components:

- TENGA Spinner DX 03 Steps unit
- Storage case
- Drying case
- User manual (this document)

## 3. SETUP AND PREPARATION

1. **Unpack:** Carefully remove the TENGA Spinner DX 03 Steps from its packaging.
2. **Inspect:** Before first use, inspect the product for any damage or defects. Do not use if damaged.
3. **Lubrication:** For optimal experience, apply a water-based lubricant to the entrance and internal surfaces of the product. Ensure adequate lubrication to prevent discomfort and potential damage to the product.

## 4. OPERATING INSTRUCTIONS

The TENGA Spinner DX 03 Steps is designed for manual use, providing dynamic spinning sensations through its unique internal structure.

1. **Application:** After applying lubricant, gently insert.
2. **Movement:** Hold the exterior of the product and rotate it with your hand. The internal structure is designed to create a spiral motion and textured sensations as you twist and move the unit.
3. **Experiment:** Adjust the speed and direction of rotation to discover your preferred level of stimulation.



*Image 4.1: Illustration of how to hold and rotate the Spinner DX to activate its dynamic spinning sensations.*

## 5. MAINTENANCE AND CLEANING

---

Proper cleaning and maintenance are crucial for hygiene and extending the product's lifespan. The TENGA Spinner DX 03 Steps is reusable and washable.

- 1. Rinse Immediately:** After each use, rinse the product thoroughly with lukewarm water.
- 2. Clean:** Use a mild, pH-neutral soap or a specialized toy cleaner. Gently clean all surfaces, especially the internal textures, to remove any lubricant residue.
- 3. Rinse Again:** Rinse thoroughly to ensure all soap residue is removed.
- 4. Dry:** Place the product in its included drying case. Allow it to air dry completely in a well-ventilated area, away from direct sunlight or extreme temperatures. Ensure it is fully dry before storage to prevent mold or damage.
- 5. Storage:** Once completely dry, store the product in its storage case in a clean, dry, and discreet location.



Image 5.1: Visual guide demonstrating the washing process under running water and placing the product in its drying stand.

## 6. TROUBLESHOOTING

If you encounter any issues with your TENGA Spinner DX 03 Steps, please refer to the following common solutions:

- **Lack of Sensation:** Ensure sufficient water-based lubricant is applied. Experiment with different rotation speeds and pressures.
- **Difficulty Cleaning:** Ensure you are using a mild soap and thoroughly rinsing all internal textures. A soft brush (not included) may assist with intricate areas.
- **Product Damage:** If the product shows signs of tearing, stickiness, or degradation, discontinue use immediately and dispose of it responsibly.

For further assistance, please contact TENGA customer support.

## 7. SPECIFICATIONS

Feature	Detail
Brand	TENGA
Model Name	Spinner DX 03 Steps
Item Model Number	SPD-003

<b>Product Dimensions</b>	2.3 x 2.3 x 5.51 inches
<b>Weight</b>	9.91 ounces
<b>Material</b>	Thermoplastic Elastomer (TPE)
<b>Style</b>	Sleeve
<b>Waterproof</b>	Yes
<b>Reusable</b>	Yes

## 8. WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please visit the official TENGA website or contact their customer service directly. Keep your proof of purchase for any warranty claims.  
**Website:** [www.tenga.co.jp/en/](http://www.tenga.co.jp/en/)

## 9. IMPORTANT SAFETY INFORMATION

- This product is intended for adult use only.
- Do not use if the product appears damaged or degraded.
- Use only water-based lubricants with this product. Oil-based lubricants can damage the TPE material.
- Discontinue use if irritation or discomfort occurs.
- Keep out of reach of children.