

Asingleer Portable Washing Machine

Folding Washing Machine User Manual

Model: Portable Washing Machine

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation, maintenance, and troubleshooting of your Asingleer Folding Washing Machine. Please read this manual thoroughly before using the appliance and retain it for future reference.

The Asingleer Folding Washing Machine is designed for washing small loads of laundry, such as baby clothes, underwear, and socks. Its portable and foldable design makes it suitable for use in apartments, dormitories, hotels, and during travel or camping.

SAFETY INFORMATION

To ensure safe operation, please observe the following precautions:

- Always disconnect the power adapter before cleaning, performing maintenance, or when the machine is not in use.
- Do not immerse the main unit in water or other liquids.
- Keep out of reach of children. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities unless supervised.
- Use only the provided power adapter.
- Do not overload the washing machine. Refer to the capacity guidelines in the operating instructions.
- Ensure the drainage pipe is properly positioned for drainage to prevent water overflow.
- Wash underwear, socks, and baby clothes separately for hygiene purposes.
- The dehydration function is designed for short cycles (e.g., 3 minutes). Longer cycles may affect the stability of the basket. Note that the dehydration function does not completely dry clothes.
- Avoid placing the machine on unstable or uneven surfaces.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Portable Washing Machine (1)
- Laundry Bag (1)
- Bottom Basket (2)
- Expansion Basket (2)
- Folding Hanger (2)
- Power Adapter (1)
- Absorbent Cloth (1)
- Plastic Water Pipe (1)



Image: The Asingleer Folding Washing Machine shown with its various included accessories, such as the laundry bag, baskets, hangers, and drainage pipe.

PRODUCT OVERVIEW

The Asingleer Folding Washing Machine features a compact and foldable design, making it highly portable. It incorporates a powerful motor for effective cleaning and blue light technology for enhanced hygiene.



Image: A cutaway view of the washing machine highlighting the hygienic impeller and the blue light cleansing feature during operation.

Key Features:

- **11L Large Capacity:** Capable of deep cleaning 4-5 pieces of intimate clothing.
- **Portable & Foldable Design:** Weighs approximately 5.1 pounds and folds for easy storage and transport.
- **Multiple Cleaning Modes:** Offers Standard (5 min), Deep (10 min), and Quick/Drainage (3 min) cycles.
- **Powerful Decontamination:** Simulates hand scrubbing with strong stain-removing power and integrated blue light protection.
- **Noise Reduction:** Advanced sound insulation technology for quiet operation.
- **Reasonable Drainage Design:** Features a self-contained drainage pipe and bottom drainage hole for automatic water discharge.



11L

Large Capacity

Portable wahing machine
can handle a variety of
fabrics and clothing,
instand of hand washing



Underwear



Underpant



Sock



Baby clothes



Pet clothes

Image: The washing machine demonstrating its 11L capacity, suitable for items like underwear, socks, baby clothes, and pet clothes.



Portable And Folding Design

Portable washing machines fold easily by pressing down and are easy to store without taking up space



Image: Visual representation of the washing machine's portable and folding design, illustrating how it can be stored compactly in drawers, shelves, or suitcases.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Unfold:** Place the washing machine on a flat, stable surface. Gently press down on the top edge to expand the foldable body until it locks into its full height.
3. **Connect Power:** Insert the power adapter into the designated port on the washing machine and then plug it into a suitable power outlet.
4. **Position Drainage Pipe:** For washing, ensure the drainage pipe is hung up to prevent water from draining prematurely. For draining, place the pipe into a sink or bucket.

OPERATING INSTRUCTIONS

Washing Procedure:

1. **Add Water:** Fill the washing machine with an appropriate amount of water. Do not exceed the maximum fill line.
2. **Add Detergent:** Add a small amount of liquid detergent suitable for delicate items.
3. **Load Laundry:** Place the items to be washed into the machine. Ensure the load does not exceed the 11L capacity (e.g., 4-5 pieces of intimate clothing). Do not overload.
4. **Select Mode:** Press the power button to turn on the machine. Then, select your desired cleaning mode by pressing the mode selection button:
 - **Standard Cleaning:** 5 minutes cycle.
 - **Deep Cleaning:** 10 minutes cycle.
 - **Quick Cleaning/Drainage:** 3 minutes cycle.
5. **Start Washing:** Long press the start/stop button for 2 seconds to begin the selected cycle.
6. **Draining:** Once the washing cycle is complete, place the drainage pipe down to allow water to automatically drain.
7. **Dehydration (Optional):** For partial dehydration, insert the bottom basket and expansion basket. Select the 3-minute quick cleaning/drainage mode. Note that this function does not fully dry clothes.



Image: Close-up of the washing machine's touch control panel, indicating the three cleaning modes (3, 10, and 5 minutes) and the long press action for start/stop.

Simple And Quick Dehydration

Newly upgraded removable draining basket,
one-touch draining, easy to operate



Image: The newly upgraded removable draining basket, designed for simple and quick dehydration, shown with water droplets and stylized bacteria to emphasize cleanliness.

MAINTENANCE

Cleaning the Machine:

- After each use, drain all water from the machine.
- Wipe the interior and exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Ensure the machine is completely dry before folding and storing.

Storage:

- To fold, gently push down on the top rim of the machine until it collapses.
- Store in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not turn on.	Power adapter not connected properly; Power outlet issue.	Ensure power adapter is securely plugged in. Try a different power outlet.
Washing cycle does not start or stops unexpectedly.	Start/stop button not pressed correctly (long press required); Overload.	Ensure you long press the start/stop button for 2 seconds. Reduce the laundry load.
Water does not drain.	Drainage pipe not positioned correctly; Drainage hole blocked.	Ensure the drainage pipe is placed down into a sink or bucket. Check for any obstructions in the drainage hole.
Machine is noisy or vibrates excessively.	Uneven surface; Overload; Unbalanced load.	Place the machine on a flat, stable surface. Reduce laundry load. Redistribute clothes evenly inside the machine.
Dehydration basket falls off or doesn't spin effectively.	Overload; Incorrect cycle selected for dehydration.	Do not overload the dehydration basket. Use only the 3-minute quick cleaning/drainage mode for dehydration. Ensure the basket is properly seated.

SPECIFICATIONS

Brand	Asingleer
Model Name	Portable Washing Machine
Capacity	11 Liters
Item Weight	5.1 pounds
Product Dimensions (Expanded)	14.8"D x 12.8"W x 6.77"H
Material Type	Plastic
Control Console	Touch
Access Location	Top Load
Color	Blue Portable Washing Machine
Installation Type	Freestanding
Special Feature	Folding Washing Machine

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the documentation provided with your purchase or visit the official Asingleer website. Specific warranty terms and conditions may vary by region and retailer.

Note: This manual provides general guidance. For detailed support, always consult the manufacturer's official resources.

© 2025 Asingleer. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question