



[Manuals.plus](#) /

› [AECOJOY](#) /

› AECOJOY 7-Piece Patio Furniture Set Instruction Manual

AECOJOY 7 PCS Furniture Set

AECOJOY 7-Piece Patio Furniture Set Instruction Manual

Model: 7 PCS Furniture Set

INTRODUCTION

Thank you for choosing the AECOJOY 7-Piece Patio Furniture Set. This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your new outdoor furniture. Please read these instructions carefully before assembly and retain them for future reference.

Safety Information

- Ensure all components are present and undamaged before assembly. Do not proceed with assembly if any parts are missing or damaged.
- Assemble the furniture on a soft, clean surface to prevent scratches.
- Tighten all bolts and screws securely, but do not overtighten. Periodically check and retighten fasteners as needed.
- Keep children and pets away from the assembly area.
- Do not stand or jump on the furniture.
- Distribute weight evenly across seating surfaces.
- Always use the furniture on a flat, stable surface.

 
 
SETUP AND ASSEMBLY

Your AECOJOY 7-Piece Patio Furniture Set requires assembly. Please refer to the separate detailed assembly instructions included in your package for step-by-step guidance. Ensure you have all the necessary tools and components before beginning.

Package Contents and Dimensions

The set includes various pieces designed for flexible arrangement. Below are the general dimensions and a list of included items.

Product Dimensions

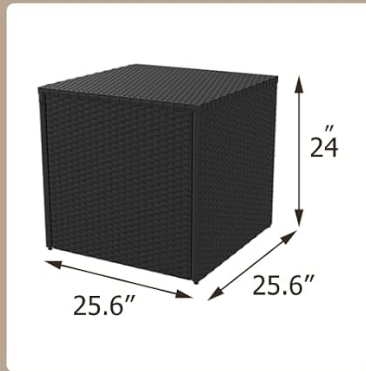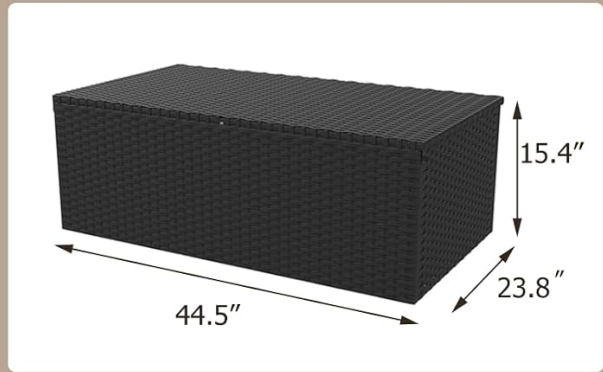

PE Wicker Sofa Set

Package Includes

- 2 x Storage Box
- 1 x Loveseat
- 1 x Three Seats Sofa
- 2 x Single Sofa
- 7 x Back Cushion
- 7 x Seat Cushion

Accessories & Installation Instruction

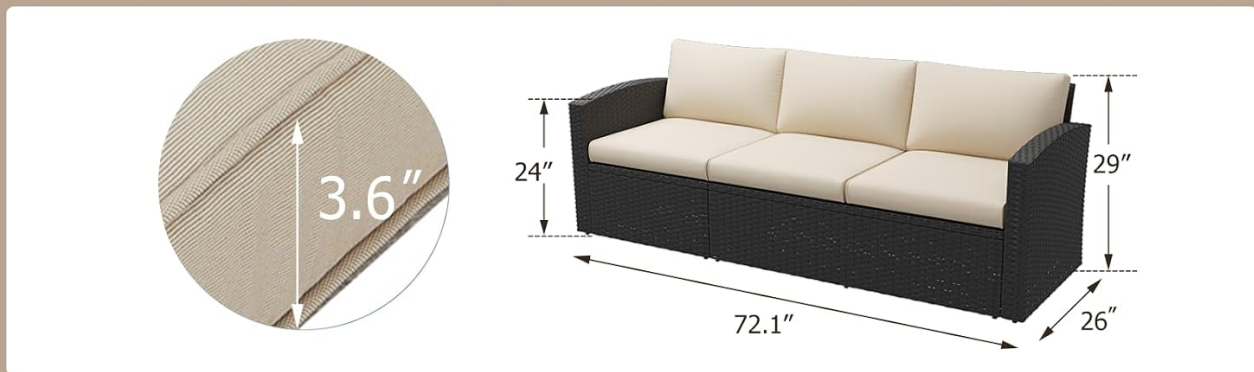 


Image: Product dimensions for each furniture piece and a checklist of included items. This image details the size of the loveseat (50.2"x26"x29.2"), single chair (28"x26"x29.2"), three-seat sofa (72.1"x26"x29"), and storage boxes (44.5"x23.8"x15.4" and 25.6"x25.6"x24"). It also lists the package contents: 2 storage boxes, 1 loveseat, 1 three-seat sofa, 2 single sofas, 7 back cushions, 7 seat cushions, and accessories & installation instructions.

Adjustable Feet

Each furniture piece is equipped with adjustable feet to ensure stability on uneven surfaces. Adjust them by rotating until the furniture is level and stable.



Image: A close-up view of an adjustable foot knob located on the base of a furniture piece, used for leveling.

OPERATING AND USAGE

This patio furniture set is designed for both indoor and outdoor use, offering flexible arrangements to suit various spaces and needs.

Flexible Combination

The individual pieces (single chairs, loveseat, sofa, coffee table, and side table) can be arranged in multiple configurations to fit your garden, backyard, deck, or indoor living area.



Image: Four distinct arrangements of the AECOJOY 7-piece patio furniture set, demonstrating its modularity for various outdoor settings.

Integrated Storage Boxes

The coffee table and side table feature integrated storage compartments. These boxes include waterproof covers and PVC panels on the bottom to protect contents from moisture.

The Furniture is Split

to Multiple Scenarios for Use.



Combination

PRODUCT INFORMATION

Image: A detailed graphic illustrating the features of the storage boxes, including ample interior space, a premium chain mechanism for the lid, a polyester interior lining, and a PVC panel at the bottom for water resistance.

Comfort Features

The furniture is designed with ergonomic seating and wide armrests for enhanced comfort during use.



Ergonomic Seat Design

Ergonomic seat design prevents back pain from sitting for long time.



Widen Armrests

Widen armrests provides more comfortable feeling of sitting.

Image: This image emphasizes the ergonomic seat design of the single chair, intended to prevent discomfort, and showcases the wide armrests for improved comfort.

MAINTENANCE

Proper care and maintenance will extend the life and appearance of your patio furniture set.

PE Wicker Care

The hand-woven PE wicker is durable and weather-resistant. To clean, wipe with a damp cloth and mild soap. Avoid harsh chemicals or abrasive cleaners that could damage the material.

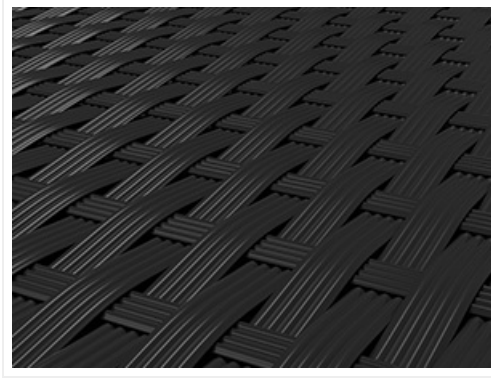 


Image: A close-up view of the hand-woven PE (Polyethylene) rattan wicker texture, highlighting its intricate pattern.


Cushion Care

The cushions feature removable covers made of smooth, durable, and waterproof polyester fabric. For cleaning, simply unzip and remove the covers. Machine wash on a gentle cycle with cold water and mild detergent, then air dry. Do not bleach or iron.

 
PRODUCT DESCRIPTION

Product Details



Brighten Your Delightful Outdoor Time



Hand-woven PE Rattan

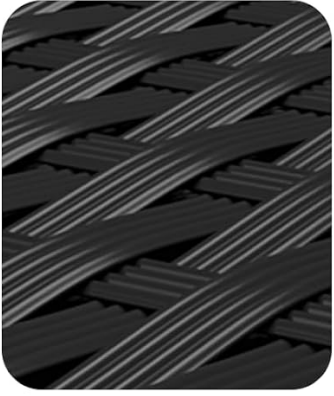

 3.6"

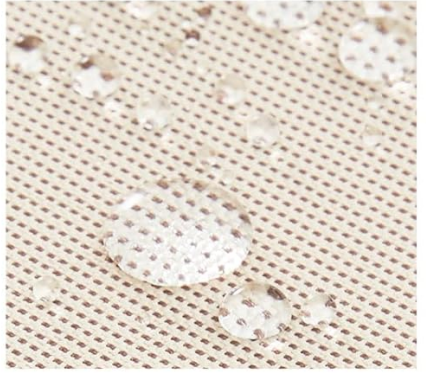

Thicker Backrests and Cushions Removable Cushion Cover Waterproof Fabric

Image: This image provides detailed views of the product's features, including the hand-woven PE rattan, the 3.6-inch thickness of

the cushions, a close-up of the removable cushion cover zipper, and the waterproof quality of the fabric.



Image: A magnified view of the cushion fabric, demonstrating its waterproof properties with visible water droplets beading on the surface.

General Care

- Cover the furniture during prolonged periods of non-use or severe weather to protect it from the elements.
- Store cushions indoors during heavy rain or winter months to prevent mildew and prolong their lifespan.
- Regularly check and tighten all hardware to ensure structural integrity.

TROUBLESHOOTING

If you encounter any issues with your AECOJOY patio furniture set, please refer to the following common solutions.

- **Wobbling Furniture:** Check if the furniture is on an even surface. Adjust the leveling feet on each piece until stable. Ensure all bolts are securely tightened.
- **Difficulty with Assembly:** Review the included assembly instructions carefully. Ensure all parts are correctly oriented and that you are using the correct hardware for each step. Do not force parts together. If a part seems ill-fitting, double-check the instructions and part numbers.
- **Cushions Flattening:** Over time, cushions may compress. Rotate and fluff cushions regularly to maintain their shape and loft.
- **Fading or Discoloration:** While the PE wicker and fabric are designed for outdoor use, prolonged exposure to direct sunlight can cause some fading. Use furniture covers when not in use to minimize sun exposure.

If you are unable to resolve an issue, please contact customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	AECOJOY
Model	7 PCS Furniture Set
Color	Black & Beige
Item Weight	154.5 Pounds
Assembly Required	Yes

Feature	Detail
Material	Hand-woven PE Wicker, Polyester Fabric, PVC Panels
Cushion Thickness	3.6 inches

WARRANTY INFORMATION

Specific warranty details for your AECOJOY 7-Piece Patio Furniture Set may vary. Please refer to the warranty card included with your purchase or your original purchase documentation for comprehensive information regarding warranty coverage, terms, and conditions.

CUSTOMER SUPPORT

For any questions, missing parts, or assistance with assembly or product issues not covered in this manual, please contact AECOJOY customer service. Have your model number (7 PCS Furniture Set) and purchase information ready when contacting support.

Contact information can typically be found on the AECOJOY official website or on your purchase receipt.