

FGJDFD SJ-9669, SJ-9667, SJ-9668, SJ-9690E, SJ-9695E, SJ-9699E, S30A Compatible Blade

FGJDFD Stainless Steel Mixer Blade Instruction Manual

Model Compatibility: SJ-9669, SJ-9667, SJ-9668, SJ-9690E, SJ-9695E, SJ-9699E, S30A Mixers

Brand: FGJDFD

1. INTRODUCTION

This manual provides essential instructions for the safe and effective installation, operation, and maintenance of your new FGJDFD Stainless Steel Mixer Blade. This replacement blade is designed to restore or enhance the performance of compatible mixer models. Please read this manual thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

Always observe basic safety precautions when using electrical appliances and handling sharp objects. Failure to do so may result in injury or damage to the appliance.

- **Unplug the Mixer:** Always ensure your mixer is unplugged from the power outlet before attempting any installation, removal, or cleaning of the blade.
- **Handle with Care:** The mixer blade features sharp edges. Handle the blade carefully to prevent cuts or injuries.
- **Keep Away from Children:** Store the blade and mixer components out of reach of children.
- **Inspect Before Use:** Before each use, inspect the blade for any signs of damage or wear. Do not use a damaged blade.
- **Use for Intended Purpose:** This blade is designed for mixing food ingredients. Do not use it for non-food items or purposes other than its intended use.

3. PACKAGE CONTENTS

Verify that all items are present and in good condition upon opening the package.

- 1 x FGJDFD Stainless Steel Mixer Blade

4. COMPATIBILITY

This FGJDFD Stainless Steel Mixer Blade is compatible with the following mixer models:

- SJ-9669
- SJ-9667
- SJ-9668
- SJ-9690E
- SJ-9695E
- SJ-9699E
- S30A

Ensure your mixer model is listed above for proper fit and function.

5. SETUP AND INSTALLATION

Follow these steps to safely install the new mixer blade into your compatible appliance.

1. **Prepare the Mixer:** Ensure your mixer is unplugged from the power source. Remove the blender jar from the mixer base.
2. **Remove Old Blade (if applicable):** If replacing an existing blade, carefully unscrew or detach the old blade assembly from the bottom of the blender jar. Refer to your mixer's original instruction manual for specific removal procedures if needed.
3. **Install New Blade:** Align the new FGJDFD Stainless Steel Mixer Blade with the opening at the bottom of the blender jar. Gently insert the blade assembly and twist or secure it according to your mixer jar's design. Ensure it is firmly seated and tightened to prevent leaks during operation.
4. **Visual Check:** After installation, visually inspect the blade to ensure it is properly centered and securely attached.



Image 1: Top view of the FGJDFD Stainless Steel Mixer Blade, showing the drive gear and upper blade configuration. This view helps in identifying the correct orientation for installation.



Image 2: Bottom view of the FGJDFD Stainless Steel Mixer Blade, illustrating the four sharp cutting blades. This perspective is useful for verifying the blade's integrity and cleanliness.

6. OPERATING INSTRUCTIONS

Once the blade is securely installed, you can use your mixer as usual. This replacement blade is designed to provide efficient mixing and consistent results.

- **Load Ingredients:** Place your ingredients into the blender jar.
- **Secure Lid:** Ensure the blender jar lid is securely fastened before operating.
- **Place on Base:** Position the blender jar onto the mixer base, ensuring it is properly locked into place.
- **Plug In and Operate:** Plug the mixer into a power outlet and operate according to your mixer's original instructions.
- **Do Not Overfill:** Avoid overfilling the blender jar beyond its maximum fill line to prevent spills and ensure optimal mixing.

7. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your blade and ensure hygienic use.

- **Unplug Before Cleaning:** Always unplug the mixer from the power outlet before cleaning.
- **Immediate Cleaning:** Clean the blade immediately after each use to prevent food residue from drying and hardening.
- **Hand Washing:** Carefully hand wash the blade with warm, soapy water. Use a brush to clean around the blades, taking extreme caution due to sharp edges. Rinse thoroughly.
- **Dishwasher Safe:** The stainless steel blade is generally dishwasher safe, but hand washing is recommended for longevity. If using a dishwasher, place it on the top rack.
- **Drying:** Dry the blade completely before storing to prevent water spots and corrosion.
- **Storage:** Store the blade in a safe place where its sharp edges will not cause injury.

8. TROUBLESHOOTING

If you encounter issues with your new mixer blade, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blade not fitting correctly.	Incorrect model compatibility or improper installation.	Verify your mixer model against the compatibility list (Section 4). Re-attempt installation, ensuring the blade is aligned and tightened properly.
Leaking from the blender jar base.	Blade not securely tightened or seal (if applicable) is damaged/missing.	Ensure the blade assembly is fully tightened. Check if your mixer jar requires a separate sealing gasket and ensure it is correctly in place and undamaged.
Poor mixing performance.	Overfilling, insufficient liquid, or blade obstruction.	Do not overfill the blender jar. Add more liquid if ingredients are too thick. Ensure no large, hard items are obstructing the blade.
Unusual noise during operation.	Blade not properly seated or foreign object in the jar.	Unplug the mixer and check if the blade is securely installed. Remove any foreign objects from the jar. If the noise persists, discontinue use and consult your mixer's original manual or a qualified technician.

9. SPECIFICATIONS

- **Product Type:** Replacement Mixer Blade
- **Material:** Stainless Steel
- **Compatible Models:** SJ-9669, SJ-9667, SJ-9668, SJ-9690E, SJ-9695E, SJ-9699E, S30A
- **Approximate Item Weight:** 1.76 ounces (50 grams)
- **Approximate Package Dimensions:** 1.18 x 0.79 x 0.39 inches (3 x 2 x 1 cm)

10. WARRANTY AND SUPPORT

Warranty information for this specific replacement part is not provided in the product details. For any questions regarding product functionality, installation, or potential defects, please contact the manufacturer, FGJDFD, or your retailer directly. Please retain your purchase receipt as proof of purchase.

For further assistance, you may refer to the original instruction manual of your specific mixer model (SJ-9669, SJ-9667, SJ-9668, SJ-9690E, SJ-9695E, SJ-9699E, S30A) for detailed information on its assembly and operation.