

**8212526**

# Washer Drip Tray Instruction Manual

*Model: 8212526**Brand: Generic*

## INTRODUCTION

This instruction manual provides essential information for the proper installation, use, and maintenance of your new Washer Drip Tray. This product is designed to collect water leaks from your washing machine, preventing potential floor damage and water accumulation. Please read this manual thoroughly before installation and keep it for future reference.

## PRODUCT OVERVIEW

The Washer Drip Tray is a protective accessory designed to be placed underneath your washing machine. Its primary function is to contain any water that may leak from the appliance, thereby protecting your flooring and surrounding areas from water damage. The tray features a durable construction and a design optimized for water collection.



**Figure 1:** Generic Washer Drip Tray. This image shows the white, square-shaped drip tray with raised ridges on the bottom surface designed to channel water towards a central point.

## COMPATIBILITY

This aftermarket washer drip tray is compatible with a wide range of Whirlpool washer models. Please verify your washer's model number against the list below to ensure compatibility.

**Note:** If your model number is not listed, or if you are unsure about compatibility, please contact the manufacturer for

assistance.

## Compatible Whirlpool Washer Models:

- WTW5500BW0
- WTW5500XL2
- WTW5500XW2
- WTW5500XW3
- WTW5550XW2
- WTW5550XW3
- WTW5600XW2
- WTW5600XW3
- WTW5610XW2
- WTW5610XW3
- WTW5640XW2
- WTW5640XW3
- WTW5700AC0
- WTW5700XL3
- WTW5700XW2
- WTW5800BC0
- WTW5800BW0
- WTW5810BW0
- WTW5840BC0
- WTW5840BW0
- WTW6120HC0
- WTW6120HC1
- WTW6120HC3
- WTW6120HW0
- WTW6120HW1
- WTW6150PB0
- WTW6150PW0
- WTW6157PB0
- WTW6157PW0
- WTW7000DW0
- WTW7040DW0
- WTW7120HC0
- WTW7120HC1
- WTW7120HW0
- WTW7120HW1
- WTW7800XB3
- WTW7800XB4
- WTW7800XL3
- WTW7800XL4
- WTW7800XW3

- WTW7800XW4
- WTW7990XG1

## SETUP AND INSTALLATION

Follow these steps to properly install the washer drip tray:

1. **Prepare the Area:** Ensure the floor area where the washing machine will be placed is clean, dry, and level.
2. **Position the Drip Tray:** Carefully place the drip tray in the desired location. Ensure it is centered and stable.
3. **Move the Washer:** With assistance, carefully lift and slide your washing machine onto the drip tray. Ensure all four feet of the washing machine are securely inside the tray and are not resting on the edges.
4. **Check Stability:** Gently rock the washing machine to confirm it is stable and balanced on the drip tray. Adjust if necessary.
5. **Connect Hoses:** Reconnect water supply hoses and the drain hose to the washing machine, ensuring all connections are tight and free of leaks.

**Important:** Always disconnect power and water supply to the washing machine before attempting to move it. It is recommended to have at least two people for moving a washing machine to prevent injury or damage.

## OPERATION AND FUNCTION

The washer drip tray operates passively by collecting any water that may escape from the washing machine during its operation. It acts as a containment barrier, preventing water from spreading across the floor. The tray does not require any active operation once installed.

Regularly inspect the drip tray for any accumulated water. If water is present, it indicates a leak from your washing machine that requires immediate attention. Address the source of the leak promptly to prevent further issues.

## MAINTENANCE

To ensure the longevity and effectiveness of your washer drip tray, follow these simple maintenance guidelines:

- **Regular Inspection:** Periodically check the drip tray for any signs of water accumulation, debris, or damage.
- **Cleaning:** If water or debris is found, carefully slide the washing machine off the tray (with assistance) and clean the tray with mild soap and water. Rinse thoroughly and ensure it is completely dry before repositioning the washing machine.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners or harsh chemicals on the drip tray, as these can damage the material.

## TROUBLESHOOTING

### Common Issues and Solutions

Problem	Possible Cause	Solution
Leaking water from the washing machine	Washer is not properly positioned or balanced.	Reposition the washer and check its stability.

Problem	Possible Cause	Solution
Drip tray does not fit under the washer.	Incorrect tray size or washer dimensions.	Verify the dimensions of your washing machine and compare them with the product specifications. Ensure the tray is designed for your specific washer type.
Water is found in the drip tray.	Washing machine is leaking.	Identify the source of the leak from the washing machine (e.g., hose connections, pump, tub). Repair or replace the faulty component. Contact a qualified appliance technician if necessary.
Tray appears damaged or cracked.	Physical impact or material fatigue.	A damaged tray may not effectively contain leaks. Consider replacing the drip tray if it shows significant damage.

## SPECIFICATIONS

Attribute	Detail
Model Number	8212526
Brand	Generic
Part Number	8212526
Color	As picture (typically white or light gray)
Country of Origin	USA
Material	Durable plastic

## WARRANTY AND SUPPORT

This product is an aftermarket replacement part. For specific warranty information, please refer to the seller's return policy or contact the seller directly. The Amazon product page indicates a 30-day refund/replacement return policy. If you have questions regarding compatibility, installation, or require further assistance, please contact the seller through the platform where the purchase was made. The seller, BOYZA US, typically responds to inquiries within 24 hours.

For general inquiries or to verify compatibility, you may also refer to the product listing on Amazon.com [Product Page Link](#)