

CAPXSNOB ST-542S

CAPXSNOB Magician1 Mini Espresso Machine (Model ST-542S)

Instruction Manual

1. INTRODUCTION

Thank you for choosing the CAPXSNOB Magician1 Mini Espresso Machine. This versatile 5-in-1 coffee maker is designed to provide a premium brewing experience with its multi-pod compatibility, 19-bar pressure system, and customizable settings. Please read this manual thoroughly before initial use to ensure proper operation, maintenance, and safety.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the appliance.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Ensure the voltage specified on the appliance matches your local power supply.
- Keep the appliance out of reach of children.
- Unplug from the outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only manufacturer-recommended accessories.
- Avoid contact with hot surfaces. Use handles or knobs.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always ensure the water reservoir is filled to the appropriate level before brewing.
- Exercise extreme caution when dispensing hot beverages.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Magician1 Mini Espresso Machine:

1. Water Reservoir (21oz capacity)
2. Control Panel with LED Display (Time, Temperature, Brew Size indicators)
3. Brewing Handle
4. Brewing Chamber
5. Drip Tray and Grid
6. Power Button
7. Brew Size Selection Buttons (Small, Medium, Large)
8. Adapter for Nespresso Original capsules
9. Adapter for Dolce Gusto capsules
10. Adapter for Lavazza Blue capsules
11. Adapter for ESE Pods
12. Adapter for Ground Coffee
13. Cleaning Pin
14. Coffee Dosing Funnel (for ground coffee)
15. Scoop & Tamper (for ground coffee)



Image: Overview of the Magician1 Mini Espresso Machine and its compatible coffee types.

4. INITIAL SETUP

4.1 Unpacking and First Use

1. Remove all packaging materials and stickers from the machine.
2. Clean the water reservoir, drip tray, and all adapters with warm, soapy water. Rinse thoroughly and dry.
3. Fill the water reservoir with fresh, clean water up to the 'MAX' line.
4. Place the water reservoir back onto the machine.
5. Plug the machine into a grounded electrical outlet. The LED display will illuminate.
6. Perform a cleaning cycle: Without any coffee pod or ground coffee in an adapter, insert an empty adapter into the brewing chamber. Place a large cup under the dispenser. Press the largest cup size button to run a full cycle of hot water through the machine. Repeat this process 2-3 times to flush the system.

Fits Coffee Cups Under 3.8"

● For Lavazza* Blue ● For Nespresso* Original

● For Ground Coffee & 44mm ESE Pod ● For Dolce Gusto*

3.3" 8.5cm 3.8" 9.8cm

Brand: CAPXSNOB	Advantage: Gen3 All-in-One
Name: Magician 1 Mini	Flavour: Ristretto/Espresso/Latte/Cappuccino/Americano
NOTE: Magician 1 Mini only supports 8.5–9.8 cm cups, please check the cup size before purchasing	

Image: Visual guide for the brewing process, including water filling and adapter insertion.

5. OPERATING INSTRUCTIONS

5.1 Brewing Coffee (General Steps)

1. Ensure the water reservoir is filled with fresh water.
2. Select the appropriate adapter for your chosen coffee type (Nespresso Original, Dolce Gusto, Lavazza Blue, ESE Pod, or Ground Coffee).
3. Insert your coffee pod or ground coffee into the selected adapter.
4. Place the filled adapter into the brewing chamber and firmly push down the handle to lock it in place.
5. Place a cup (under 3.8 inches in height) on the drip tray beneath the dispenser.
6. The machine will preheat (approx. 20-25 seconds). The LED display will show the current temperature.
7. Select your desired brew size by pressing one of the three brew size buttons.
8. The machine will begin brewing. Once complete, the flow will stop automatically.
9. Carefully remove your cup and enjoy. Lift the handle to eject the used pod/grounds into the internal waste bin.





Coffee Maker				
Features				
Compatibility	For Nespresso*/Lavazza* Blue/Dolce Gusto* Ground Coffee/ESE 44mm	For K Cup pod*	For Dolce Gusto*	For NES* Original
Expandability	Expandable adapters for Lavazza* A Modo Mio/ K Cup/Caffitaly*	Non-expandable	Non-expandable	Non-expandable
Hot and Cold Brew	✓	✗	✓	✗
Digital Display	✓	✗	✗	✗
Milk Frothing	✓	✗	✓	✗
Coffee Flavours	Espresso, Lungo, Americano, Flat White, milk, tea drinks, and more fancy coffee	Americano	Espresso, Americano, Flat White, latte and more	Espresso, Americano
Cup Size Selection	7 Cup Sizes	6 to 12 oz cup sizes	7 Cup Sizes	2 Cup Sizes
Customized Temperature Settings	Adjustable (85°C - 97°C)	Non-adjustable	Non-adjustable	Non-adjustable

Image: The Gen3 All-in-One system illustrating compatibility with various coffee capsule types and ground coffee.

5.2 Hot & Cold Brew Options

The machine supports both hot and cold brewing modes.

- **Hot Brew Mode:** This is the default mode. The power button light will be red.
- **Cold Brew Mode:** In standby mode, press and hold the power button for 5 seconds until the light turns blue. The display will show 'CO'. This mode uses room-temperature water.

Hot and Cold Brew




How to switch?

Press and hold the power button for 5 s until the power light turns blue, the display shows 'CO'



Note: 'Cold brew' refers to brewing with room temperature water. This machine does not support ice production

Custom TEMP Setting

-  1 Hold the brew button 5 s to enter temperature settings
-  2 The temperature flashes on screen
-  3 Press the cup size button to select temperature
-  4 Setting auto-saves after 3 seconds

Image: Instructions for activating hot and cold brew modes, with visual examples of brewed coffee.

5.3 Adjustable Temperature

Customize your coffee temperature between 85°C and 97°C.

1. Hold the brew button for 5 seconds; the temperature value on the LED display will start flashing.
2. Press the volume buttons (small, medium, large cup icons) to adjust the temperature up or down.
3. The setting will auto-save after 3 seconds of inactivity.



Image: Detailed steps for adjusting the brewing temperature on the machine's display.

5.4 Brew Sizes

The machine offers seven customizable brew sizes. Press the corresponding button for your desired volume.

Gen3 All-in-One Fully Compatible Coffee Maker

Different coffee flavors, the same silky and smooth experience



Image: Chart detailing the seven available brew sizes, from Ristretto to Americano, with approximate brewing times.

5.5 Official Product Video: Main Functions and Operation Guide

Your browser does not support the video tag.

Video: This video demonstrates the main functions and operational steps of the CAPXSNOB Magician1 Mini Espresso Machine, including water filling, adapter insertion, and brewing various coffee types.

6. MAINTENANCE AND CLEANING

6.1 Daily Cleaning

- **Self-Cleaning Cycle:** Insert an empty adapter (without a coffee pod) into the brewing chamber. Place a large cup under the dispenser and select the largest cup size. This flushes the internal water path and brewing chamber.
- **Drip Tray:** Empty and rinse the drip tray and grid daily.
- **Water Reservoir:** Rinse the water reservoir daily and refill with fresh water.
- **Used Pod Bin:** Empty the internal waste bin after each use or when full.

6.2 Ground Coffee Adapter Maintenance

Regular cleaning of the ground coffee adapter is crucial to prevent clogging.

1. After use, disassemble the ground coffee adapter.
2. Rinse all parts under running water.
3. Use the provided cleaning pin to clear any coffee grounds from the plastic filter holes and stainless steel filters.
4. Ensure all parts are dry before reassembling.

Maintenance and Care of Ground Coffee Adapter

CORRECT BREWING GUIDE



MAINTENANCE TIPS

--Insert the empty adapter into the machine and rinse it again
 --Clean the plastic filter holes and the stainless steel filters; otherwise clogging may prevent the coffee from flowing out, or even cause leaks



DISASSEMBLY/MOUNT



Image: Visual instructions for the correct brewing guide, maintenance tips, and disassembly/assembly of the ground coffee adapter.

6.3 Descaling

Depending on water hardness, descaling should be performed every 3-6 months. Refer to the full descaling instructions in the comprehensive user manual (if provided separately) or contact customer support for guidance.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No water coming out after long inactivity	Airlock in the system	Use the inflator (if included) to inject water into the tank inlet. Refer to Section 3.2 of the manual for detailed instructions.
Leaking during brewing	Damaged or unsupported pod; grounds too fine or overfilled (max 15g); handle not fully locked.	Ensure pod is compatible and undamaged. Do not overfill ground coffee. Verify the handle is fully locked.
Cup size doesn't seem right	Minor variation is normal due to pod type, water temperature, and pressure.	This is expected behavior. Adjust brew size manually if needed.
Handle won't lift	High pressure from some pods or too fine ground coffee.	Wait until the pressure fully releases before attempting to lift the handle.
No coffee with Dolce Gusto adapter	Outlet needle on the adapter is clogged.	Use the cleaning pin to clear the outlet needle on the adapter.

Friendly Reminders & Tips

No water coming out after long inactivity?

Use the inflator to inject water into the tank inlet. See Sec. 3.2 of the manual

Cup size doesn't seem right?

Minor variation is normal. It depends on pod type, water temp, and pressure

Handle won't lift?

High pressure from some pods or too fine ground. Wait until the pressure fully releases

Leaking during brewing?

1. Pod may be damaged or not supported.
2. Grounds too fine or overfilled (max 15 g).
3. Ensure handle is fully locked.

No crema or weak crema?

1. Try a finer grind, 13–15g dose, and firmer tamp
2. Check for damage to the adapter

No coffee with DG adapter?

Use the cleaning pin to clear the outlet needle on the adapter

Image: A summary of friendly reminders and tips for troubleshooting common issues.

8. SPECIFICATIONS

- **Brand:** CAPXSNOB
- **Model Name:** Magician1 Mini
- **Item Model Number:** ST-542S
- **Color:** Black
- **Product Dimensions:** 10.7"D x 5.6"W x 11.2"H
- **Water Reservoir Capacity:** 21 oz
- **Pressure:** 19 Bar Italian Pump
- **Preheat Time:** Approximately 20-25 seconds
- **Adjustable Temperature Range:** 85°C – 97°C
- **Brew Sizes:** 7 customizable options
- **Compatibility:** Nespresso Original, Dolce Gusto, Lavazza Blue/A Modo Mio, ESE Pod, Ground Coffee (A Modo Mio, Caffitaly adapters sold separately)
- **Features:** Hot & Cold Brew, LED Display, Adjustable Brew Strength, Adjustable Temperature & Cup Size, Multiple modular capsule adapters.
- **Power Source:** AC adapter
- **Item Weight:** 9.13 pounds

9. WARRANTY AND CUSTOMER SUPPORT

Your CAPXSNOB Magician1 Mini Espresso Machine comes with a 60-day return policy and a 2-year limited warranty. To receive an extended 2-year replacement service and a complimentary starter set of coffee pods, please register your product on the official CAPXSNOB website.

For any questions, troubleshooting assistance, or warranty claims, please contact CAPXSNOB customer support through the official website or your purchase platform.

© 2025 CAPXSNOB. All rights reserved.