

M100 Clip on Ear Headphones

Generic M100 Clip on Ear Headphones User Manual

Model: M100 Clip on Ear Headphones

1. INTRODUCTION

Thank you for choosing the Generic M100 Clip on Ear Headphones. These open-ear earbuds are designed to provide a comfortable audio experience with advanced features. This manual will guide you through the setup, operation, and maintenance of your new headphones.

Key Features:

- **Bone Conduction Technology:** Delivers sound through cheekbones, maintaining environmental awareness.
- **LCD Touch Screen:** Intuitive control for music and calls.
- **Bluetooth 5.4:** Fast and stable wireless connection.
- **Noise Cancelling:** Minimizes background noise for clear audio.
- **Waterproof & Sweatproof:** Durable design for active use.

2. PRODUCT OVERVIEW

The M100 Clip on Ear Headphones come with a charging case that features an LCD touch screen. The package includes the M100 Clip on Ear Headphones themselves.

LCD touch screen One screen control

Unlock rich gameplay
Fingertips play with melodies

HIFI sound effects

Low power chip 5.4

LCD touch screen

Ultra long battery life

AI call noise reduction

Headphone dual host

Acoustic EQ tuning

Call noise reduction CVC

No sensory delay

Comfortable to wear

Type-C Fast Charging



Image: The M100 Clip on Ear Headphones shown with their charging case, highlighting the sleek design.

Hy-Undai M100 Clip on Ear Headphones for Music & Phone Calls, Sport Waterproof & Sweatproof

3. SETUP

3.1 Charging the Headphones and Case

Before first use, fully charge the headphones and the charging case. The charging case has a capacity of 500mAh, and each headphone has a 30mAh capacity. A full charge for the headphones typically takes 1 hour, providing approximately 5 hours of battery life.

1. Place the headphones into the charging case. Ensure they are correctly seated to initiate charging.
2. Connect the charging case to a power source using a compatible USB-C cable (not always included).
3. The LCD screen on the charging case will display the charging status.



Image: Diagram illustrating the ultra-long battery life of the M100 headphones, showing headphone usage time (4-5h), shutdown standby time (2000h), and charging time of charging case (2-3h).

3.2 Bluetooth Pairing

The M100 headphones utilize Bluetooth 5.4 for a stable and efficient connection.

1. Open the charging case. The headphones will automatically enter pairing mode.
2. On your device (e.g., smartphone, tablet), go to Bluetooth settings.

3. Search for available devices and select "M100" from the list.
4. Once connected, the LCD screen on the case may indicate a successful pairing.



Image: A visual representation of the M100 headphone's internal structure, highlighting the Bluetooth 5.4 chip for lossless sound quality.

4. OPERATING INSTRUCTIONS

4.1 Basic Touch Controls

The M100 headphones feature touch-sensitive controls on each earbud.

- **Play/Pause:** Single click on either earbud.
- **Next Song:** Double click on the right earbud.
- **Previous Song:** Double click on the left earbud.
- **Volume Up:** Three clicks on the right earbud.
- **Volume Down:** Three clicks on the left earbud.
- **Answer/End Call:** Double click on either earbud.
- **Reject Incoming Call:** Long press for 2 seconds on either earbud.
- **Activate Voice Assistant:** Long press on either earbud.



Image: A diagram illustrating the various touch operations for the M100 headphones, including song switching, call management, volume control, and voice assistant activation.

4.2 LCD Touch Screen Functions

The charging case's LCD touch screen provides additional control and information.

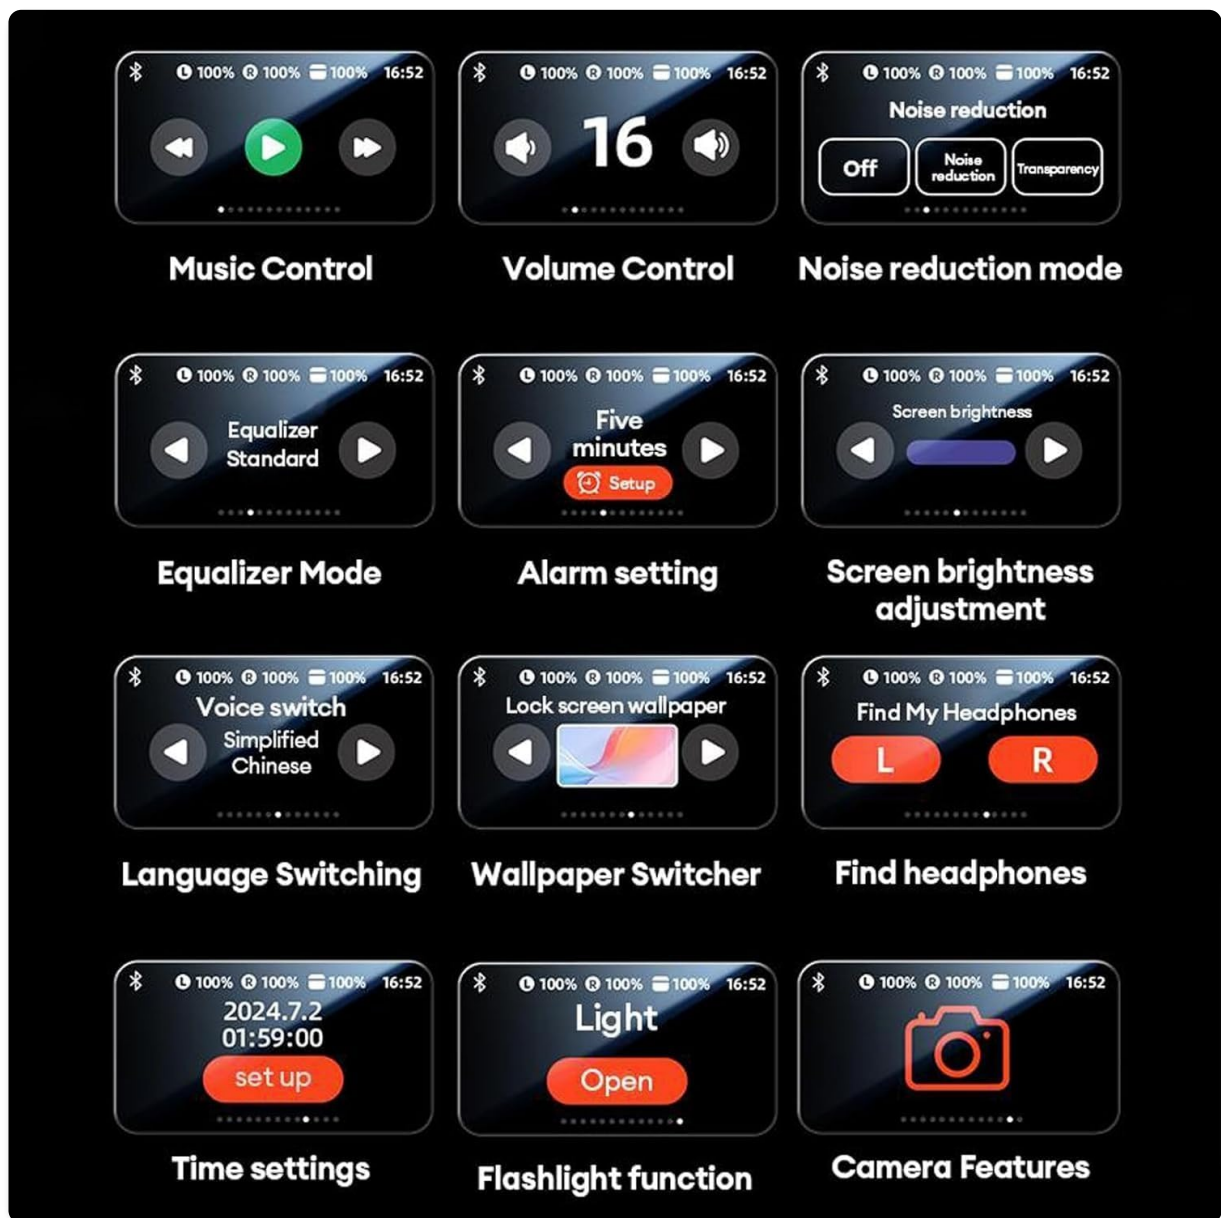


Image: A grid of icons and screens demonstrating the various functions accessible via the M100's LCD touch screen, such as music control, volume, noise reduction, equalizer, alarm, screen brightness, language, wallpaper, find headphones, time settings, flashlight, and camera features.

- **Music Control:** Play, pause, skip tracks directly from the screen.
- **Volume Control:** Adjust audio volume.
- **Noise Reduction Mode:** Toggle between noise reduction and transparency modes.
- **Equalizer Mode:** Select different audio equalizer presets.
- **Alarm Setting:** Set alarms.
- **Screen Brightness Adjustment:** Modify the screen's luminosity.
- **Language Switching:** Change the display language.
- **Wallpaper Switcher:** Customize the screen background.
- **Find Headphones:** Locate misplaced earbuds (if supported).
- **Time Settings:** Adjust date and time.
- **Flashlight Function:** Activate a small light.
- **Camera Features:** Potentially control a connected device's camera (functionality may vary).

4.3 Wearing the Headphones

The M100 headphones are designed for open-ear wear, providing comfort and situational awareness.

1. Gently clip each earbud onto your ear, ensuring the sound outlet is positioned near your ear canal without blocking it.
2. Adjust for a secure and comfortable fit. The bone conduction technology allows sound to transmit effectively without needing to be inserted into the ear canal.

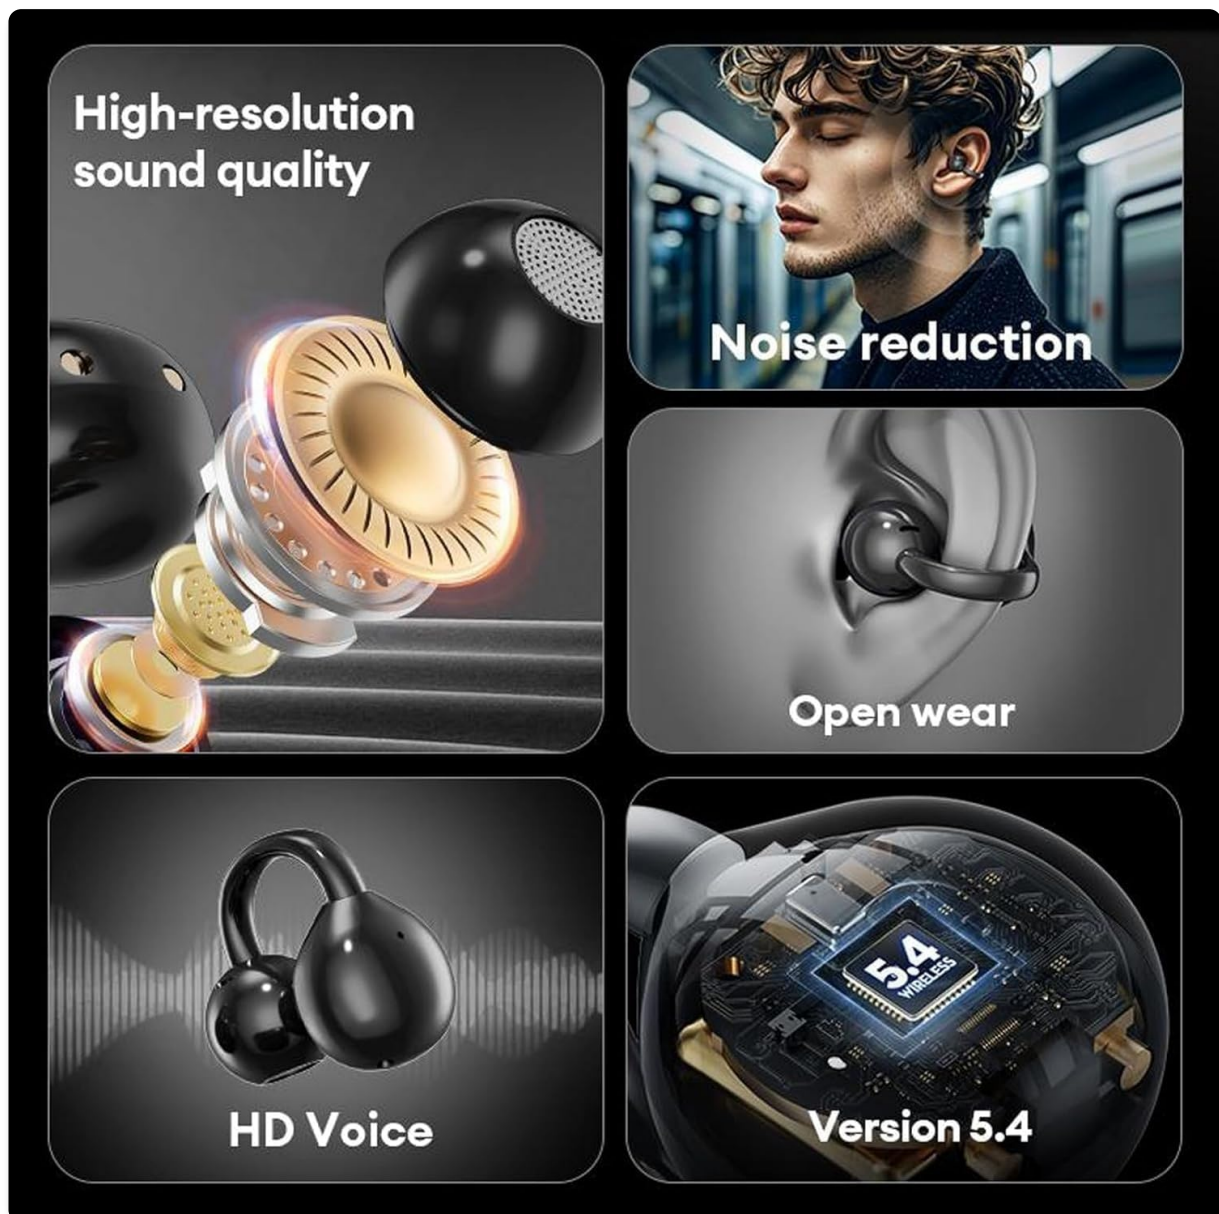


Image: A composite image detailing the M100's features, including high-resolution sound quality, noise reduction, open-ear design, HD Voice, and Bluetooth 5.4 version.

Your browser does not support the video tag.

Video: An official product video showcasing the M100 Clip on Ear Headphones, demonstrating their design and smart screen touch functionality.

5. MAINTENANCE

5.1 Cleaning

Regular cleaning helps maintain the performance and longevity of your headphones.

- Use a soft, dry, lint-free cloth to wipe the headphones and charging case.
- Do not use abrasive cleaners, solvents, or aerosol sprays.
- Avoid getting moisture into any openings.

5.2 Water and Sweat Resistance

The M100 headphones are designed to be waterproof and sweatproof, making them suitable for sports and outdoor activities.



Image: A visual demonstrating the waterproof and sweatproof capabilities of the M100 headphones, showing them in a water environment.

- While resistant to water and sweat, they are not intended for submersion.
- Ensure the charging port is dry before charging to prevent damage.

5.3 Storage

Store the headphones in their charging case when not in use to protect them and keep them charged.

6. TROUBLESHOOTING

If you encounter issues with your M100 headphones, refer to the following common solutions:

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
Headphones not pairing	Ensure headphones are charged. Turn off and on Bluetooth on your device. Forget the device in your Bluetooth settings and try pairing again. Restart both your device and the headphones (by placing them in the case and closing/opening).
No sound	Check volume levels on both headphones and your connected device. Ensure headphones are properly paired and connected. Try playing audio from a different application or source.
Charging issues	Ensure the charging cable is securely connected. Try a different charging cable or power adapter. Clean the charging contacts on both the headphones and the case.
Touch controls unresponsive	Ensure your fingers are clean and dry. Restart the headphones by placing them in the case and closing/opening.

7. SPECIFICATIONS

Key technical specifications for the M100 Clip on Ear Headphones:

- **Model Name:** M100 Clip on Ear Headphones
- **Connectivity Technology:** Wireless (Bluetooth)
- **Bluetooth Version:** 5.4
- **Audio Driver Type:** Bone Conduction Driver
- **Control Method:** Touch
- **Noise Control:** Active Noise Cancellation
- **Water Resistance Level:** Waterproof
- **Battery Life:** 5 Hours (Headphones)
- **Charging Time:** 1 Hour (Headphones)
- **Charging Case Capacity:** 500mAh
- **Headphone Capacity:** 30mAh
- **Material:** Plastic Or Silicone
- **Compatible Devices:** Cellphones
- **Included Components:** M100 Clip on Ear Headphones

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the retailer. Keep your proof of purchase for any warranty claims.