

[Manuals.plus](#) /

› [GarveeHome](#) /

› GarveeHome 71-inch Tall Kitchen Pantry Cabinet User Manual, Model XLJC-PantryWhZhGBci

GarveeHome XLJC-PantryWhZhGBci

GarveeHome 71-inch Tall Kitchen Pantry Cabinet User Manual

Model: XLJC-PantryWhZhGBci | Brand: GarveeHome

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your GarveeHome 71-inch Tall Kitchen Pantry Cabinet. Please read all instructions carefully before assembly and use to ensure safe and proper functionality. Keep this manual for future reference.



Figure 1: The GarveeHome 71-inch Tall Kitchen Pantry Cabinet, showcasing its design with upper glass doors, an open countertop area with a microwave and coffee machine, and lower solid doors with drawers.

SAFETY INFORMATION

WARNING:

- Always assemble and secure the cabinet to a wall using the provided anti-tip components to prevent tipping. Failure to do so can result in serious injury.
- Do not overload the cabinet shelves or drawers, as this may cause instability and potential injury. Distribute weight evenly.
- Keep small parts and packaging materials away from children during assembly to prevent choking hazards.
- Ensure all electrical connections for the charging station are properly secured and plugged into a grounded outlet before use.
- Do not stand or climb on the cabinet.

PACKAGE CONTENTS

Before beginning assembly, verify that all parts listed below are present and undamaged. If any parts are missing or damaged, please contact GarveeHome customer support immediately.

- Cabinet Panels (various sizes)
- Adjustable Shelves (4 units)
- Drawers (3 units)
- Glass Doors (2 units)
- Charging Station (2 AC outlets, 2 USB ports)
- Assembly Hardware (screws, dowels, cam locks, hinges, drawer slides)
- Anti-Tip Kit
- Instruction Manual

SETUP AND ASSEMBLY

Assembly requires two adults. Please follow the numbered steps in the included assembly instructions. A Phillips head screwdriver and a hammer may be required (not included).

Step 1: Unpack and Identify Parts

Carefully unpack all components and lay them out on a clean, soft surface to prevent scratches. Refer to the parts list in your separate assembly guide to identify each piece. Familiarize yourself with the overall structure and dimensions.



Figure 2: An exploded view illustrating the cabinet's overall dimensions (70.1 inches height, 38.6 inches width, 15.6 inches depth) and internal measurements for the upper and lower sections, including the three drawers.

Step 2: Assemble Base Cabinet

Begin by assembling the base cabinet structure. Attach side panels to the bottom panel and back panel using the provided hardware (e.g., cam locks and dowels). Ensure all connections are tight and secure before proceeding.

Step 3: Install Drawers

Assemble the three drawers according to the instructions, ensuring the drawer slides are correctly attached to both the drawer boxes and the cabinet frame. Carefully insert the assembled drawers into their respective slots, testing for smooth operation.

CHARGING STATION

- 2 AC Outlets
- 2 USB Charging Ports



Figure 3: A detailed view of the three large, handleless drawers, designed for organized storage of kitchen utensils such as forks and spoons.

Step 4: Attach Upper Cabinet and Shelves

Mount the upper cabinet section onto the base cabinet, securing it with the designated hardware. Install the adjustable shelves within both the upper and lower cabinet sections. The shelves can be repositioned by moving the support pegs to accommodate items of various heights.

LARGE STORAGE SPACE



Figure 4: An illustration highlighting the cabinet's spacious storage, the flexibility of adjustable shelves, and the sleek handleless design of the doors and drawers.

Step 5: Install Charging Station

Locate the designated cutout for the charging station on the countertop. Carefully insert the unit into the opening and secure it with the provided screws. Ensure the unit is flush with the surface.



Figure 5: A detailed view of the integrated charging station, featuring two standard AC outlets and two USB charging ports, conveniently located on the cabinet's countertop.

Step 6: Secure to Wall

For safety, it is crucial to secure the cabinet to a wall using the anti-tip kit. Follow the specific instructions provided with the anti-tip hardware to properly anchor the cabinet to a wall stud. This prevents accidental tipping and potential injury.

OPERATING INSTRUCTIONS

Adjusting Shelves

The cabinet features adjustable shelves to customize your storage space. To reposition a shelf, first remove all items from it. Then, carefully lift the shelf and remove the four support pegs. Insert the pegs into the desired holes at the new height, ensuring they are fully seated. Finally, place the shelf back onto the pegs, making sure it is level and secure.

Using the Charging Station

After assembly, plug the cabinet's main power cord (connected to the charging station) into a standard, grounded wall outlet. The two AC outlets and two USB ports on the integrated charging station are now ready for use. Connect your kitchen appliances (e.g., microwave, coffee maker) or electronic devices to the appropriate ports. Always ensure devices are compatible with the power output and do not exceed the maximum wattage rating of the charging station.

Door and Drawer Operation

The cabinet features handleless doors and drawers for a sleek design. To open a door or drawer, gently press on the edge to release the latch, then pull it open. To close, push firmly until the door or drawer is flush with the cabinet frame and the latch engages.

MAINTENANCE

- **Cleaning:** Wipe all surfaces with a soft, damp cloth. For stubborn marks, a mild soap solution can be used, followed by wiping with a clean, dry cloth. Avoid abrasive cleaners, harsh chemicals, or excessive moisture, which can damage the finish. For glass doors, use a standard glass cleaner.
- **Hardware Check:** Periodically (e.g., every 3-6 months) check all screws, fasteners, and hinges to ensure they remain tight. Retighten as necessary to maintain stability and proper function.
- **Spills:** Clean up any spills immediately to prevent staining or damage to the engineered wood material.
- **Environmental Conditions:** Avoid placing the cabinet in direct sunlight or near heat sources, as this can cause fading or warping. Maintain a stable room temperature and humidity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Cabinet is wobbly or unstable.	Loose fasteners; not secured to wall; uneven floor.	Ensure all assembly screws are tightened. Secure the cabinet to the wall using the anti-tip kit. Use shims under the base if the floor is uneven.
Drawers do not slide smoothly.	Improperly installed drawer slides; obstruction in track.	Check that drawer slides are correctly aligned and installed. Remove any obstructions from the drawer tracks. Lubricate slides if necessary.
Charging station not working.	Cabinet not plugged into wall outlet; faulty device; tripped circuit breaker.	Verify the cabinet's main power cord is securely plugged into a functional wall outlet. Test the charging station with a different device. Check your home's circuit breaker.
Doors do not close flush or are misaligned.	Hinges misaligned; obstruction; uneven assembly.	Adjust the hinges as per the assembly instructions (usually involves turning screws on the hinge plate). Check for any items obstructing the door's closure. Re-check cabinet squareness.

SPECIFICATIONS

- **Brand:** GarveeHome
- **Model:** XLJC-PantryWhZhGBci
- **Color:** Cream White

- **Product Dimensions (Overall):** 38.6" W x 70.1" H x 19" D (approx. 98cm W x 178cm H x 48cm D)
- **Material:** Engineered Wood
- **Number of Shelves:** 4 (adjustable)
- **Number of Drawers:** 3
- **Special Features:** Integrated Charging Station (2 AC outlets, 2 USB ports), LED Lights, Removable Shelves, Handleless Design
- **Mounting Type:** Floor Mount (requires wall anchoring with anti-tip kit)
- **Assembly Required:** Yes
- **Item Weight:** 124 Pounds (approx. 56.2 kg)
- **Room Type:** Kitchen, Dining Room, Living Room

WARRANTY AND SUPPORT

For warranty information or technical support regarding your GarveeHome 71-inch Tall Kitchen Pantry Cabinet, please refer to your purchase documentation or contact GarveeHome customer service directly. You can also visit the official GarveeHome store on Amazon for further assistance and contact details: [GarveeHome Amazon Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question