

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

---

[Manuals.plus](#) /

› [LEDIARY](#) /

› LEDIARY 23" Caged Ceiling Fan User Manual

## LEDIARY Gold-dusted Black 23 Inch

# LEDIARY 23" Caged Ceiling Fan User Manual

Model: Gold-dusted Black 23 Inch

## PRODUCT OVERVIEW

---

The LEDIARY 23-inch Caged Ceiling Fan with Light is a modern, low-profile bladeless fan designed for various indoor spaces such as kitchens, bedrooms, living rooms, and dining rooms. It features a quiet DC motor, six-speed settings, reversible airflow for year-round comfort, and convenient control via both a remote and a mobile application.



Image: The LEDIARY 23-inch Caged Ceiling Fan, showcasing its design, along with the included remote control and a smartphone displaying the control app interface.

## WHAT'S IN THE BOX

Carefully unpack all components and ensure you have received the following items:

- LEDIARY 23" Caged Ceiling Fan Unit
- Remote Control (with 2 AAA batteries included)
- Instruction Manual
- Mounting Hardware Kit


## SPECIFICATIONS

|       |         |
|-------|---------|
| Brand | LEDIARY |
|-------|---------|

|                         |                                                                                       |
|-------------------------|---------------------------------------------------------------------------------------|
| Model                   | Gold-dusted Black 23 Inch                                                             |
| Color                   | Gold-dusted Black                                                                     |
| Material                | Iron                                                                                  |
| Product Dimensions      | 17"L x 13"W x 7"H (Fan unit)                                                          |
| Item Weight             | 10.5 pounds                                                                           |
| Power Source            | DC Motor                                                                              |
| Control Method          | App, Remote Control                                                                   |
| Number of Light Sources | 4 (E26 Bulb Base)                                                                     |
| Recommended Bulbs       | A19 ST19 T45 (Incandescent up to 60W, LED up to 10W) <i>-Bulbs not included</i>       |
| Special Features        | Remote Controlled, Energy Efficient, Timer (1/2/4/8H), 6 Wind Speeds, Reversible Mode |
| Mounting Type           | Flush Mount                                                                           |



## 23" for Normal Size Room

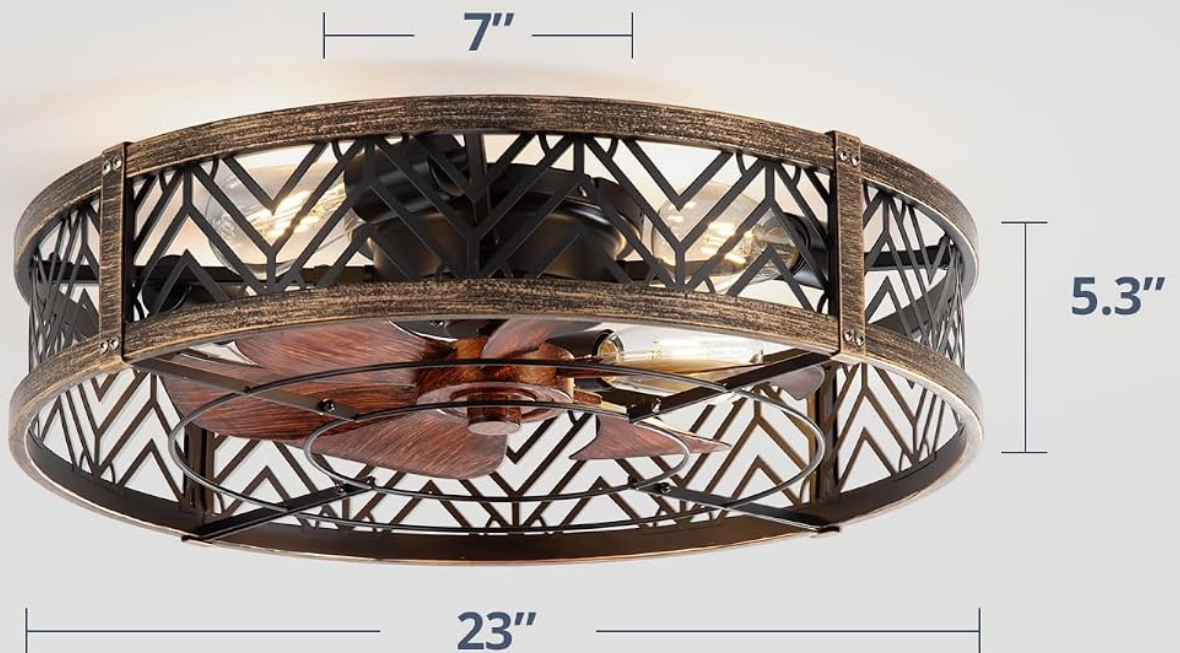

**E26\*4 (Not Included)**

**Recommended Bulbs :**



LED Edison  
Bulb A19



LED Bulb  
ST19



LED Bulb  
A19



LED Edison  
Bulb ST19



Edison LED  
Bulb T14



**E26 Medium Base**

**LED Light Bulb - Max 10W**

Image: Detailed dimensions of the 23-inch fan (23" diameter, 7" height, 5.3" depth from ceiling) and visual examples of compatible E26 bulb types (LED Edison Bulb A19, LED Bulb ST19, LED Bulb A19, LED Edison Bulb ST19, LED Edison Bulb T14).

**SETUP AND INSTALLATION**

Installation should be performed by a qualified electrician or a person with sufficient knowledge of electrical wiring. Always turn off power at the circuit breaker before beginning installation.

1. **Safety First:** Ensure the main power supply to the installation area is turned off at the circuit breaker.
2. **Prepare Mounting Location:** Securely attach the mounting bracket to the ceiling junction box. Ensure the junction box is capable of supporting the fan's weight (approximately 10.5 lbs).
3. **Wiring Connections:** Connect the fan's electrical wires to the household wiring according to local electrical codes. Typically, this involves connecting live, neutral, and ground wires. The fan includes a hook on a wire to temporarily hang the fan during wiring, simplifying the process.
4. **Secure the Fan:** Once wiring is complete, carefully lift the fan unit and secure it to the mounting bracket using the provided screws.
5. **Install Light Bulbs:** Insert four E26 base light bulbs (not included) into the sockets. Recommended bulbs are A19, ST19, or T45, with a maximum of 60W for incandescent or 10W for LED.
6. **Final Assembly:** Ensure all connections are secure and the fan is firmly mounted.

*Note: This fan is designed for flush mount installation.*

## OPERATING INSTRUCTIONS

---

### Remote Control Operation

The fan comes with a remote control for convenient operation. Ensure the included AAA batteries are installed correctly.

# APP & Remote Control

✧ Tips: APP control needs Bluetooth



Speed Control



Timer Setting



Reverse Function



Turn On/Off



Fan On/Off



Image: The remote control for the LEDIARY ceiling fan, showing buttons for speed control, timer settings, reverse function, and light/fan on/off. A smartphone screen next to it displays the corresponding app interface.

- **Power On/Off:** Press the power button to turn the fan and light on or off.
- **Fan Speed Control:** Use the speed buttons (1-6) to adjust the fan's airflow.



# 6 Speeds Adjustable

Choose the Wind Speed According to Your Need



**1-2 Speeds**  
Comfortable Wind



**3-4 Speeds**  
Natural Wind



**5-6 Speeds**  
Cool Wind

Image: Visual guide for fan speed settings: 1-2 speeds for comfortable wind (e.g., sleeping), 3-4 speeds for natural wind (e.g., working), and 5-6 speeds for cool wind (e.g., exercising).

- **Timer Function:** Set the fan to turn off automatically after 1, 2, 4, or 8 hours using the timer buttons.
- **Reversible Mode (F/R):** Press the F/R button to switch between summer and winter modes.
  - **Summer Mode (Downward Airflow):** Creates a cooling breeze.
  - **Winter Mode (Upward Airflow):** Circulates warm air trapped near the ceiling.



# Airflow Circulation

Cool in Summer and Warm in Winter



Image: Illustration of airflow circulation: blue arrows indicate downward airflow for summer mode, and orange arrows indicate upward airflow for winter mode, demonstrating how the fan helps cool in summer and warm in winter.

- **Light On/Off:** Control the light independently from the fan.

## App Control Operation

The fan can also be controlled via a smartphone application. Bluetooth connectivity is required for app control.

1. **Download App:** Scan the QR code in the instruction manual or search for the LEDIARY app in your device's app store.

2. **Pair Device:** Follow the in-app instructions to pair your smartphone with the ceiling fan via Bluetooth.
3. **Control Functions:** The app provides access to all remote control functions, including fan speed, timer, reversible mode, and light control.



# Silent Operation Ceiling Fan



6 Fan Speeds



1/2/4/8H Timing



Powerful Motor



Quiet Operation



0dB  
Mute



15dB  
Library



30dB  
Our Ceiling Fan



40-60dB  
Chat



60-80dB  
Meeting



Image: Infographic highlighting the silent operation of the LEDIARY ceiling fan, showing 6 fan speeds, 1/2/4/8H timing, powerful motor, and

quiet operation (30dB, comparable to a library). A couple is shown sleeping peacefully, illustrating the quietness.

## MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- Cleaning:**  
Wipe the fan and light fixture with a soft, damp cloth. Do not use abrasive cleaners or solvents, as they may damage the finish. Ensure the power is off before cleaning.
- Bulb Replacement:**  
Turn off power at the circuit breaker before replacing light bulbs. Allow bulbs to cool before handling. Use E26 base bulbs as specified in the "Specifications" section.
- Motor Care:**  
The fan is equipped with a pure copper DC motor designed for quiet operation and energy efficiency. No lubrication or special motor maintenance is required.
- Tighten Fasteners:**  
Periodically check all screws and fasteners on the fan and mounting bracket to ensure they are secure. Loose connections can cause noise or instability.

## TROUBLESHOOTING

| Problem                            | Possible Cause                                                                                                                  | Solution                                                                                                                                                             |
|------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Fan does not operate.              | No power supply; Loose wiring; Remote control battery low/dead; Fan not paired with remote/app.                                 | Check circuit breaker and wall switch. Ensure all wiring connections are secure. Replace remote control batteries. Refer to pairing instructions in the full manual. |
| Light does not turn on.            | Bulbs are faulty or not installed correctly; No power to light; Wiring issue.                                                   | Check and replace bulbs. Verify power supply to the light fixture. Inspect wiring connections.                                                                       |
| Fan makes excessive noise.         | Loose mounting screws; Unbalanced fan blades (though this model is bladeless, internal components could be loose); Obstruction. | Ensure all mounting screws are tightened. Check for any loose internal components or obstructions within the cage.                                                   |
| Remote control or app not working. | Batteries dead; Out of range; Interference; App not properly paired.                                                            | Replace batteries. Ensure you are within operating range. Minimize interference from other electronic devices. Re-pair the app or remote.                            |
| Fan does not move enough air.      | Incorrect speed setting; Obstruction to airflow.                                                                                | Increase fan speed. Ensure there are no obstructions around the fan.                                                                                                 |

## WARRANTY AND SUPPORT

LEDIARY products are designed for quality and durability. For specific warranty information, please refer to the warranty card included with your product or contact LEDIARY customer service.

**Customer Service:**

- For technical support or inquiries, please visit the official LEDIARY store on Amazon or their official website.
- LEDIARY is committed to providing 24-hour online technical support and a worry-free warranty.



Image: Infographic detailing LEDIARY's commitment to friendly customer service (24-hour online technical support, worry-free warranty), functional upgrades (available in all seasons, improved utility), and multi-style design (complementing various interior styles).

© 2025 LEDIARY. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B0F1MSWRZ9>

More documents and user manuals: <https://manuals.plus/>