



[Manuals.plus](#) /

> [DLKULJMR](#) /

> DLKULJMR Forklift Control Handle Assy Tiller Head T400C-9 71501000019 Instruction Manual

DLKULJMR T400C-9

DLKULJMR Forklift Control Handle Assy Tiller Head T400C-9 71501000019 for CBD15J-Li3 Instruction Manual

[Introduction](#) [Safety Information](#) [Package Contents](#) [Setup & Installation](#) [Operation](#) [Maintenance](#)
[Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides essential instructions for the proper installation, operation, and maintenance of the DLKULJMR T400C-9 71501000019 Control Handle Assy Tiller Head. This component is designed for use with CBD15J-Li3 intelligent electric pallet jacks and similar material handling equipment. Please read this manual thoroughly before installation and use to ensure safe and efficient operation.



Figure 1: Front view of the DLKULJMR T400C-9 Control Handle Assembly. This image shows the main body of the tiller head with its integrated control buttons and ergonomic grip design.

2. SAFETY INFORMATION

Always prioritize safety when working with industrial equipment. Failure to follow these safety guidelines may result in serious injury or damage to equipment.

- Ensure all power to the forklift or pallet jack is disconnected before attempting installation or maintenance.
- Wear appropriate personal protective equipment (PPE), including safety gloves and eye protection.
- Only qualified personnel should perform installation and repair procedures.
- Verify that all connections are secure and correct before restoring power and operating the equipment.
- Do not modify the control handle assembly. Use only genuine replacement parts.
- Keep hands and clothing clear of moving parts during operation.

3. PACKAGE CONTENTS

Carefully unpack the product and verify that all items are present and undamaged. If any items are missing or damaged, contact your supplier immediately.

- DLKULJMR T400C-9 Control Handle Assy Tiller Head (1 unit)
- Instruction Manual (this document)

4. SETUP & INSTALLATION

This section outlines the general steps for replacing an existing tiller head with the DLKULJMR T400C-9. Specific procedures may vary depending on the exact model of your CBD15J-Li3 pallet jack. Refer to your pallet jack's service manual for detailed instructions.

1. Prepare the Equipment:

- Park the pallet jack on a flat, stable surface.
- Turn off the pallet jack and disconnect its power source (e.g., remove battery or engage emergency stop).
- Ensure the area is clear of obstructions and hazards.

2. Remove the Old Tiller Head:

- Carefully disconnect all electrical connectors from the existing tiller head. Note the position and color coding of each wire for correct re-connection.
- Unbolt or unfasten the old tiller head from the tiller arm. Keep all fasteners for reuse if they are in good condition.
- Remove the old tiller head.

3. Install the New Tiller Head:

- Position the new DLKULJMR T400C-9 tiller head onto the tiller arm.
- Secure the tiller head using the appropriate bolts and fasteners. Ensure it is firmly attached and does not wobble.
- Reconnect all electrical connectors to the new tiller head. Match the wires according to your notes or the pallet jack's wiring diagram. Ensure connections are tight and secure.

4. Test Functionality:

- Reconnect the pallet jack's power source.
- Perform a functional test of all controls on the tiller head (e.g., lift, lower, drive forward/reverse, horn, emergency brake).
- Verify that all functions respond correctly and smoothly.



Figure 2: Side view of the DLKULJMR T400C-9 Control Handle Assembly. This image highlights the connection point for the tiller arm and the overall profile of the unit, crucial for proper installation.

5. OPERATION

The DLKULJMR T400C-9 tiller head integrates the primary controls for your CBD15J-Li3 pallet jack. Familiarize yourself with the layout and function of each control before operating the equipment.

- **Drive Controls:** Typically located on the grips, these allow for forward and reverse movement of the pallet jack.
- **Lift/Lower Buttons:** Dedicated buttons for raising and lowering the forks.
- **Horn Button:** Activates the warning horn.
- **Emergency Reverse Button (Belly Button):** A safety feature that, when pressed, reverses the pallet jack's direction and applies the brake, preventing the operator from being pinned.
- **Key Switch/Power Button:** To turn the pallet jack on or off.

Always operate the pallet jack according to its original manufacturer's instructions and local safety regulations.

6. MAINTENANCE

Regular inspection and maintenance will prolong the life of your tiller head and ensure safe operation.

- **Daily Inspection:** Before each shift, visually inspect the tiller head for any signs of damage, loose connections, or excessive wear. Test all control buttons for proper function.
- **Cleaning:** Keep the tiller head clean and free of dirt, dust, and debris. Use a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Cable Integrity:** Periodically check all cables and wiring connected to the tiller head for fraying, cuts, or damage. Replace damaged cables immediately.
- **Fastener Check:** Ensure all mounting bolts and screws remain tight. Re-tighten as necessary.

For any complex repairs or internal component issues, consult a qualified technician or the pallet jack's service manual.

7. TROUBLESHOOTING

This section provides solutions to common issues you might encounter with the tiller head. For problems not listed here, or if solutions do not resolve the issue, contact technical support.

Problem	Possible Cause	Solution
Controls unresponsive	Loose electrical connection, power off, internal fault.	Check all cable connections. Ensure pallet jack is powered on. If problem persists, consult a technician.
Buttons sticking or difficult to press	Dirt/debris accumulation, worn button mechanism.	Clean around buttons. If wear is evident, replacement may be necessary.
Intermittent control function	Frayed wiring, loose internal components.	Inspect wiring for damage. Ensure tiller head is securely mounted. Contact support if issue continues.

8. SPECIFICATIONS

Key specifications for the DLKULJMR T400C-9 Control Handle Assy Tiller Head:

- **Model:** T400C-9
- **Part Number:** 71501000019
- **Compatibility:** CBD15J-Li3 Intelligently (and similar models)
- **Brand:** DLKULJMR
- **Package Dimensions:** 1.18 x 0.79 x 0.39 inches

- **Item Weight:** 1.76 ounces (approx. 50 Grams)
- **Assembly Required:** No (for the tiller head itself, but installation onto equipment is required)
- **Number of Pieces:** 1

9. WARRANTY & SUPPORT

For warranty information, please refer to the terms and conditions provided by your original point of purchase or contact DLKULJMR customer service. Keep your purchase receipt as proof of purchase.

For technical support or assistance with installation and troubleshooting, please contact your equipment supplier or a certified service technician.

