



[Manuals.plus](#) /

> [RELAX4LIFE](#) /

> RELAX4LIFE Wicker Outdoor Bar Cabinet (Model RXE-72250) Instruction Manual

## RELAX4LIFE RXE-72250

# RELAX4LIFE Wicker Outdoor Bar Cabinet Instruction Manual

Model: RXE-72250

## INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your RELAX4LIFE Wicker Outdoor Bar Cabinet. Please read all instructions carefully before use to ensure proper function and longevity of your product.

## SAFETY INFORMATION

### Important Safety Instructions:

- Always follow assembly instructions carefully to prevent injury.
- Use adjustable foot pads to ensure stability on uneven surfaces.
- Do not overtighten screws until all holes are aligned during assembly.
- Avoid leaving the cabinet outdoors during rainy days to protect the materials.
- Do not exceed the maximum load capacities for the cabinet top, open compartment, and inner shelves.

## PACKAGE CONTENTS

Before assembly, ensure all parts listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- 1 x Rattan Outdoor Storage Cabinet
- 1 x Instruction Manual (this document)
- All necessary hardware for assembly

## ASSEMBLY INSTRUCTIONS


Follow these steps to assemble your outdoor bar cabinet. It is recommended to assemble the unit on a soft, clean surface

to prevent scratches.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out. Verify all components against the parts list provided in the included instruction sheet.
2. **Initial Fastening:** Begin by attaching the main frame components. *Important: Do not fully tighten screws until all parts are loosely assembled and aligned.* This allows for minor adjustments.
3. **Attach Side Panels:** Secure the PE rattan side panels to the metal frame using the provided hardware.
4. **Install Shelves:** Insert the inner shelves into their designated positions. Ensure they are level and securely fastened.
5. **Mount Doors:** Attach the two doors to the cabinet frame. Ensure the magnetic catches align and the doors close securely.
6. **Place Countertop:** Carefully place the acacia wood countertop onto the top of the cabinet. Secure it if fasteners are provided.
7. **Adjust Foot Pads:** Once the cabinet is fully assembled, place it in its desired location. Adjust the foot pads on the bottom of the legs to ensure the cabinet is stable and level on uneven surfaces.
8. **Final Tightening:** Once all parts are aligned and the cabinet is stable, fully tighten all screws.

- Load Capacity of Cabinet Top :  
**100 lbs**
- Load Capacity of Open Compartment :  
**33 lbs**
- Load Capacity of Each Shelf :  
**33 lbs**

# Dimensions

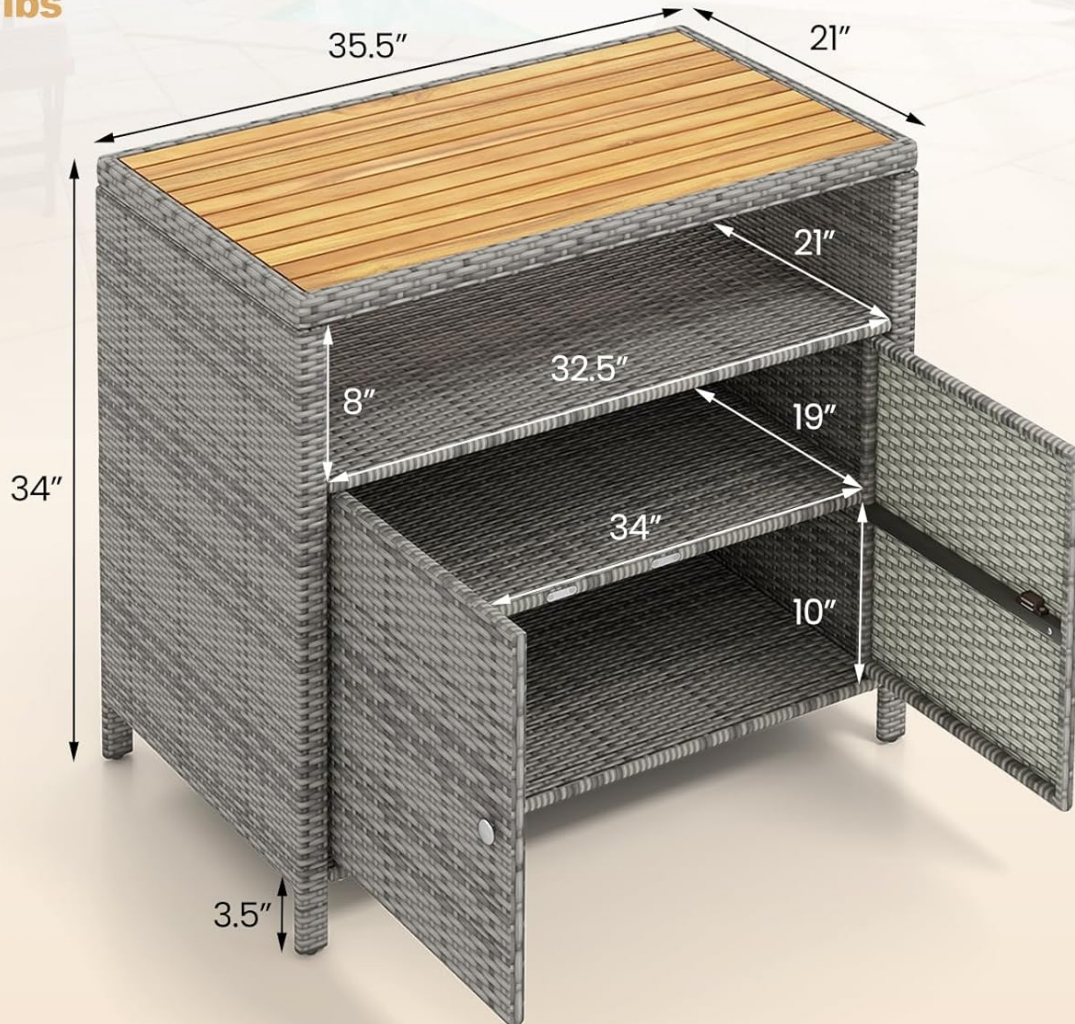

*Image: Dimensions and load capacities of the cabinet. This diagram illustrates the overall size and weight limits for the top, open compartment, and inner shelves.*

# Reliable Metal Structure



Anti-Deformation



Wobble-Free



3.5" bottom clearance to stay away dirty floors

*Image: Detail of the reliable metal structure and adjustable foot pads. The adjustable foot pads help ensure stability on various outdoor terrains.*

## OPERATING INSTRUCTIONS

Your RELAX4LIFE Wicker Outdoor Bar Cabinet is designed for versatile outdoor storage and serving. Here's how to best utilize its features:

- **Countertop Use:** The acacia wood countertop provides a sturdy surface for serving drinks, preparing food, or displaying decorative items. Ensure heavy items are distributed evenly and do not exceed the 100 lbs load capacity.
- **Open Shelf:** The open compartment is ideal for frequently accessed items such as spices, small dishes, or gardening tools. It has a load capacity of 33 lbs.
- **2-Door Cabinet:** The lower cabinet, enclosed by two doors with magnetic catches, offers concealed storage for larger items, dining essentials, or other outdoor supplies. Each inner shelf has a load capacity of 33 lbs. The door knobs provide easy access.

# Ample Storage Space

Create a clutter-free outdoor activity zone



Food



Condiments



Garden  
Tools



Spacious Tabletop

Open Storage Shelf

2-tier Cabinet

Image: The cabinet demonstrating its ample storage space, including the spacious countertop, open storage shelf, and 2-tier cabinet.

# Convenient 2-Door Design

Ensures easy access to stored items



Easy-To-Hold Knobs



Magnetic Catches



*Image: Detail of the convenient 2-door design, highlighting the easy-to-hold knobs and secure magnetic catches.*


## MAINTENANCE

Proper maintenance will extend the life and appearance of your outdoor bar cabinet.

- **Cleaning:** Wipe down the PE rattan and metal frame with a soft cloth and mild soap and water. Rinse thoroughly and dry completely. For the acacia wood countertop, use a damp cloth and a wood-safe cleaner if necessary. Avoid harsh chemicals or abrasive materials.
- **Weather Protection:** While the PE rattan is weather-resistant, it is recommended to cover the cabinet or store it indoors during prolonged periods of heavy rain, snow, or extreme weather conditions to prevent damage to the acacia wood countertop and prolong the life of the product.
- **Wood Care:** The acacia wood countertop is painted for protection. Periodically inspect the wood for any signs of wear or damage. Reapply a suitable outdoor wood sealant or paint as needed to maintain its protective layer.
- **Hardware:** Periodically check all screws and fasteners to ensure they remain tight. Retighten as necessary.

# Premium Materials

- ✓ User-Friendly
- ✓ Long-Lasting

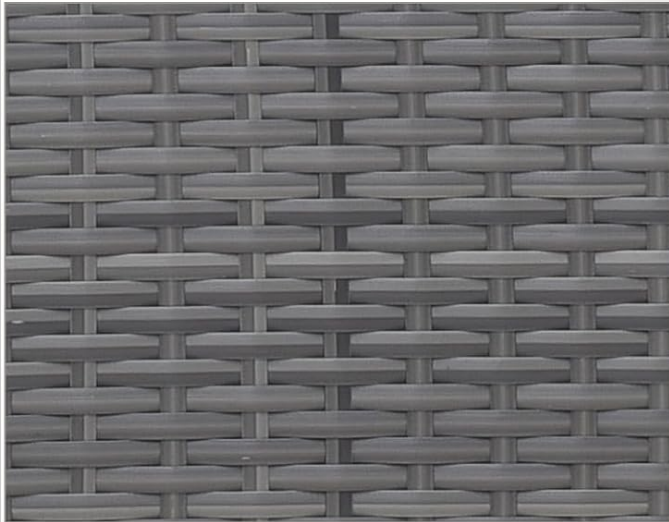

Anti-Fading



Sun-Proof



Elegant



Anti-Crack



Burr-Free



Easy to Clean

Image: Close-up view of the premium materials, including the hand-woven PE rattan and the acacia wood countertop, highlighting their texture and finish.

## TROUBLESHOOTING

If you encounter any issues with your RELAX4LIFE Wicker Outdoor Bar Cabinet, refer to the following common solutions:

Problem	Possible Cause	Solution
Cabinet is wobbly or unstable.	Uneven surface; loose fasteners.	Adjust the foot pads on the bottom of the legs until the cabinet is stable. Check and tighten all assembly screws.
Doors do not close properly.	Misaligned hinges; magnetic catches not engaging.	Ensure hinges are correctly installed and tightened. Check if magnetic catches are aligned with the door frame. Adjust if necessary.

Problem	Possible Cause	Solution
Difficulty during assembly.	Screws overtightened prematurely; misaligned parts.	Loosen all screws, realign parts, and then gradually tighten all screws after all components are in place. Refer to the assembly diagram.

## SPECIFICATIONS

Detailed specifications for your RELAX4LIFE Wicker Outdoor Bar Cabinet:

- **Model Number:** RXE-72250
- **Overall Dimensions:** 35.5" (W) x 21" (D) x 34" (H)
- **Open Compartment Dimensions:** 32.5" (L) x 21" (W) x 8" (H)
- **Inner Shelf Dimensions:** 34" (L) x 19" (W)
- **Inner Shelf Spacing:** 10"
- **Materials:** PE Rattan, Acacia Wood, Metal
- **Color:** Grey
- **Load Capacity (Cabinet Top):** 100 lbs
- **Load Capacity (Open Compartment):** 33 lbs
- **Load Capacity (Each Inner Shelf):** 33 lbs
- **Net Weight:** 37.5 lbs
- **Height off the Ground:** 3.5"
- **Number of Shelves:** 3 (1 open, 2 enclosed)
- **Number of Doors:** 2
- **Features:** Magnetic Door Catches, Adjustable Foot Pads

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided at the point of purchase or visit the official RELAX4LIFE website. This product includes a 30-day return/replacement policy from the date of purchase.

**Manufacturer:** RELAX4LIFE

**Seller:** CASART

