

[Manuals.plus](#) /

› [Eureka](#) /

› Eureka RapidWash 730 Cordless Wet Dry Vacuum Cleaner and Mop User Manual

Eureka RapidWash 730

Eureka RapidWash 730 Cordless Wet Dry Vacuum Cleaner and Mop User Manual

Model: RapidWash 730

1. PRODUCT OVERVIEW

The Eureka RapidWash 730 is a cordless wet dry vacuum cleaner and mop designed for cleaning hard floors. It features a self-cleaning function, anti-tangle brushroll, and a reclinable design for reaching under furniture.

1.1 What's in the Box

Carefully unpack all components and ensure everything is present. Refer to the list below and the accompanying image.



Image Description: An overhead view displaying all components included with the Eureka RapidWash 730. These include the main vacuum unit, a separate handle, a charging base, a clean water tank, a bottle of cleaning solution, a filter, a brush roller, a cleaning brush, and the user manual.

- Main Unit
- Handle
- Docking Station (Charging Base)
- Clean Water Tank
- Cleaning Solution
- Filter
- Brush Roller
- Cleaning Brush
- User's Manual

2. SETUP AND ASSEMBLY


Follow these steps to assemble your Eureka RapidWash 730 before first use.

2.1 Handle Installation

1. Align the handle with the connection port on the main unit.
2. Push the handle firmly into the port until it clicks into place. Ensure it is securely attached.

2.2 Initial Charging

1. Place the main unit onto the docking station.
2. Connect the power adapter to the docking station and plug it into a wall outlet.
3. Allow the unit to charge fully before first use. The display will indicate charging status.

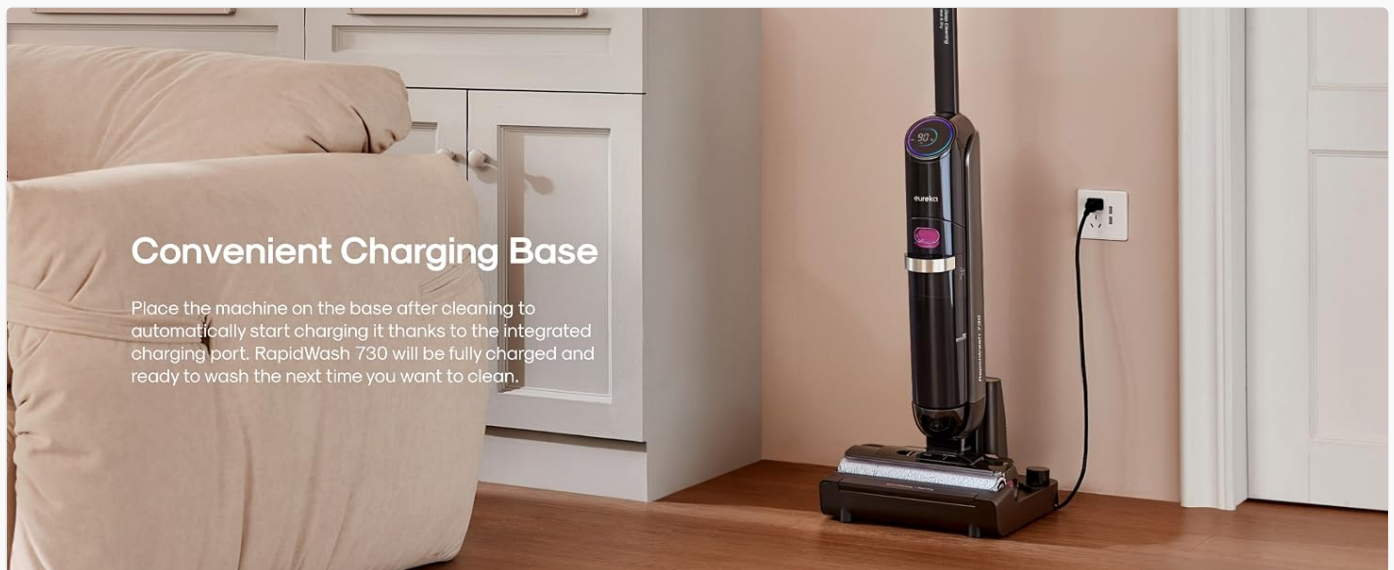

Convenient Charging Base

Place the machine on the base after cleaning to automatically start charging it thanks to the integrated charging port. RapidWash 730 will be fully charged and ready to wash the next time you want to clean.

Image Description: The Eureka RapidWash 730 vacuum cleaner is shown upright on its black charging base, which is plugged into a wall outlet. This illustrates the convenient charging process.

2.3 Filling the Clean Water Tank

1. Remove the clean water tank from the main unit.
2. Open the tank cap and fill with clean water up to the MAX fill line. For enhanced cleaning, add the recommended amount of Eureka cleaning solution.
3. Securely close the tank cap and reinsert the tank into the main unit.

3. OPERATING INSTRUCTIONS

Learn how to effectively use your Eureka RapidWash 730 for various cleaning tasks.

3.1 Power On/Off and Mode Selection

1. Press the power button to turn the unit on.
2. Use the mode selection button to switch between cleaning modes (e.g., Auto Mode, Turbo Mode, Dry Mode).
3. To turn off, press the power button again.

3.2 Auto Mode Operation

In Auto Mode, the vacuum uses smart detection to assess floor dryness and automatically adjusts suction power and

water output for efficient cleaning and battery preservation.



Dual-sided Edge Cleaning

Clean Every Corner Thoroughly.

Image Description: The Eureka RapidWash 730 is shown in operation on a hard floor, with purple light emanating from the brush head, illustrating its smart detection capabilities in Auto Mode. Debris is visible on the floor, indicating the vacuum's cleaning action.

3.3 Edge Cleaning

The innovative "0mm Edge" design ensures the brush makes full contact with walls, allowing for thorough cleaning along edges and in corners.



Image Description: The Eureka RapidWash 730 is positioned against a wall, demonstrating its edge-cleaning capability. The brush head is shown making full contact with the wall, indicating thorough cleaning along the perimeter of the room.

3.4 Reclinable Design

The unit can recline up to 170° to easily clean under furniture such as sofas and beds. The anti-drip water duct prevents backflow during operation.

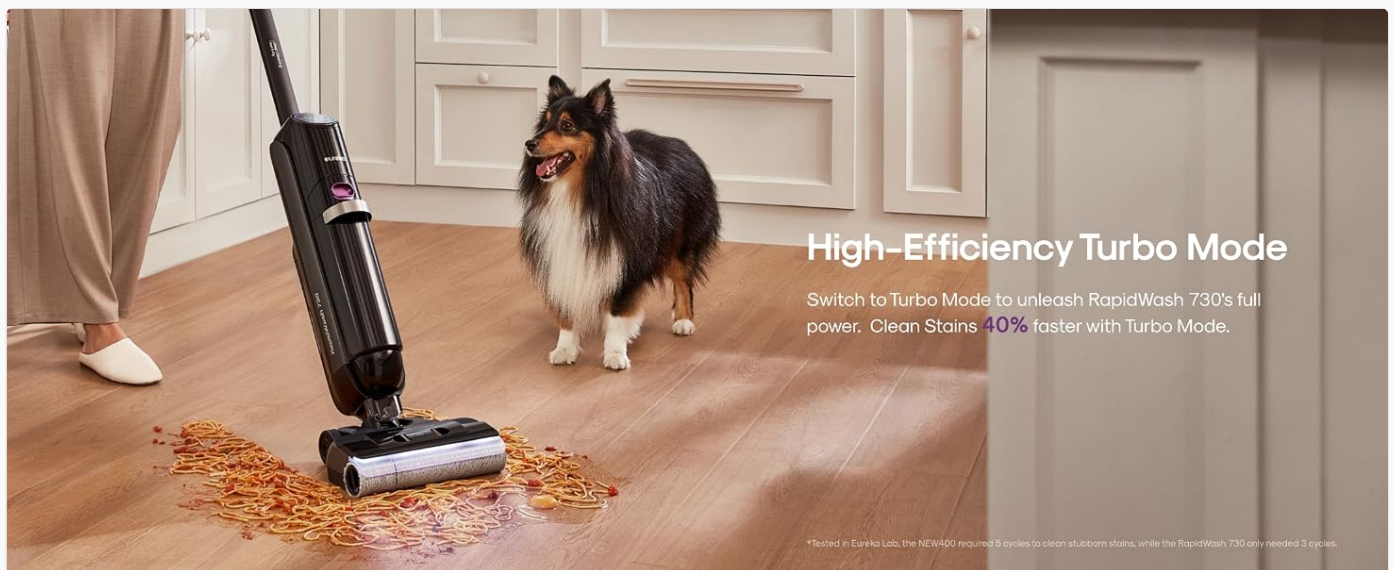


Image Description: The Eureka RapidWash 730 is shown reclined at a 170-degree angle, cleaning under a low coffee table. This illustrates its ability to reach difficult areas beneath furniture.

3.5 Anti-Tangle Brushroll

The Anti-Tangle 2.0 system features a high-density stainless steel comb designed to efficiently remove hair and resist entanglement, particularly useful for pet owners.



Image Description: A close-up view of the Eureka RapidWash 730's brushroll operating on a floor with scattered hair. An inset shows the internal anti-tangle comb mechanism, demonstrating how it prevents hair from wrapping around the brush.

4. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your Eureka RapidWash 730.

4.1 Self-Cleaning Function

1. After cleaning, place the unit on the docking station.
2. Step on the brush head to activate the self-cleaning cycle.
3. The system uses 185°F hot water to clean the roller brush and 176°F hot air for a 5-minute quick dry, preventing odors and bacterial growth.



Image Description: A close-up of the Eureka RapidWash 730's brushroll on its docking station, with steam visible, indicating the heated water self-cleaning process is active. This function helps tackle stubborn stains and thoroughly rinses the mop.

5-Minute Quick Self-Drying

The Quick Dry mode uses hot air to thoroughly dry the brush in just 5 minutes, effectively preventing mold and odors.

*The data provided is based on tests conducted by Eureka Lab. Actual performance may vary.



Image Description: A close-up of the Eureka RapidWash 730's brushroll on its docking station, with hot air currents indicated around it, signifying the 5-minute quick self-drying process. This helps prevent mold and odors.

4.2 Emptying the Dirty Water Tank

1. After each use or when the "empty dirty water tank" voice prompt sounds, remove the dirty water tank from the main unit.
2. Carefully open the tank and dispose of the contents.
3. Rinse the tank thoroughly with clean water and allow it to air dry before reinserting.

4.3 Cleaning the Brush Roller and Filter

1. Periodically remove the brush roller for manual cleaning, especially if excessive debris or hair is present.
2. Use the provided cleaning brush to remove any tangled hair or debris from the brush roller.
3. Rinse the brush roller under running water and allow it to dry completely before reinstallation.
4. Remove and rinse the HEPA filter as needed. Ensure it is completely dry before placing it back into the unit.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your Eureka RapidWash 730.

5.1 Common Issues and Solutions

- **Unit not powering on:**
 - Ensure the unit is fully charged.
 - Check if the handle is securely installed.
- **Poor suction or cleaning performance:**
 - Check if the clean water tank is filled and the dirty water tank is not full.
 - Inspect the brush roller for tangles or obstructions and clean if necessary.
 - Ensure the filter is clean and properly installed.
 - Verify that the water spray nozzles are not clogged.
- **Self-cleaning not activating or completing:**
 - Ensure the unit is correctly placed on the docking station.

- Confirm the dirty water tank is not full and the clean water tank has sufficient water.

• **Unpleasant odor from the unit:**

- Empty and thoroughly rinse the dirty water tank after each use.
- Perform the self-cleaning cycle regularly to clean and dry the brushroll.
- Ensure all components, especially the brushroll and filter, are completely dry before storage.

• **Voice prompts not working or too loud/quiet:**

- Refer to the user interface or specific controls on the unit to adjust voice prompt settings or toggle silent mode.



Informative Voice Prompts

For users who have difficulty seeing the LED screen, the RapidWash 730 also offers voice prompts, so users can toggle between voice notifications and silent mode at any time.

Image Description: A close-up of the Eureka RapidWash 730's upper body, highlighting the display and various voice prompt notifications such as "self-cleaning completed," "please empty dirty water tank," and "low battery, please recharge." This illustrates the informative voice guidance feature.

If issues persist, please contact customer support.

6. SPECIFICATIONS

Detailed technical specifications for the Eureka RapidWash 730.

Feature	Specification
Brand	Eureka
Model Name	RapidWash 730
Special Feature	Washable Filter, Wet/Dry
Filter Type	HEPA Filter
Included Components	Accessory Kit, Adapter
Cordless	Yes
Clean Water Tank Capacity	700 ml
Dirty Water Tank Capacity	600 ml
Wattage	350 watts

Feature	Specification
Charging Time	5 Hours
Maximum Suction	20000 Picometer
Form Factor	Stick
Color	Purple
Product Dimensions	9"L x 10"W x 45"H
Noise Level	74 dB
Battery Life	Up to 40 minutes
Item Weight	11.5 pounds
Indoor/Outdoor Usage	Indoor, Outdoor
UPC	840296515518

7. WARRANTY AND SUPPORT

For warranty information or technical assistance, please contact Eureka customer service.

- **Customer Service:** 1-800-282-2886
- **Online Support:** Visit the official Eureka website for FAQs and additional resources.

© 2025 Eureka. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question