

[Manuals.plus](#) /

› [RisoPhy](#) /

› RisoPhy Wireless Gaming Keyboard User Manual

RisoPhy Creamy keyboard with number pad

RisoPhy Wireless Gaming Keyboard

USER MANUAL

Introduction

Thank you for choosing the RisoPhy Wireless Gaming Keyboard. This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your new keyboard. Please read this manual carefully to ensure optimal performance and longevity of your device.



The RisoPhy Wireless Gaming Keyboard, featuring a full 104-key layout and vibrant RGB backlighting.

Setup

Your RisoPhy Wireless Gaming Keyboard offers three versatile connection modes: wired USB-C, 2.4GHz wireless, and Bluetooth 5.0/3.0. Follow the steps below to connect your keyboard.

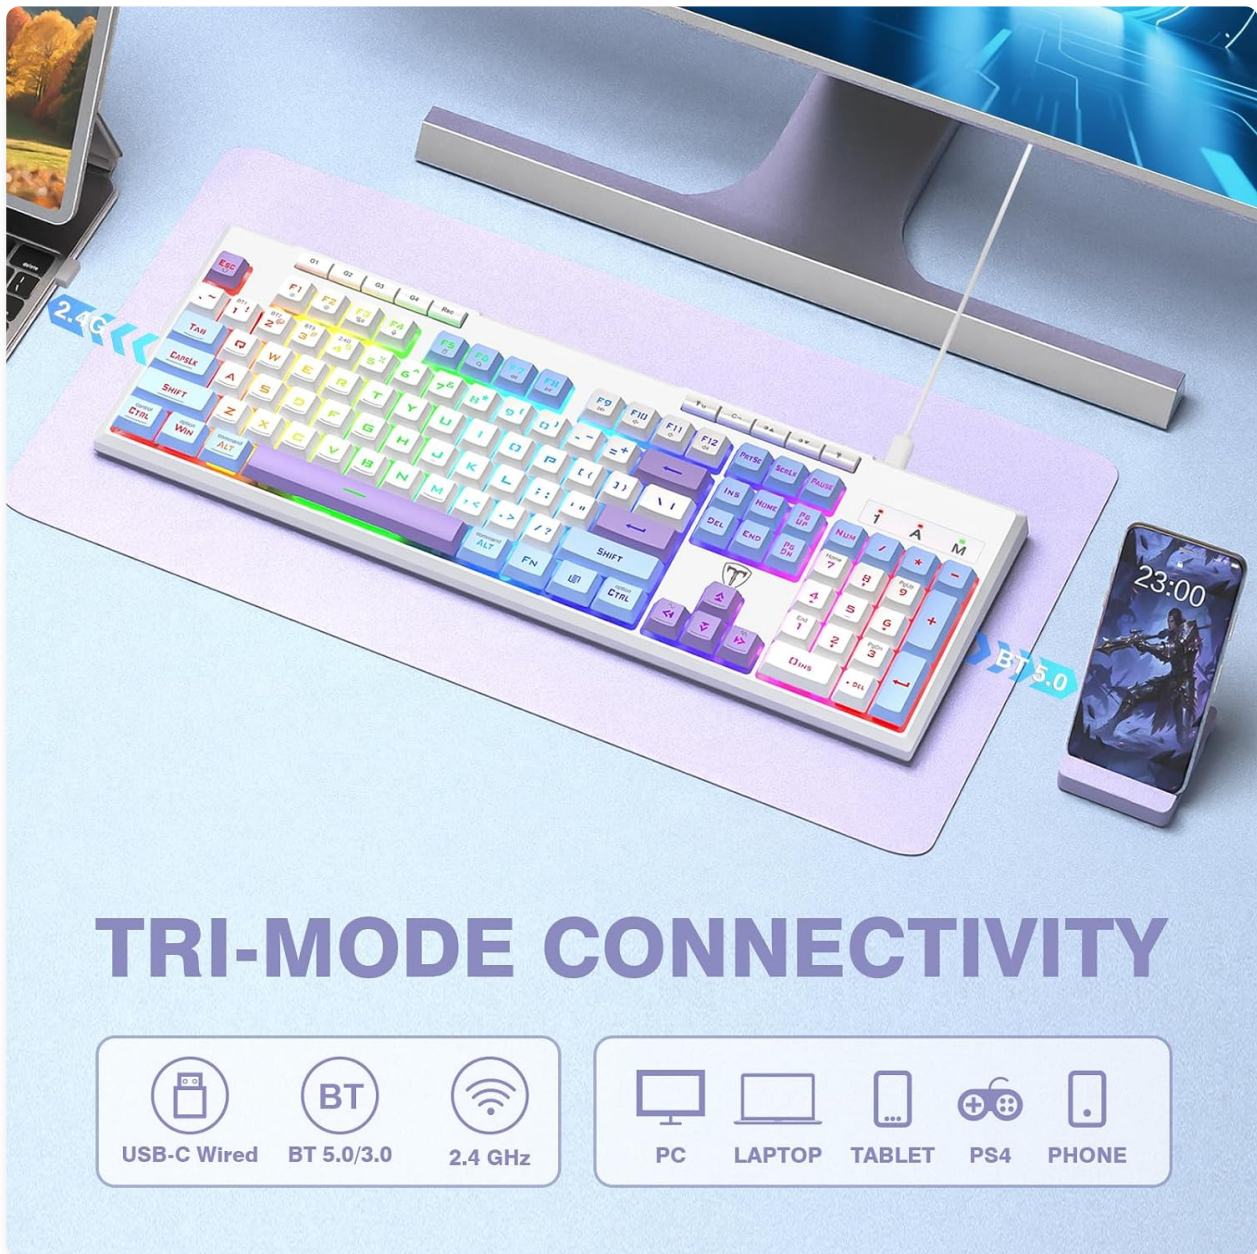


Illustration of the keyboard's tri-mode connectivity, supporting USB-C wired, Bluetooth, and 2.4GHz wireless connections.

1. Wired USB-C Connection

- Locate the USB-C port on the keyboard and the USB-A port on your computer.
- Connect the provided USB-C cable to the keyboard and the USB-A end to your computer.
- The keyboard will be automatically recognized and ready for use. This mode also charges the internal battery.

2. 2.4GHz Wireless Connection

- Locate the 2.4GHz USB receiver, usually stored in a compartment on the underside of the keyboard.
- Plug the USB receiver into an available USB-A port on your computer.
- On the keyboard, locate the mode switch (usually on the back or side) and set it to the '2.4G' position.
- The keyboard should connect automatically.

3. Bluetooth Connection (BT 5.0/3.0)

- On the keyboard, set the mode switch to the 'BT' position.

- Press and hold **FN + Q**, **FN + W**, or **FN + E** for 3-5 seconds to enter pairing mode for BT1, BT2, or BT3 respectively. The 'M' indicator light will flash rapidly.
- On your device (PC, Mac, Tablet, Phone), open Bluetooth settings and search for new devices.
- Select 'BT5.0 Keyboard' or similar from the list to pair. The 'M' indicator light will stop flashing once connected.
- You can pair up to three different devices and switch between them using **FN + Q/W/E**.

Battery Charging

The keyboard features a built-in 4000mAh rechargeable battery. Connect the keyboard via USB-C cable to a computer or a USB power adapter (not included) to charge. The indicator light will show charging status and turn off when fully charged.

Operating Instructions

RGB Backlighting Control

Your keyboard offers vibrant RGB backlighting with multiple effects and customization options.

16.8 MILLION RGB BACKLIGHT



Rainbow
RGB Backlit



8 Backlight
Effects



7 Single
Colors



5 Brightness/
Speeds



The keyboard features 16.8 million RGB backlight options, including 8 dynamic effects, 7 single colors, and 5 adjustable brightness/speed levels.

- Press the **Lightbulb (M)** key to cycle through 8 dynamic lighting modes and 7 solid color options.
- Press **FN + Up Arrow** or **FN + Down Arrow** to adjust backlight brightness (5 levels).
- Press **FN + Left Arrow** or **FN + Right Arrow** to adjust the speed of dynamic lighting effects.
- To turn off the backlight, cycle through the modes until the lights are off, or press the **Lightbulb (M)** key until the backlight is disabled.

Macro Key Customization

The keyboard is equipped with 4 dedicated macro keys (G1-G4) that support recording and editing complex command sequences.

MACRO CUSTOMIZED KEYS & INDIVIDUAL LIGHT CONTROL KEYS

Make gaming controls easier and more natural



Dedicated macro keys (G1-G4) and light control keys for enhanced gaming and productivity.

- To record a macro: Press **Rec**, then press the desired macro key **G1/G2/G3/G4**. The 'M' indicator light will flash.
- Type the sequence of keys you wish to record.
- Press **Rec** again to save the macro. The 'M' indicator light will stop flashing.
- To play a macro: Simply press the assigned macro key **G1/G2/G3/G4**.

Multimedia Keys

Access common multimedia functions quickly using the dedicated multimedia shortcuts.

- The F1-F12 keys have secondary multimedia functions. Press **FN + F-key** to activate them.
- Examples include: **FN + F5** (Previous Track), **FN + F6** (Next Track), **FN + F7** (Play/Pause), **FN + F8** (Stop), **FN + F9** (Mute), **FN + F10** (Volume Down), **FN + F11** (Volume Up).

Anti-Ghosting and Win Lock Function

The keyboard features 26-key anti-ghosting technology to ensure all keystrokes register accurately during intense gaming sessions.

26 ANTI-GHOSTING KEYS

Smooth switching for all your needs

12 Multimedia shortcuts



Visual representation of the 26-key anti-ghosting feature, ensuring smooth and accurate input.

- To activate/deactivate the Win Lock function (disables the Windows key to prevent accidental presses during gaming), press **FN + Win**.

Maintenance

Proper care will extend the life of your RisoPhy Wireless Gaming Keyboard.

- **Cleaning:** Use a soft, dry cloth to wipe down the keyboard surface. For deeper cleaning, use a can of compressed air to remove dust and debris from between the keys. Avoid using harsh chemicals or abrasive materials.
- **Storage:** When not in use for extended periods, store the keyboard in a cool, dry place away from direct sunlight and extreme temperatures.
- **Spill Resistance:** While designed with some spill resistance, it is not waterproof. Avoid exposing the keyboard to excessive liquids. In case of a spill, immediately disconnect the keyboard, wipe it dry, and allow it to air dry completely before reconnecting.

Troubleshooting

If you encounter issues with your keyboard, please refer to the following common solutions:

Problem	Solution
Keyboard not responding (Wired)	Ensure the USB-C cable is securely connected to both the keyboard and the computer. Try a different USB port or cable.
Keyboard not responding (2.4GHz Wireless)	Ensure the 2.4GHz USB receiver is properly plugged into a USB port. Check that the keyboard mode switch is set to '2.4G'. Try moving the keyboard closer to the receiver.
Keyboard not responding (Bluetooth)	Ensure the keyboard mode switch is set to 'BT'. Re-enter pairing mode FN + Q/W/E and re-pair with your device. Ensure Bluetooth is enabled on your device.
RGB backlight not working or dim	Check battery level and charge the keyboard if low. Adjust brightness using FN + Up/Down Arrow . Cycle through lighting modes using the Lightbulb (M) key.
Macro keys not recording/playing	Ensure you are following the correct macro recording steps (Press Rec , then G1-G4 , input sequence, then Rec again).
Keys require hard press to register	This is a membrane keyboard, not mechanical. Ensure full key press. If issue persists, contact support.

Specifications

Feature	Detail
Product Dimensions	175.19 x 74.8 x 12.99 inches
Item Weight	1.98 pounds
Manufacturer	RisoPhy
Item model number	Creamy keyboard with number pad
Brand	RisoPhy
Compatible Devices	PC, Mac, Tablet
Connectivity Technology	USB-C, BT5.0/3.0, 2.4G
Keyboard Description	Gaming, Multimedia, Macro
Recommended Uses For Product	Gaming
Special Feature	RGB Backlit, Spill Resistant, Media Keys, Macro keys, Anti-Ghost Keys
Number of Keys	104

Feature	Detail
Keyboard backlighting color support	RGB
Style	Game, Daily work, Everyday Use

Warranty and Support

RisoPhy products are designed for reliability and performance. For any warranty claims or technical support, please refer to the contact information provided with your product packaging or visit the official RisoPhy website. Please retain your proof of purchase for warranty service.

What's in the Box:

- RisoPhy Wireless Gaming Keyboard
- USB Cable