

Vacfore Vacfore S5N

Vacfore S5N Cordless Stick Vacuum Cleaner User Manual

Model: Vacfore S5N

1. INTRODUCTION

Thank you for choosing the Vacfore S5N Cordless Stick Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read it thoroughly before first use and retain it for future reference.

The Vacfore S5N is designed for versatile cleaning across various surfaces, featuring powerful suction, a long-lasting battery, and a green LED headlight for enhanced visibility of dust and debris.

2. SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (e.g., chlorine bleach, ammonia cleaner, drain cleaner).

- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Store the appliance indoors.
- Do not immerse the vacuum cleaner in water or other liquids.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- Main Vacuum Unit (Motor & Dust Cup Assembly)
- Extension Wand
- Motorized Floor Brush with Green LED Headlight
- Crevice Tool
- 2-in-1 Brush Tool
- Wall Mount
- Power Adapter/Charger
- Washable HEPA Filter (pre-installed or spare)
- User Manual



Figure 3.1: All components of the Vacfore S5N Cordless Stick Vacuum Cleaner.

4. ASSEMBLY AND SETUP

4.1 Assembling the Vacuum

1. Insert the extension wand into the main vacuum unit until it clicks securely into place.
2. Attach the motorized floor brush to the other end of the extension wand, ensuring it clicks securely.
3. For handheld use, attach desired accessories (crevice tool or 2-in-1 brush) directly to the main vacuum unit.

4.2 Initial Charging

Before first use, fully charge the vacuum cleaner. Connect the power adapter to the charging port on the main unit or the wall mount, then plug it into a power outlet. The charging indicator lights will show the charging status. A full charge typically takes several hours.

4.3 Wall Mount Installation (Optional)

The included wall mount allows for convenient storage and charging. Choose a suitable location near a

power outlet. Secure the wall mount to the wall using appropriate screws and anchors (not included, depending on wall type). Once installed, the vacuum can be hung on the mount for storage and charging.



Figure 4.1: The Vacfore S5N vacuum cleaner stored and charging on its wall mount.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off and Suction Modes

Press the power button on the main unit to turn the vacuum on. Press it again to cycle through the available suction modes (typically two speeds: standard and max). Press the power button a third time to turn the vacuum off.

5.2 Using the Green LED Headlight

The motorized floor brush features a green LED headlight that automatically illuminates when the vacuum is in operation. This light enhances visibility, making hidden dust, pet hair, and debris on various floor types more apparent, especially in dimly lit areas or under furniture.

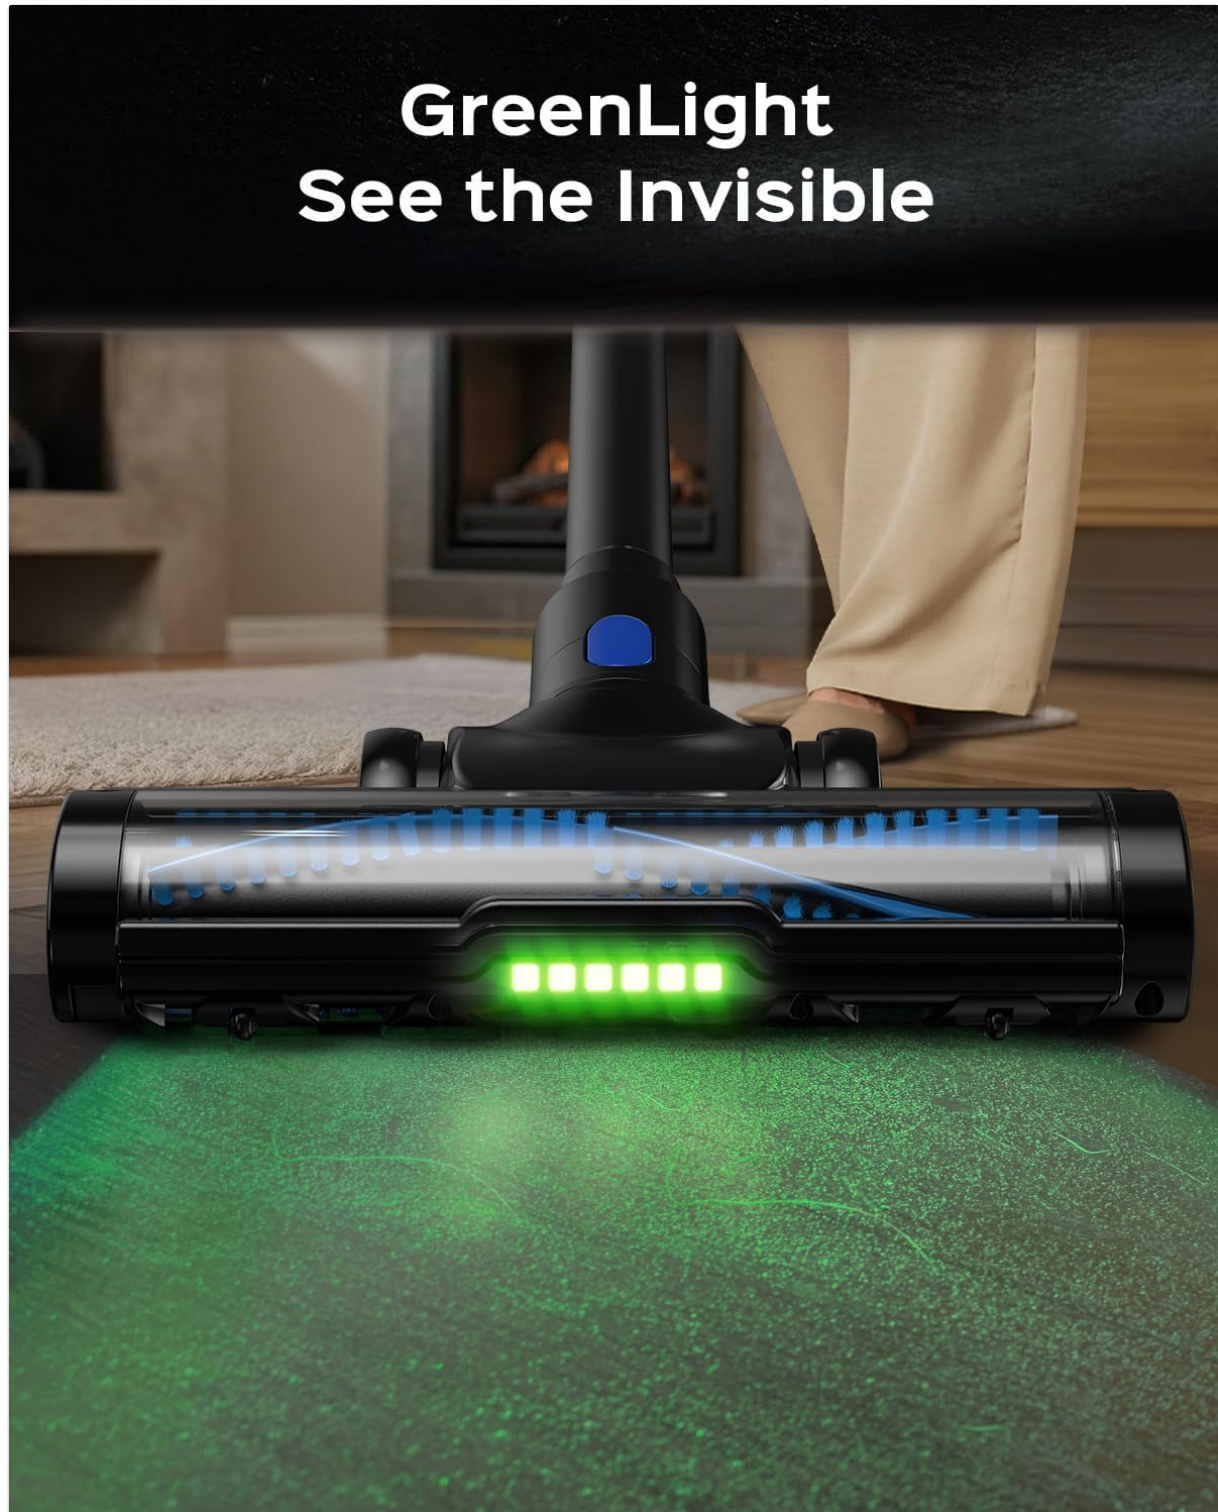


Figure 5.1: Green LED headlight revealing dust on a hard floor surface.

5.3 Cleaning Different Surfaces

- **Hard Floors and Low-Pile Carpets:** Use the motorized floor brush for effective cleaning of dust, crumbs, and pet hair. The brush roll is designed to handle both hard surfaces and carpets.
- **Corners and Edges:** Attach the crevice tool directly to the main unit or extension wand to reach tight spaces, corners, and along baseboards.
- **Upholstery and Delicate Surfaces:** Use the 2-in-1 brush tool for cleaning furniture, curtains, and

other delicate items. The brush attachment helps to gently dislodge dust.

- **Under Furniture:** The flexible design of the floor brush allows it to swivel and lie flat, enabling easy cleaning under low-lying furniture.



Figure 5.2: Vacuum in use, demonstrating powerful suction on pet hair and debris.



Figure 5.3: The vacuum's flexible head allows for easy cleaning under furniture.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

6.1 Emptying the Dust Cup

Empty the 1-liter dust cup when the debris reaches the MAX fill line or after each use. To empty, detach the dust cup from the main unit (if applicable) and press the release button to open the bottom flap, allowing debris to fall into a waste bin.

1L Dust Cup with One-Tap Emptying.



Figure 6.1: Easy one-tap emptying of the dust cup.

6.2 Cleaning the HEPA Filter

The HEPA filter is washable and designed for 180-day maintenance. Remove the filter from the dust cup. Rinse it under cold running water until the water runs clear. Allow the filter to air dry completely for at least 24 hours before reinserting it into the vacuum. Do not use a dryer or other heating devices to dry the filter.



Figure 6.2: Steps for cleaning the washable HEPA filter.

6.3 Cleaning the Brush Roll

Periodically check the motorized floor brush for tangled hair or debris. To clean, turn off the vacuum and remove the brush roll cover (refer to product diagram for specific release mechanism). Carefully remove any tangled hair or fibers from the brush roll using scissors if necessary. Reassemble the brush roll and cover securely.

7. TROUBLESHOOTING

If you encounter issues with your Vacfore S5N, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is depleted Power button not pressed correctly	Charge the battery fully Ensure the power button is pressed firmly
Low suction power	Dust cup is full Filter is clogged Hose/nozzle is blocked Brush roll is obstructed	Empty the dust cup Clean or replace the HEPA filter Check and clear any blockages in the hose or nozzle Clean the brush roll
Brush roll not spinning	Brush roll is jammed Connection issue with floor brush	Remove any obstructions from the brush roll Ensure the floor brush is securely attached to the extension wand/main unit
Short battery runtime	Battery not fully charged Operating in Max suction mode Battery degradation	Ensure battery is fully charged before use Use standard mode for longer runtime Contact customer support if battery life significantly decreases over time
Unusual noise during operation	Blockage in airflow path Foreign object in brush roll	Check for and remove any blockages Inspect and clear the brush roll

8. SPECIFICATIONS

Feature	Detail
Brand	Vacfore
Model Name	Vacfore S5N
Special Features	55 Min Runtime, 1500 ft² Coverage, Green LED Light for Dust Detection, 20Kpa High Suction, Lightweight (approx. 2.7 lbs main unit), Quiet Operation (62dB), Two More Attachments, Charging Wall Mount, 5-Layer Filtration, 1 L Dust Cup with 180-Day HEPA Filter
Included Components	Battery, Main Unit, Extension Wand, Motorized Floor Brush, Crevice Tool, 2-in-1 Brush Tool, Wall Mount, Power Adapter
Dust Cup Capacity	1 Liter
Wattage	150 watts
Form Factor	Stick
Color	Black & Blue
Product Dimensions (L x W x H)	10.1" x 8.5" x 40.7"

9. WARRANTY INFORMATION

For detailed warranty information regarding your Vacfore S5N Cordless Stick Vacuum Cleaner, please refer to the warranty card included with your product packaging or visit the official Vacfore website. Warranty terms and conditions may vary by region and retailer.

10. CUSTOMER SUPPORT

Should you require further assistance, have questions about your product, or need to report an issue, please contact Vacfore customer support. You can typically find contact information on the official Vacfore website or through the retailer where you purchased the product.