

Ariete 1782

Ariete 1782 Gourmet Pro Moderna Food Processor User Manual

Model: 1782/02

1. INTRODUCTION

Thank you for purchasing the Ariete 1782 Gourmet Pro Moderna Food Processor. This appliance is designed to simplify your food preparation tasks with its powerful motor and versatile attachments. Please read this manual carefully before first use to ensure safe and efficient operation, and retain it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not immerse the motor base in water or other liquids.
- Keep hands and utensils away from moving blades during operation to prevent injury.
- Always unplug the appliance from the power outlet before assembling, disassembling, or cleaning.
- Ensure the lid is securely locked in place before operating the food processor or blender.
- Do not process hot liquids in the blender as they may cause pressure buildup and result in injury.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Children should be supervised to ensure they do not play with the appliance.
- Avoid contact with moving parts.
- Never use accessories or parts from other manufacturers.

3. PACKAGE CONTENTS

Carefully unpack all components and check for any damage. If any parts are missing or damaged, contact your retailer immediately.

- Motor Base
- 3-Liter Food Processor Bowl

- Food Processor Lid with Pusher
- Stainless Steel Chopping Blade
- Disc with 3 Interchangeable Stainless Steel Blades (for slicing, shredding, grating)
- Kneading Blade
- Emulsifier Accessory
- 2-Liter Blender Jar
- Blender Lid with Measuring Cup
- Juicer Attachment
- Instruction Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the main components of your Ariete Gourmet Pro Moderna Food Processor.



Figure 1: Ariete 1782 Gourmet Pro Moderna Food Processor and Blender. This image displays the complete

appliance, featuring the motor base, the 3-liter food processor bowl with its lid and pusher, and the 2-liter blender jar with its lid.

2 tazze

CHOPPER 3L



FRULLATORE 2L



Figure 2: Comparison of the 3-liter Chopper and 2-liter Blender Cups. This image highlights the two main processing containers: the larger 3-liter food processor bowl (labeled 'CHOPPER 3L') and the 2-liter blender jar (labeled 'FRULLATORE 2L'), showcasing their distinct capacities and designs.

Control Panel

- **Speed Dial:** Adjusts the processing speed (2 speeds).
- **Pulse Function:** Provides short bursts of power for precise control.

5. ASSEMBLY AND SETUP

Before first use, wash all removable parts in warm, soapy water, rinse thoroughly, and dry. Ensure the motor

base is unplugged from the power outlet.

5.1. Assembling the Food Processor

1. Place the food processor bowl onto the motor base, aligning the bowl handle with the locking mechanism on the base. Turn clockwise until it locks securely.
2. Insert the desired blade or disc onto the central shaft inside the bowl. Ensure it sits firmly.
3. Add your ingredients to the bowl.
4. Place the lid onto the bowl, aligning the lid tab with the handle, and turn clockwise until it locks. The appliance will not operate unless the lid is correctly locked.
5. Insert the pusher into the feed tube on the lid.

5.2. Assembling the Blender

1. Ensure the blender blade assembly is securely attached to the bottom of the blender jar.
2. Add your ingredients to the blender jar. Do not exceed the maximum fill line.
3. Place the blender lid onto the jar and turn clockwise to secure. Insert the measuring cup into the lid opening.
4. Place the assembled blender jar onto the motor base, aligning it correctly.

6. OPERATION

Always ensure the appliance is properly assembled and locked before plugging it in and operating.

6.1. Using the Food Processor

1. With the food processor assembled and ingredients added, plug the appliance into a power outlet.
2. Turn the speed dial to the desired speed (1 or 2) or to the 'Pulse' setting for short bursts.
3. For continuous operation, select speed 1 or 2. For intermittent processing, use the 'Pulse' function.
4. When using the slicing/shredding disc, feed ingredients through the feed tube using the pusher. Do not force ingredients.
5. Once processing is complete, turn the speed dial to 'OFF' and unplug the appliance.
6. Wait for the blades to stop completely before unlocking and removing the lid and bowl.



Figure 3: Food Processor in Operation. This image shows the food processor actively processing ingredients, with a hand guiding a cucumber through the feed tube using the pusher, demonstrating its slicing or grating function.

6.2. Using the Blender

1. With the blender assembled and ingredients added, plug the appliance into a power outlet.
2. Turn the speed dial to the desired speed (1 or 2) or to the 'Pulse' setting for short bursts.
3. For best results with ice or hard ingredients, use the 'Pulse' function initially.
4. Do not operate the blender continuously for more than 60 seconds. Allow it to rest between cycles.
5. Once blending is complete, turn the speed dial to 'OFF' and unplug the appliance.
6. Wait for the blades to stop completely before unlocking and removing the blender jar.



Figure 4: Blender in Operation. This image depicts the blender jar filled with ice, positioned on the motor base, surrounded by various fruits and drinks, illustrating its capability for preparing smoothies and crushed ice beverages.

6.3. Using the Juicer Attachment

Specific instructions for the juicer attachment will vary. Generally, attach the juicer component to the motor base or food processor bowl as indicated in the assembly section. Place a glass or container to collect juice. Press fruit onto the reamer while the motor is running.

7. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your appliance. Always unplug the appliance before cleaning.

- **Motor Base:** Wipe the motor base with a damp cloth. Do not immerse it in water.
- **Removable Parts:** The food processor bowl, blender jar, lids, blades, and discs are dishwasher safe. Alternatively, wash them in warm, soapy water, rinse thoroughly, and dry immediately.
- **Blades:** Handle blades with extreme care as they are very sharp. Use a brush to clean if necessary.
- **Storage:** Store the appliance and its accessories in a clean, dry place.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Bowl/lid not locked; Overload protection activated.	Ensure power cord is securely plugged in. Check that the bowl and lid are correctly locked. Unplug, remove some ingredients, wait 30 minutes, then try again.
Motor stops during operation.	Overload protection activated; Too many ingredients or ingredients are too hard.	Unplug the appliance. Remove some ingredients. Wait 30 minutes for the motor to cool down before restarting.
Ingredients are not processed evenly.	Too many ingredients; Not enough liquid in blender; Incorrect speed.	Process in smaller batches. Add more liquid to the blender. Adjust speed or use pulse function.
Leakage from bowl/jar.	Lid not properly sealed; Max fill line exceeded; Blade assembly not tight (blender).	Ensure lid is securely locked. Do not exceed max fill line. Check blender blade assembly is tightened.

9. SPECIFICATIONS

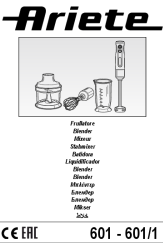
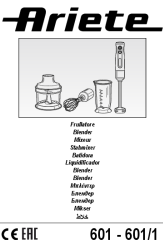
Feature	Detail
Brand	Ariete
Model Name	1782 Gourmet Pro Moderna
Item Model Number	1782/02
Power Source	Electric with cable
Wattage	1000 watts
Number of Speeds	2 + Pulse
Food Processor Bowl Capacity	3 Liters
Blender Jar Capacity	2 Liters
Blade Material	Stainless Steel
Product Dimensions	10.83"D x 9.45"W x 17.32"H
Item Weight	10.78 pounds
Dishwasher Safe Parts	Yes (removable parts)

10. WARRANTY AND SUPPORT

This product is covered by a manufacturer's warranty. For detailed warranty information, please refer to the warranty card included with your purchase or visit the official Ariete website. For technical support, spare parts, or service inquiries, please contact Ariete customer service through their official channels.

© 2025 Ariete. All rights reserved.

Related Documents - 1782

	Manuale Istruzioni Macchina da Caffè Ariete 1318 - Uso, Pulizia e Manutenzione Manuale completo di istruzioni per la macchina da caffè Ariete modello 1318 (Moderna). Include guide dettagliate per l'uso, la pulizia, la manutenzione e la risoluzione dei problemi, oltre a consigli per preparare caffè espresso e cappuccini perfetti. Scopri tutte le funzionalità e le avvertenze di sicurezza per il tuo elettrodomestico Ariete.
	Ariete 601/601/1 Frullatore a Immersione Manuale d'Uso Scopri il manuale d'uso per il frullatore a immersione Ariete modello 601/601/1. Informazioni su sicurezza, utilizzo, manutenzione e accessori per questo versatile elettrodomestico da cucina.
	Manuale d'uso Frullatore a Immersione Ariete 601/601/1 Guida completa alle istruzioni di sicurezza, uso e manutenzione per il frullatore a immersione Ariete modello 601/601/1, con dettagli sull'uso degli accessori.
	Kit Braccetto Portafiltro Ariete 1388: Guida alla Sicurezza e Manutenzione Informazioni essenziali sul kit braccetto portafiltro Ariete 1388, incluse avvertenze di sicurezza generali e specifiche, istruzioni per la pulizia, la manutenzione e dettagli sul produttore.

Ariete  Frullatore Blender 568W 500ml 568 CE ENEC 568	Manuale d'uso Frullatore Ariete 568 Questo manuale d'uso fornisce istruzioni dettagliate e avvertenze di sicurezza per l'utilizzo del frullatore Ariete modello 568, garantendo un uso corretto e sicuro dell'apparecchio.
	Ariete 2869 Electric Kettle User Manual and Safety Instructions Comprehensive user manual for the Ariete 2869 electric kettle, covering safety guidelines, operating instructions, cleaning, and maintenance. Learn how to use your Ariete kettle safely and effectively.