

[Manuals.plus](#) /

› [Legami](#) /

› Legami Erasable Gel Pens User Manual

Legami LEG-ERASABLE-ASRT_3X7

Legami Erasable Gel Pens User Manual

Model: LEG-ERASABLE-ASRT_3X7

Brand: Legami

PRODUCT OVERVIEW

The Legami Set of 7 Erasable Gel Pens offers a unique writing experience with thermosensitive ink that allows for clean corrections. Each pen features a distinct animal design and corresponding ink color, making them both functional and visually appealing.



Image: The complete set of seven Legami erasable gel pens, each featuring a unique animal design (Unicorn, Hippo, Butterfly, Corgi, Tiger, Giraffe, Teddy Bear) and different ink colors.

KEY FEATURES

- **Thermosensitive Erase Ink:** Allows for writing and erasing without damaging paper. The ink disappears with friction and reappears at temperatures below -10°C.
- **Durable Eraser:** The ball at the end of each pen acts as an eraser, designed not to wear down or damage the paper surface.

- **Smooth Writing:** Provides a consistent and smooth writing experience.
- **0.7mm Tip:** Medium point tip suitable for various writing tasks.
- **Assorted Designs & Colors:** Includes Unicorn (pink ink), Hippo (blue ink), Butterfly (pink ink), Corgi (black ink), Tiger (orange ink), Giraffe (black ink), and Teddy Bear (red ink).
- **Compact Size:** Each pen has a diameter of 0.8 cm and a height of 15 cm.



Image: An illustration showing a panda writing with an erasable pen, highlighting the refillable thermosensitive ink and the everlasting eraser feature.



Image: A close-up of the Legami Tiger pen, showcasing its design and an orange ink swatch, indicating its specific ink color.

PACKAGE CONTENTS

Your Legami Erasable Gel Pens set includes:

- 7 x Erasable Gel Pens (Unicorn, Hippo, Butterfly, Corgi, Tiger, Giraffe, Teddy Bear designs)
- Integrated Eraser on each pen

SETUP AND FIRST USE

The Legami Erasable Gel Pens are ready to use right out of the package.

1. **Uncap the Pen:** Remove the cap from the pen you wish to use.
2. **Begin Writing:** Start writing on paper as you would with any standard gel pen. The 0.7mm tip provides a smooth writing experience.

Writing

Simply apply the pen tip to paper and write. The thermosensitive gel ink flows smoothly, creating clear lines.

Erasing

To correct a mistake, use the special rubber tip located at the end of the pen.

1. Locate the rubber tip on the opposite end of the writing point.
2. Gently rub the rubber tip over the ink you wish to erase. The friction generated by rubbing will heat the ink, causing it to become transparent and disappear.
3. You can write over the erased area immediately.



Image: A detailed view of the Legami Tiger pen, focusing on the cap and the integrated eraser at the end of the pen barrel.

Send a secret message!

3, 2, 1 Let's go!

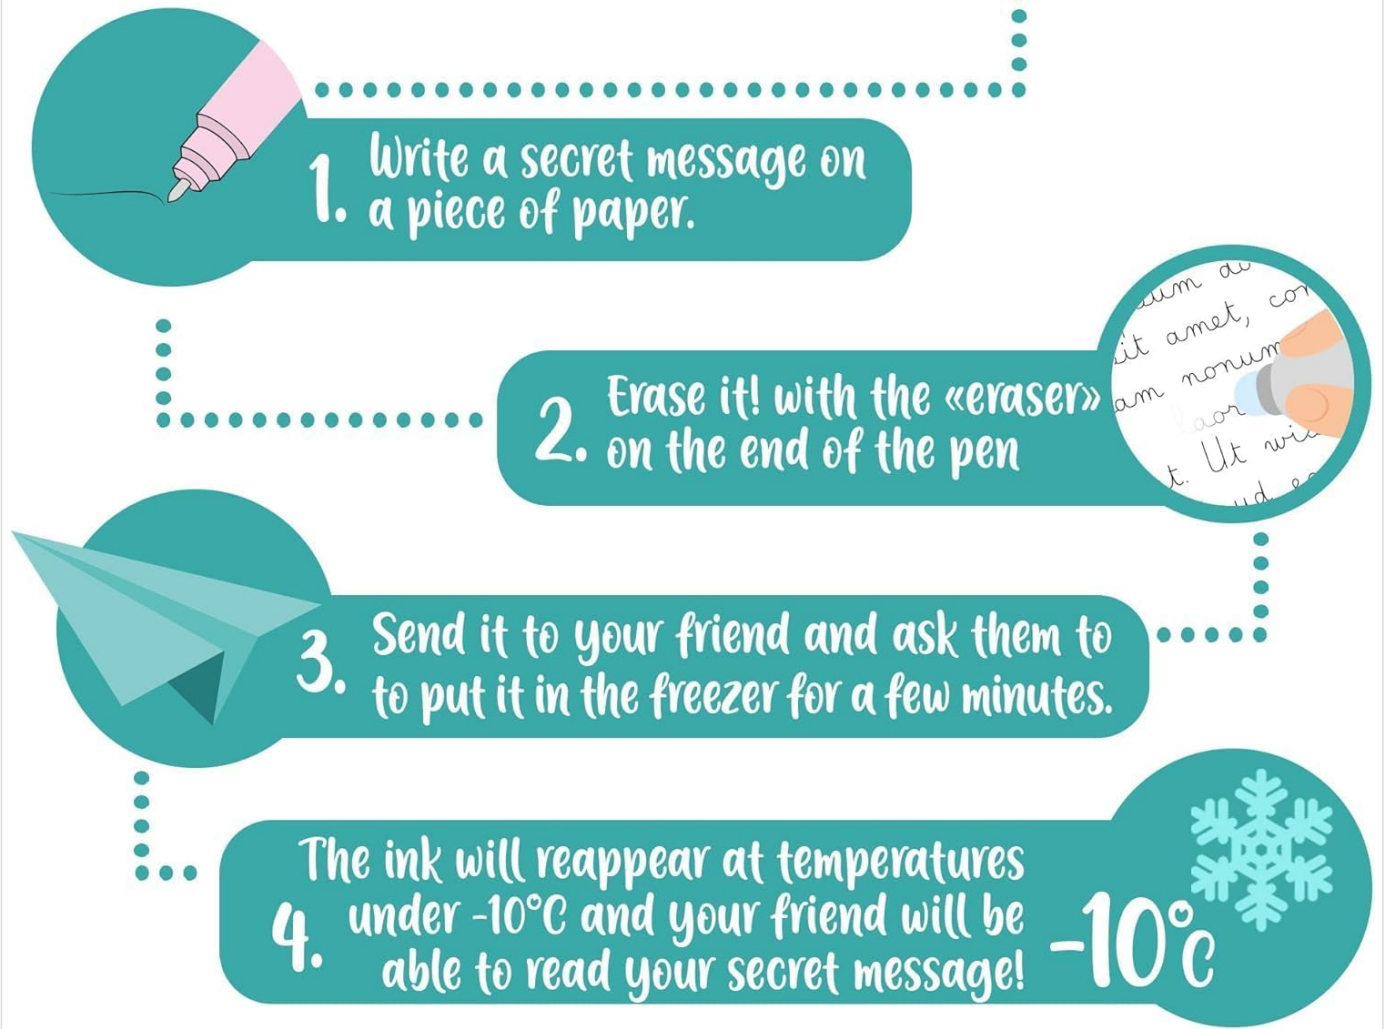


Image: A visual guide demonstrating how to write a secret message with the erasable pen, erase it, and then reveal it by placing the paper in a freezer, which causes the ink to reappear.

Ink Reappearance (Temperature Sensitivity)

The thermosensitive ink is designed to disappear with heat (friction) and reappear when exposed to cold temperatures. If paper written with these pens is exposed to temperatures below -10°C (14°F), the erased ink may become visible again. This is a characteristic of the thermosensitive ink and not a defect.

MAINTENANCE

- **Storage:** Store pens with their caps securely on to prevent the ink from drying out and to protect the tip.
- **Avoid Extreme Temperatures:** Do not expose the pens or written documents to extreme heat, as this may cause the ink to disappear permanently or become difficult to erase. Similarly, avoid extreme cold if you do not wish for erased ink to reappear.
- **Cleaning:** If the pen barrel gets dirty, wipe it gently with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Ink not erasing completely.	Insufficient friction or paper type.	Apply more gentle pressure when erasing. Ensure you are using the correct rubber tip. Some paper types may react differently.
Ink reappears after erasing.	Exposure to cold temperatures.	This is a normal characteristic of thermosensitive ink. If you do not wish for ink to reappear, avoid exposing documents to temperatures below -10°C (14°F).
Pen not writing smoothly or ink flow is inconsistent.	Pen tip may be dry or clogged.	Try scribbling on a scrap piece of paper to restart ink flow. Ensure the cap is always securely placed when not in use.

PRODUCT SPECIFICATIONS

Attribute	Detail
Brand	Legami
Model Number	LEG-ERASABLE-ASRT_3X7
Item Weight	1.48 ounces (for the set)
Product Dimensions (each pen)	0.8 cm diameter, 15 cm height (approx. 0.31 x 5.9 inches)
Tip Size	0.7mm
Ink Type	Thermosensitive Gel Ink
Number of Items	7 pens per pack
Material Type	Plastic
Closure Type	Click-Off Cap
Ink Colors Included	Pink (Unicorn, Butterfly), Blue (Hippo), Black (Corgi, Giraffe), Orange (Tiger), Red (Teddy Bear)

WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your Legami Erasable Gel Pens, please contact the manufacturer or your retailer. While specific warranty details are not provided, Legami products are designed for quality and satisfaction.

For more information about Legami products, please visit the official Legami website or contact their customer service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question