

Beoka S5 Pro

Beoka S5 Pro Massage Gun Instruction Manual

Model: S5 Pro

INTRODUCTION

The Beoka S5 Pro Massage Gun is designed to provide professional-grade deep tissue massage for muscle recovery and pain relief. This manual provides essential information for the safe and effective use of your device. Please read it thoroughly before operation.

SAFETY INFORMATION

Please read all safety warnings and instructions before using this product. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not immerse the device in water or use it in wet environments.
- Keep away from children and pets.
- Do not use on injured, swollen, or sensitive areas of the body. Avoid direct contact with bones.
- Consult a physician before use if you have any medical conditions, are pregnant, or have a pacemaker.
- Use only the provided USB charging cable.
- Do not operate if the device or charging cable is damaged.
- Do not disassemble or attempt to repair the device yourself.

PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x Beoka S5 Pro Massage Gun
- 4 x Specialized Massage Heads
- 1 x USB Charging Cable
- 1 x Carry Bag
- 1 x Instruction Manual

Product & Accessories



Image: Beoka S5 Pro Massage Gun with all included accessories.

PRODUCT OVERVIEW

The Beoka S5 Pro features an ergonomic design for comfortable handling and a powerful brushless motor for effective deep tissue massage.



Image: Front view of the Beaka S5 Pro Massage Gun, highlighting the power button and LED indicators.



Image: Cutaway view illustrating the brushless motor and high torque mechanism of the massage gun.

SETUP

1. **Initial Charge:** Before first use, fully charge the device for approximately 3 hours using the provided USB cable. The LED battery indicator will show the charging status.
2. **Attach Massage Head:** Select the desired massage head and firmly insert it into the front opening of the massage gun. Ensure it is securely attached before use.

OPERATING INSTRUCTIONS

1. **Power On/Off:** Press and hold the power button for 2 seconds to turn the device on or off.
2. **Adjust Speed:** Once powered on, short press the power button to cycle through the 5 available speed levels (2000-3200 RPM). The LED indicators will show the current speed setting.
3. **Application:** Gently press the massage head against the desired muscle area. Move the device slowly over the muscle. Do not apply excessive pressure.

4. **Smart Timer:** The device features a smart 10-minute timer and will automatically shut off after 10 minutes of continuous use to prevent overuse.

MESSAGE HEAD USAGE

The Beoka S5 Pro comes with 4 specialized massage heads for targeting different muscle groups and massage needs:

- **Round Head:** Suitable for large muscle groups like arms, back, hips, thighs, and calves.
- **Fork Head:** Designed for the spine, neck, and Achilles tendon.
- **Bullet Head:** Ideal for deep tissue, trigger points, and small muscle areas.
- **Flat Head:** General use for all body parts, providing a broader, softer massage.

CHARGING

The device is powered by a 2600mAh high-capacity battery, offering up to 15 hours of working time on a single charge. To charge, connect the USB charging cable to the charging port on the device and to a compatible USB power adapter (not included). A full charge takes approximately 3 hours. The LED battery indicator will show the charging progress. The battery is designed for a long lifespan of 6-8 years.



15 Hours
Working Time



6-8 Years
Battery Life



Image: Visual representation of the Beoka S5 Pro's battery performance, showing 15 hours working time and 6-8 years battery life.

MAINTENANCE

- **Cleaning:** Wipe the device with a slightly damp cloth. Do not use abrasive cleaners or immerse in water.
- **Storage:** Store the massage gun and its accessories in the provided carry bag in a cool, dry place, away from direct sunlight.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge it regularly, even if not in use for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or device is off.	Charge the device fully. Press and hold the power button for 2 seconds to power on.
Massage head falls off during use.	Head not securely attached.	Ensure the massage head is firmly inserted into the device.
Device stops unexpectedly.	Smart timer activated (10-minute auto-off).	Turn the device back on if further massage is desired.
Reduced performance or weak massage.	Low battery or incorrect speed setting.	Charge the device. Adjust to a higher speed level.

SPECIFICATIONS

- **Model:** S5 Pro
- **Brand:** Beoka
- **Stall Force:** 15-18 kg
- **Motor:** Brushless
- **Speed Levels:** 5 (2000-3200 RPM)
- **Amplitude:** 12 mm
- **Noise Level:** ≤45 dB
- **Battery Capacity:** 2600 mAh
- **Working Time:** Up to 15 hours
- **Charging Time:** Approx. 3 hours
- **Rated Voltage:** 14.6 V
- **Power:** 25 W
- **Material:** ABS Plastic, Silicone
- **Product Dimensions:** 25 x 111 x 8 cm
- **Item Weight:** 800 grams
- **Country of Origin:** China
- **Targeted Body Parts:** Legs, Arms, Neck, Back, Shoulders
- **Massage Technology:** Vibration, Percussion
- **Water Resistance:** Not water-resistant
- **Special Features:** 10-minute smart timer, LED battery indicator

WARRANTY AND SUPPORT

This product may be eligible for extended warranty plans. Please refer to your purchase documentation or contact your retailer for details on available warranty options and customer support. For technical assistance or inquiries, please visit the official Beoka website or contact their customer service.

Note: Protection plans are available for purchase separately, offering extended coverage for 1 or 2 years, and accidental damage protection.

- [Seller Information \(DrMARKET\)](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question