

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [DigiLand](#) /

› [DigiLand 10.1 Inch HD Octa-Core Android Tablet User Manual](#)

DigiLand R10 Pro+

DigiLand Tablet User Manual

10.1 INCH HD OCTA-CORE ANDROID TABLET

Model: R10 Pro+

1. INTRODUCTION

Welcome to the user manual for your new DigiLand 10.1 Inch HD Octa-Core Android Tablet. This device is designed to provide a versatile and powerful experience for both productivity and entertainment. Featuring an Octa-Core processor, ample RAM and storage, and a vibrant HD display, your tablet is equipped for a wide range of tasks, from browsing and streaming to gaming and office work.

This manual will guide you through the initial setup, operation, maintenance, and troubleshooting of your tablet to ensure you get the most out of its capabilities.

2. WHAT'S IN THE BOX

Please verify that all items are present in your product package:

- DigiLand 10.1 Inch Android Tablet
- Protective Case
- USB Type-C Charging Cable
- Power Adapter (5V/2A)
- Quick Start Guide

Secification Packing List



Figure 2.1: Package Contents

3. PRODUCT OVERVIEW

The DigiLand R10 Pro+ tablet combines powerful hardware with a user-friendly Android 14 operating system. Below are the key features and components of your device.

3.1 Key Features

- **Processor:** MediaTek Helio G80 Octa-Core CPU (2x A75 2.0GHz + 6x A55 1.8GHz) for robust performance.
- **Display:** 10.1-inch HD (800x1280) In-cell touchscreen with IPS clarity and 350cd/m² brightness.
- **Memory & Storage:** 12GB RAM and 128GB ROM, expandable up to 256GB via TF card.
- **Battery:** 6000mAh battery providing over 12 hours of runtime, with 10W fast-charging support.
- **Cameras:** 13MP rear camera and 8MP front camera for photography and video calls.
- **Audio:** Dual 8Ω/1W speakers for clear sound.
- **Connectivity:** Bluetooth 5.0, 802.11n Wi-Fi, Type-C port, and headphone jack.
- **Operating System:** Android 14.

- **Widevine L1 Support:** Enables high-definition streaming from platforms like Netflix, Hulu, and Amazon Prime Video.

3.2 Visual Overview



Figure 3.1: DigiLand Tablet Front and Rear View



Figure 3.2: Key Features Diagram

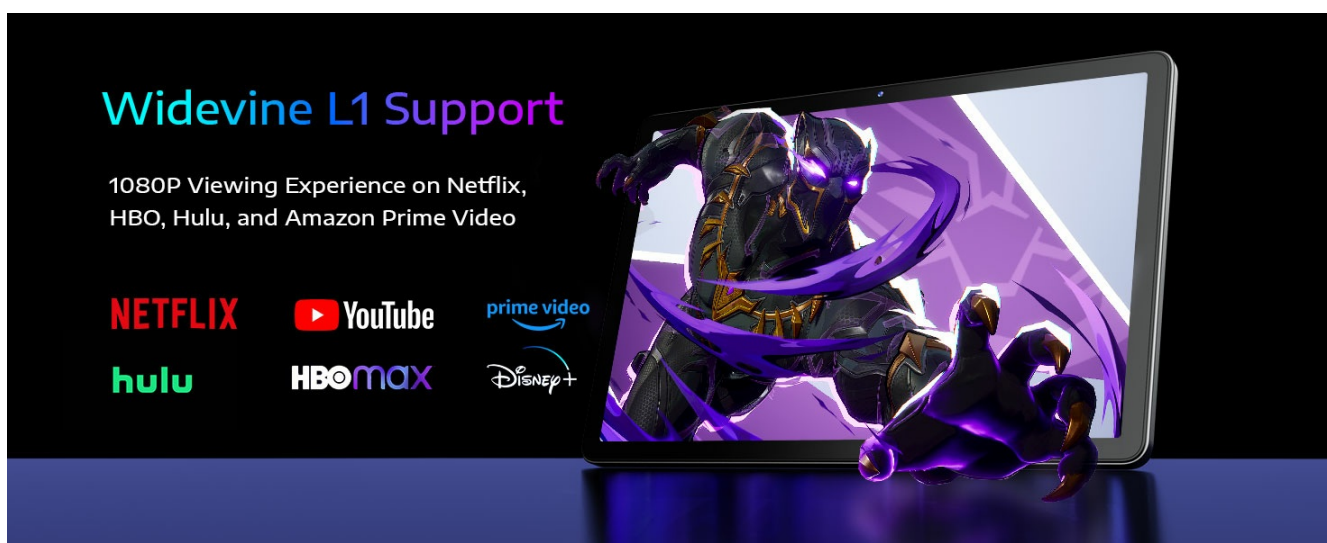 


Figure 3.3: Widevine L1 Support for HD Streaming

Choose Your Favorite Color



Figure 3.4: Ultra-thin and Lightweight Design

4. SETUP

4.1 Initial Charging

Before first use, fully charge your tablet. Connect the USB Type-C cable to the tablet's charging port and the power adapter to a wall outlet. The charging indicator will show the charging status. A full charge typically takes several hours.

4.2 Powering On/Off

- **To Power On:** Press and hold the Power button located on the side of the tablet until the DigiLand logo appears on the screen.
- **To Power Off:** Press and hold the Power button until the power options menu appears. Select 'Power off' and confirm.
- **To Restart:** From the power options menu, select 'Restart'.

4.3 First-Time Setup Wizard

Upon first power-on, the tablet will guide you through a setup wizard. Follow the on-screen prompts to:

- Select your language.
- Connect to a Wi-Fi network.
- Sign in with your Google account or create a new one.
- Set up screen lock (PIN, pattern, password).
- Review and accept terms and conditions.

5. OPERATING INSTRUCTIONS

5.1 Touchscreen Navigation

Your tablet features a responsive multi-touch display. Common gestures include:

- **Tap:** To select an item, open an app, or press a button.
- **Touch & Hold:** To open contextual menus or drag items.
- **Swipe:** To scroll through lists, move between home screens, or dismiss notifications.
- **Pinch-to-Zoom:** To zoom in or out on images, maps, or web pages.

5.2 Wi-Fi Connection

To connect to a Wi-Fi network:

1. Go to **Settings** > **Network & internet** > **Wi-Fi**.
2. Toggle Wi-Fi **On**.
3. Select your desired network from the list.
4. Enter the password if prompted and tap **Connect**.



Figure 5.1: High-Speed Wi-Fi Connectivity

5.3 Bluetooth Pairing

To pair with Bluetooth devices (e.g., headphones, speakers):

1. Go to **Settings** > **Connected devices** > **Connection preferences** > **Bluetooth**.
2. Toggle Bluetooth **On**.
3. Ensure your Bluetooth device is in pairing mode.
4. Select your device from the 'Available devices' list and follow any on-screen prompts to complete pairing.

5.4 Using the Cameras

Your tablet is equipped with a 13MP rear camera and an 8MP front camera.

- Open the **Camera** app from your home screen or app drawer.
- Tap the camera switch icon to alternate between front and rear cameras.
- Tap the shutter button to take a photo or the video icon to record a video.



8 MP HD
AI Front camera



13 MP HD
AI Rear camera



Figure 5.2: Tablet Cameras and Sample Photos

5.5 App Management

Installing Apps: Download and install apps from the Google Play Store. Open the Play Store app, search for your desired app, and tap 'Install'.

Uninstalling Apps: Touch and hold the app icon on the home screen or app drawer, then drag it to 'Uninstall' or select 'App info' and tap 'Uninstall'. Alternatively, go to **Settings > Apps > See all apps**, select the app, and tap 'Uninstall'.

6. MAINTENANCE

6.1 Cleaning Your Tablet

Use a soft, lint-free cloth to clean the screen and body of your tablet. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics. Avoid using harsh chemicals or abrasive materials.

6.2 Battery Care

To prolong battery life:

- Avoid extreme temperatures.
- Do not let the battery completely drain frequently.
- Use the provided charger and cable.
- Adjust screen brightness and disable unused features (Wi-Fi, Bluetooth) to conserve power.

Worry free battery life Easy entertainment

 **12 h**
Video

 **24 h**
Music

 **8 h**
Game

 **45 Days**
Standby

 **Type-C**
Charge

6000mAh

Figure 6.1: Extended Battery Life Features

6.3 Software Updates

Regularly check for and install software updates to ensure optimal performance, security, and access to new features. Go to **Settings > System > System update**.

6.4 Storage Management

To manage your tablet's storage:

- Go to **Settings > Storage** to view storage usage.
- Uninstall unused apps.
- Clear cache data for apps.
- Transfer large files (photos, videos) to cloud storage or an external TF card.

7. TROUBLESHOOTING

If you encounter issues with your tablet, refer to the following common problems and solutions:

Problem	Possible Solution
Tablet won't turn on	Ensure the battery is charged. Connect to charger for at least 30 minutes. If still unresponsive, perform a forced restart by holding the Power button for 10-15 seconds.
Wi-Fi connection issues	Restart your Wi-Fi router. Forget the network on your tablet and reconnect. Ensure you are within range of the Wi-Fi signal.
Apps are slow or crashing	Close background apps. Clear app cache (Settings > Apps > [App Name] > Storage & cache > Clear cache). Ensure sufficient storage space. Restart the tablet.
Battery drains quickly	Reduce screen brightness. Disable Wi-Fi/Bluetooth when not in use. Close unused apps. Check battery usage in Settings to identify power-hungry apps.
Screen is unresponsive	Restart the tablet. Ensure the screen is clean and dry. Remove any screen protectors that might be interfering.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Detailed technical specifications for your DigiLand R10 Pro+ Tablet:

Feature	Specification
Brand	DigiLand
Model Name	R10 Pro+
Operating System	Android 14
Standing Screen Display Size	10.1 Inches
Screen Resolution	1280 x 800 pixels
Processor Brand	MediaTek
Processor Model	Helio G80 Octa-Core CPU
RAM	12GB
Flash Memory Size (ROM)	128 GB
Expandable Storage	Up to 256GB (TF card slot)
Wireless Type	802.11n
Bluetooth	5.0
Average Battery Life	12 Hours
Item Weight	1.32 pounds (approx. 600g)

Feature	Specification
Product Dimensions	10.17 x 6.41 x 0.31 inches
Color	Gray

9. WARRANTY AND SUPPORT

9.1 Warranty Policy

Your DigiLand Tablet comes with a **1-year warranty policy** from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use. Please retain your proof of purchase for warranty claims.

9.2 Customer Support

For any questions regarding the use, setup, or troubleshooting of your DigiLand Tablet, our customer service team is available to assist you.

- **Online Support:** We offer 24/7 online call support.
- **Repair Support:** 1-Year Repair Support is provided.

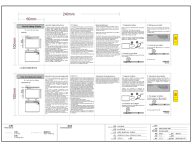
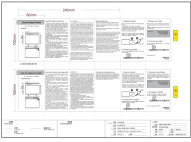
You can contact us directly through the channels provided on our official website or through your purchase platform. We are committed to providing prompt and helpful service.

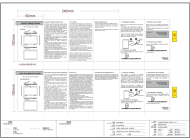
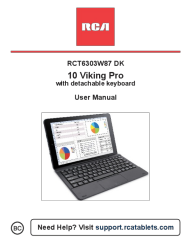




Figure 9.1: Dedicated Customer Support

For more information and product updates, visit the official DigiLand Store:[DigiLand Store on Amazon](#)

Related Documents - R10 Pro+

	<p>Digi-Land 10.1 Inch Octa Core Tablet Quick Setup Guide and Safety Information</p> <p>Concise guide for setting up and safely using the Digi-Land 10.1 Inch Octa Core Tablet, including FCC compliance details and important safety instructions.</p>
	<p>DIGILAND 10.1 Inch Octa Core Tablet Quick Setup Guide</p> <p>Comprehensive quick setup guide for the DIGILAND 10.1 Inch Octa Core Tablet, covering safety instructions, FCC compliance, charging, setup, and shutdown procedures.</p>

	<p>DIGILAND 10.1 Inch Quad Core Tablet Quick Setup Guide MID1016</p> <p>Concise setup guide for the DIGILAND 10.1 Inch Quad Core Tablet (Model MID1016), covering safety instructions, FCC compliance, charging, setup, and shutdown procedures.</p>
	<p>RCA 10 Viking Pro RCT6303W87 DK User Manual</p> <p>Comprehensive user manual for the RCA 10 Viking Pro tablet (model RCT6303W87 DK), covering setup, operation, features, troubleshooting, and warranty information.</p>
	<p>GAOMON M10K PRO User Guide</p> <p>A comprehensive guide on how to use the GAOMON M10K PRO digital graphic tablet, covering connection modes, driver installation for Windows and macOS, and software compatibility.</p>
	<p>Onn. 10.4\" data-bbox="212 396 628 414"/> <p>Comprehensive product guide for the Onn. 10.4" Tablet Pro (Model: TBSPG100110603) with Android. Learn about setup, features, connectivity, safety, and more.</p> </p>