

Locksworth AZ4325

Locksworth 1.9 Cubic Feet Security Home Safe Box User Manual

Model: AZ4325 | Brand: Locksworth

INTRODUCTION

Thank you for choosing the Locksworth 1.9 Cubic Feet Security Home Safe Box. This manual provides detailed instructions for the proper setup, operation, and maintenance of your new safe. Please read this manual thoroughly before using the product to ensure optimal security and functionality. This safe is designed to protect your valuable documents, jewelry, cash, and other personal items with its robust construction, electronic digital keypad, and dual alarm system.

IMPORTANT SAFETY INFORMATION

- **Do not** store the emergency keys inside the safe. Keep them in a secure, separate location away from the safe.
- Ensure the safe is placed on a stable, level surface or securely mounted to a wall or floor to prevent tipping.
- Keep the keypad dry and clean. Avoid using abrasive cleaners.
- This safe is designed for security and organization. While it offers enhanced protection, it is not fireproof or waterproof unless explicitly stated for specific components (e.g., included fireproof bag).
- Replace batteries promptly when the low battery indicator appears to ensure continuous operation.

PACKAGE CONTENTS

Please verify that all components are present in the package:

- 1 x Locksworth 1.9 Cubic Feet Security Home Safe Box
- 2 x Emergency Keys

- 1 x Fireproof Bag
- 2 Sets x Expansion Bolts (for mounting)
- 1 x User Manual (this document)



Figure 1: Locksworth Safe Box and Included Accessories

PRODUCT FEATURES

- **Enhanced Security:** Features one-piece bending technology, a pry-resistant door, and four 0.8-inch (20mm) thick door bolts for robust protection. The corrosion-resistant phosphating treatment extends product lifespan.
- **Dual Access Options:** Offers a programmable 3-8 digit electronic code for quick entry and a manual key override for emergency access.
- **Dual Alarm System:** Triggers a 70-decibel alarm after three incorrect password attempts or any forceful breach attempt.
- **Removable Shelf & LED Light:** Two removable shelves and built-in hooks provide versatile storage. An integrated LED sensor light ensures visibility in darkness.
- **Premium Interior:** Soft velvet interior lining protects valuables from scratches.
- **Fireproof Bag:** Includes a fire-resistant bag for safeguarding documents and cash during emergencies.



Figure 2: Locksworth Safe Box with Fireproof Bag



Figure 3: Internal Features and Components

SETUP

1. Battery Installation

The safe requires four (4) AAA batteries (not included) to power the electronic keypad. The battery compartment is located on the inside of the safe door.

1. Open the safe door using the emergency key (refer to "Emergency Key Access" if needed).
2. Locate the battery compartment cover on the inside of the door.
3. Remove the cover and insert four (4) new AAA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover.

2. Initial Passcode Setup

Upon first use, you will need to set your personal passcode. The factory default code is typically "159".

1. With the safe door open, press the internal reset button (usually a small green button located near the battery compartment). You will hear a beep.
2. On the keypad, enter your desired 3-8 digit passcode.
3. Press the "#" key to confirm. You will hear a confirmation beep.
4. Test your new passcode with the door open to ensure it works correctly before closing the safe.

3. Mounting Instructions

The safe includes pre-drilled mounting holes and expansion bolts for secure installation on a wall, floor, or shelf.

1. Choose a suitable location for the safe.
2. Mark the drilling points through the pre-drilled holes on the back or bottom of the safe onto your chosen surface.
3. Drill holes at the marked points using an appropriate drill bit for your surface (e.g., masonry bit for concrete).
4. Align the safe with the drilled holes and insert the expansion bolts.
5. Tighten the bolts securely to fix the safe in place.



Figure 4: Safe Mounting Steps

OPERATION

1. Opening with Digital Keypad

1. Enter your 3-8 digit passcode on the keypad.

2. Press the "#" key. The indicator light will turn green.
3. Within 5 seconds, turn the knob clockwise to open the safe door.



Figure 5: Safe Opening Methods

2. Changing Passcode

You can change your passcode at any time with the door open.

1. Open the safe door.
2. Press the internal reset button. You will hear a beep.
3. Enter your new 3-8 digit passcode on the keypad.
4. Press the "#" key to confirm. You will hear a confirmation beep.
5. Verify the new passcode with the door open before closing.

3. Emergency Key Access

In case of forgotten passcode, dead batteries, or electronic malfunction, use the emergency key:

1. Locate the emergency keyhole cover on the keypad panel.
2. Remove the cover.
3. Insert the emergency key and turn it counter-clockwise.
4. While holding the key turned, turn the knob clockwise to open the safe door.
5. Once open, remove the key and replace the keyhole cover.

4. Dual Alarm System

The safe is equipped with a dual alarm system for enhanced security:

- **Incorrect Passcode Alarm:** If three consecutive incorrect passcodes are entered, a 70-decibel alarm will sound for a short period.
- **Forceful Breach Alarm:** Any attempt to forcefully open or tamper with the safe will trigger the 70-decibel alarm.

To silence the alarm, enter the correct passcode or use the emergency key to open the safe.



Figure 6: Dual Alarm System Functionality

5. Using the Removable Shelf

The safe includes two removable shelves and built-in hooks to customize the interior space according to your storage needs. Simply slide the shelves into or out of the designated slots.

REMOVABLE SHELF FOR ENOUGH SPACE



Passport



Jewelry



Watch



Document




Camera



Cash



WITH SHELF

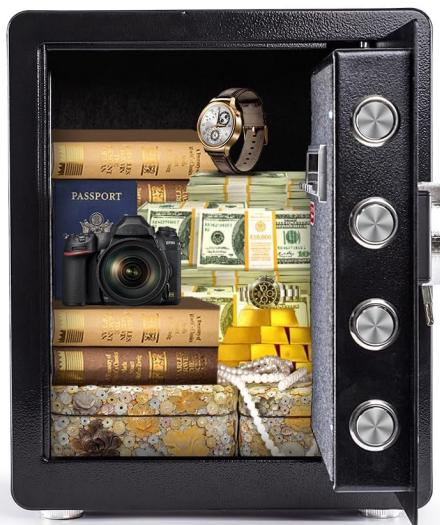

WITHOUT SHELF

Figure 7: Removable Shelf for Optimized Space

6. LED Interior Light

An integrated LED sensor light illuminates the interior of the safe when the door is opened, providing clear visibility of your belongings even in low-light conditions.

MAINTENANCE

- **Cleaning:** Wipe the exterior of the safe with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Battery Replacement:** Replace all four AAA batteries when the low battery indicator light illuminates on the keypad. Always use new, high-quality batteries.
- **Door Bolts:** Periodically check the door bolts for any obstructions and ensure they move smoothly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Keypad not responding.	Dead or low batteries.	Replace all four AAA batteries. Use emergency key to open if necessary.
Safe won't open with passcode.	Incorrect passcode entered; batteries low.	Re-enter passcode carefully. Replace batteries. Use emergency key.

Problem	Possible Cause	Solution
Alarm sounds unexpectedly.	Incorrect passcode attempts; physical tampering.	Enter correct passcode or use emergency key to disarm. Ensure safe is not being tampered with.
Door does not close properly.	Obstruction in door frame; bolts not retracting fully.	Check for any items blocking the door. Ensure the knob is fully turned to retract bolts before closing.

SPECIFICATIONS

Feature	Detail
Brand	Locksworth
Model Number	AZ4325
Capacity	1.9 Cubic Feet
Exterior Dimensions (D x W x H)	12.2" x 14.96" x 17.72" (30.99 cm x 38.00 cm x 45.01 cm)
Interior Dimensions (D x W x H)	11.81" x 14.57" x 17.32" (30.00 cm x 37.01 cm x 44.00 cm)
Weight	26 Pounds (11.79 kg)
Material	Alloy Steel
Lock Type	Electronic Combination Lock, Key
Power Source	4 x AAA Batteries (not included)
Alarm Decibel Level	70 dB

WARRANTY AND SUPPORT

Locksworth is committed to providing high-quality products and customer satisfaction. For any questions, technical support, or warranty inquiries regarding your safe box, please contact Locksworth customer service through the retailer's platform or the official Locksworth brand store. Please have your model number (AZ4325) and purchase information ready when contacting support. For more information, visit the [Locksworth Store on Amazon](#).