

## Diyeeni Diyeenis9pv80h24o

# Diyeeni Smart Video Doorbell User Manual

Model: Diyeenis9pv80h24o

## 1. INTRODUCTION

Thank you for choosing the Diyeeni Smart Video Doorbell. This device provides enhanced home security with its wireless connectivity, HD wide-angle lens, and two-way communication features. This manual will guide you through the setup, operation, and maintenance of your new video doorbell system.



Image 1.1: The Diyeeni Smart Video Doorbell and its accompanying indoor chime unit.

## 2. PACKAGE CONTENTS

Please verify that all items are present in your package:

- 1 x Smart Video Doorbell
- 1 x Indoor Ding Dong Machine (Chime)
- 1 x User Manual (this document)
- 1 x Charging Cable



*Image 2.1: All components included in the Diyeeni Smart Video Doorbell package: doorbell unit, indoor chime, and charging cable.*

### 3. SETUP INSTRUCTIONS

#### 3.1 Initial Power On and Charging

The Smart Video Doorbell is equipped with a built-in 800mAh lithium-ion battery. Before first use, ensure the device is fully charged using the provided charging cable. Connect the cable to the doorbell and a standard USB power adapter (not included).

To power on the doorbell, locate the power switch and turn it to the 'ON' position. The device will indicate its power status, typically with an LED indicator.

# LONG STANDBY TIME OF 365 DAYS

DETACHABLE, RECHARGEABLE, VOICE-CHANGING



*Image 3.1: The doorbell unit displaying a charging indicator, signifying its long standby time capability.*

## 3.2 Mobile App Connection

To utilize the full features of your Smart Video Doorbell, download the dedicated mobile application. Search for the app name (refer to packaging or quick start guide for specific app name) in your device's app store (Google Play Store for Android or Apple App Store for iOS).

1. Download and install the app.
2. Create an account or log in if you already have one.
3. Follow the in-app instructions to add your new video doorbell. This typically involves scanning a QR code on the device or entering a device ID.
4. Connect the doorbell to your home's Wi-Fi network through the app. Ensure your Wi-Fi signal is strong at the installation location.

## 3.3 Installation

The Diyeeni Smart Video Doorbell is designed for easy installation. Choose a suitable location near your front door, ensuring a clear view of the entrance. The doorbell can be mounted using adhesive backing or screws (if provided and preferred for a more secure fit).

- **Doorbell Unit:** Mount the doorbell at an appropriate height, typically around 48-60 inches (120-150 cm) from the ground, to capture visitors clearly.

- **Indoor Chime:** Plug the indoor chime unit into a standard power outlet within range of the doorbell.

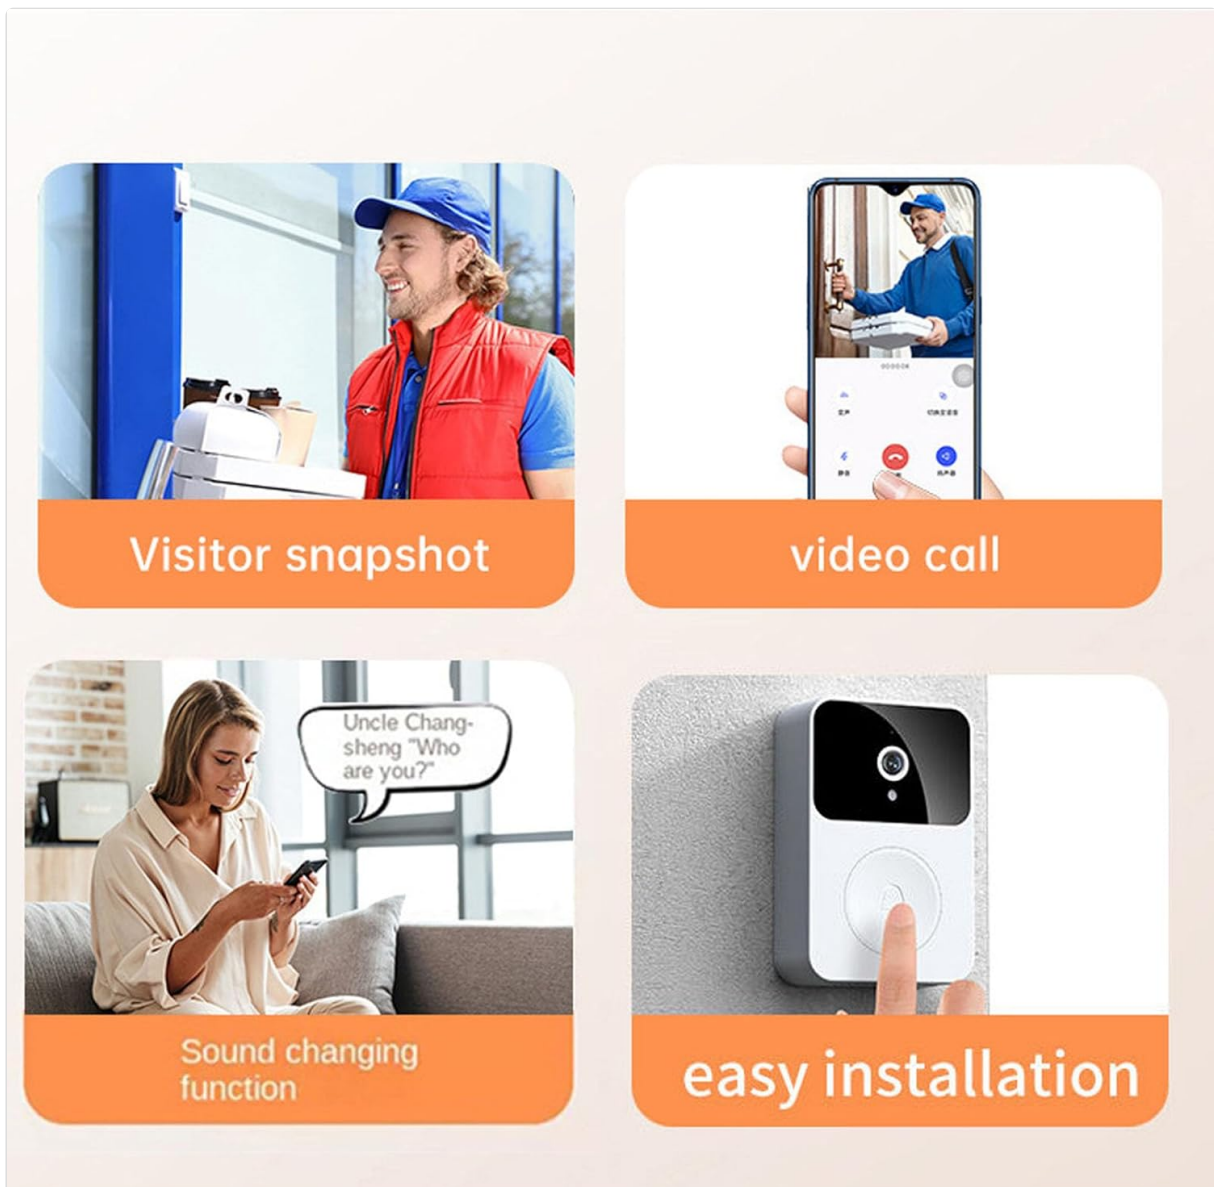


Image 3.2: Visual representation of key features including easy installation, visitor snapshots, video calls, and sound changing functionality.

## 4. OPERATING INSTRUCTIONS

### 4.1 Responding to Visitors (2-Way Talk)

When a visitor presses the doorbell button, you will receive a notification on your connected mobile phone. Open the app to view the live video feed and engage in two-way communication.

- **Live View:** Access real-time video from the doorbell camera.
- **Two-Way Audio:** Speak to your visitor and hear their response through the app.

# Video Call

## Easily Respond to Visitors

When someone presses the doorbell, the doorbell will push the notification to the mobile phone, and the owner can enter the mobile phone video conversation interface to support sharing to up to 10 members at the same time.



Image 4.1: A mobile phone displaying the video call interface, allowing users to easily respond to visitors at their door.

### 4.2 HD Wide-Angle Lens

The doorbell features an HD wide-angle lens, providing a broad view of your doorstep. This ensures you can see who is at your door and observe their actions with clarity.

### 4.3 Visitor Records and Snapshots

The mobile application allows you to review records of past visitors. The doorbell can capture snapshots or video clips when motion is detected or the button is pressed, storing them for later review.

# you can review visiting records in App.

you can review visiting records in App

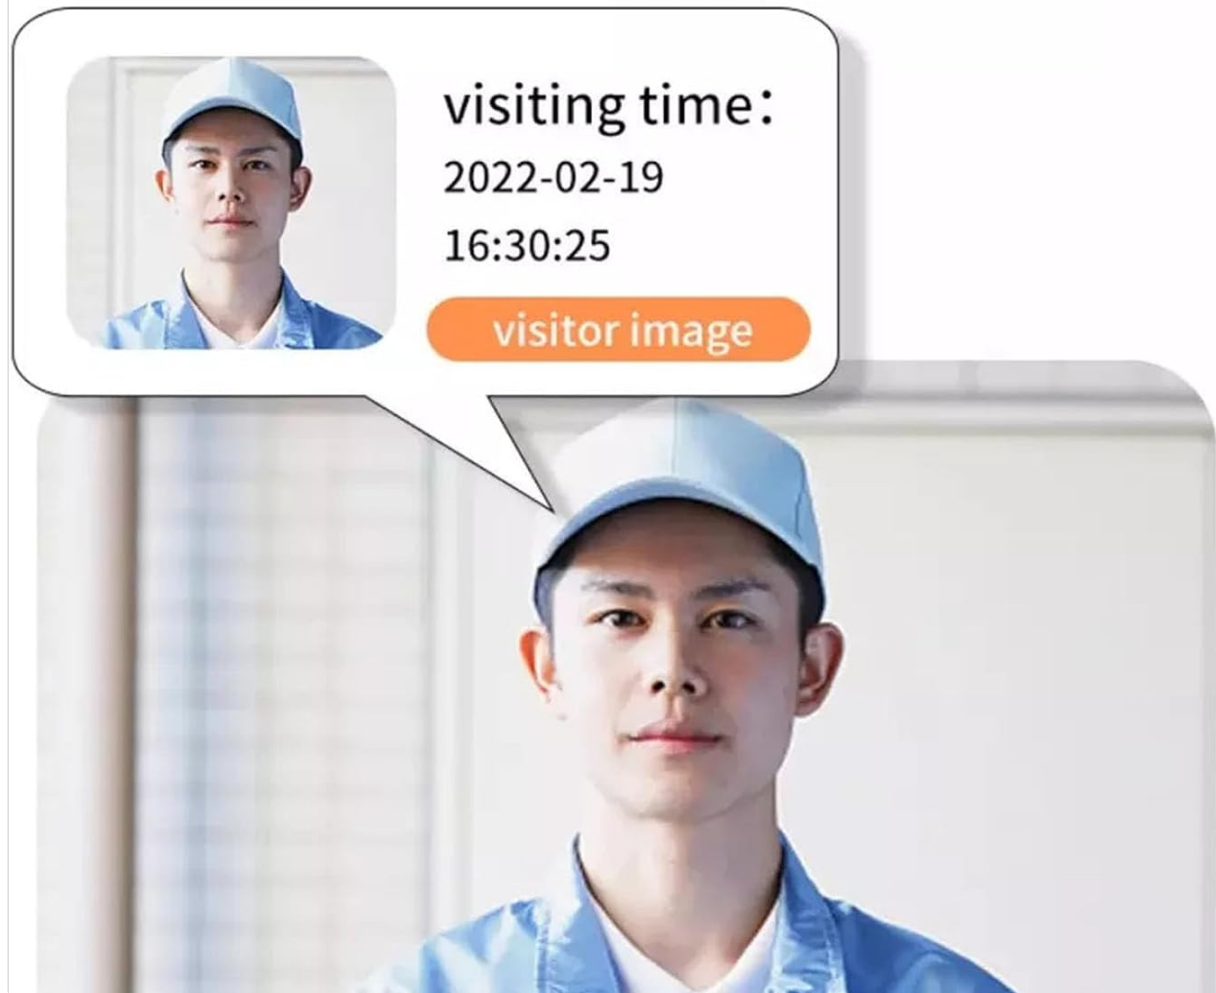


Image 4.2: The mobile application interface displaying a visitor record, including the date and time of the visit.

# you can review visiting records in App.

you can review visiting records in App



Visiting time:

2022-02-19

16:30:25

Cloud visitor image



*Image 4.3: Another example of a visitor record in the app, showing a delivery person at the door.*

## 4.4 Chime Settings

The indoor chime unit offers multiple melody options and adjustable volume levels. Refer to the chime unit's specific buttons or the mobile app for instructions on changing melodies and adjusting volume.

# 38 music switches freely, you can choose

It contains 38 music songs with adjustable volume.



*Image 4.4: The indoor chime unit, highlighting its capability to switch between 38 different melodies.*

## 5. MAINTENANCE

### 5.1 Battery Charging

The doorbell's built-in 800mAh battery provides a long standby time. When the battery level is low, the device will typically indicate this via an LED light or an in-app notification. Recharge the doorbell using the provided USB charging cable. A full charge ensures optimal performance and standby duration.

### 5.2 Cleaning

Wipe the doorbell and chime units with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these can damage the device's finish or internal components.

## 6. TROUBLESHOOTING

- **No Power:** Ensure the doorbell is charged. Check the power switch is in the 'ON' position.
- **No App Notifications:** Verify that the doorbell is connected to Wi-Fi and that app notifications are enabled in your phone's settings and within the doorbell app.

- **Poor Video Quality:** Check your Wi-Fi signal strength at the doorbell's location. Ensure the lens is clean and free from obstructions.
- **Chime Not Ringing:** Ensure the indoor chime is plugged in and powered on. Check that it is paired correctly with the doorbell (refer to app or quick start guide for pairing instructions).
- **Two-Way Audio Issues:** Check your phone's microphone and speaker settings. Ensure there are no obstructions blocking the doorbell's microphone or speaker.

## 7. SPECIFICATIONS

Feature	Specification
Model Name	Diyeeni9pv80h24o
Battery Type	Lithium Ion Battery (Built-in)
Battery Capacity	800mAh
Item Weight	123 Grams (4.3 ounces)
Product Dimensions (L x W x H)	5.9 x 3.93 x 1.57 inches
Connectivity	Wireless WiFi
Lens	HD Wide Angle

## 8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Diyeeni brand store. The brand store can be accessed via this link: [Diyeeni Store on Amazon](#).