

- [Manuals.plus](#) /
- › [Leeshyah](#) /
 - › Leeshyah Wooden Baby Walker with Activity Center Instruction Manual (Model SAIPO011)

Leeshyah SAIPO011

Leeshyah Wooden Baby Walker with Activity Center Instruction Manual

Model: SAIPO011

PRODUCT OVERVIEW

The Leeshyah Wooden Baby Walker with Activity Center is designed to support early development and provide engaging play for toddlers. This multi-functional toy combines a sturdy push walker with a 10-in-1 sensory activity center, promoting motor skills, cognitive development, and independent exploration.



Image: Leeshyah Wooden Baby Walker with Activity Center, showcasing its diverse activity panel.

Key Features:

- **10-in-1 Activity Center:** Includes colorful beads, bead maze, peek-a-boo mirror, rotating blocks, shape sorter, barometer, bell, gears, scratch music panel, and tracking maze.
- **Early Learning Focus:** Designed to develop fine-motor skills, hand-eye coordination, color recognition, and logical thinking.
- **Safe and Durable Construction:** Crafted from natural wood with smooth, polished edges and non-toxic paints. Features anti-choking shapes and rubber wheels for quiet movement and floor protection.
- **Montessori-Inspired Design:** Encourages independent exploration and parent-child interaction.

Safety Information

- Always supervise children during use.
- Ensure all parts are securely assembled before allowing a child to use the walker.

- Regularly inspect the walker for any loose parts, damage, or wear. Discontinue use if any damage is found.
- Do not use on uneven surfaces or near stairs.
- This product is recommended for children 18 months and up.

ASSEMBLY INSTRUCTIONS

Assembly is required. Please follow these steps carefully. It is recommended to have a second person assist with assembly for ease and safety.

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify that all components listed in the packing list are present.
2. **Attach Side Panels:** Secure the activity panel (front) and the musical panel (side) to the main frame using the provided screws and tools. Ensure all connections are tight.
3. **Install Wheels:** Attach the wheels to the designated axles on the side panels. Ensure the rubber rings are properly seated for smooth and quiet operation.
4. **Secure Handlebar:** Fasten the handlebar to the top of the walker frame. Confirm it is stable and does not wobble.
5. **Final Check:** Before first use, double-check all screws and connections to ensure they are tight and secure.

STABLE TRIANGULAR SUPPORT



Image: Side view of the walker, highlighting its stable triangular support design for safety.

OPERATING INSTRUCTIONS

Using the Walker Function:

- Place the child behind the walker, allowing them to grasp the handlebar.
- Encourage the child to push the walker forward, providing support as needed.
- The rubberized wheels are designed to provide appropriate resistance for learning to walk and protect floor surfaces.

PREVENT BOW LEGS



Image: A toddler using the walker to practice walking, illustrating proper posture.

Engaging with the Activity Center:

The front panel features various interactive elements:

- **Bead Maze:** Move the colorful beads along the wire path.
- **Peek-a-Boo Mirror:** Slide the door to reveal a mirror.
- **Rotating Blocks:** Turn the blocks with numbers and letters.
- **Shape Sorter:** Match the wooden shapes to their corresponding holes.
- **Barometer:** Adjust the weather indicator.
- **Bell:** Press the button to ring the bell.
- **Gears:** Rotate the interlocking gears.
- **Scratch Music Panel:** Use the mallet to play the xylophone.
- **Tracking Maze:** Guide the small pieces through the maze.

LARGE BLOCKS PREVENT SWALLOWING



Image: A child engaging with the activity panel, demonstrating the shape sorter and gears.



Image: A child playing the xylophone, located on the side of the walker.

Video: Official product video demonstrating the Leeshyah Wooden Baby Walker with Activity Center in use by a child.

MAINTENANCE AND CARE

- **Cleaning:** Wipe surfaces with a damp cloth and mild soap. Avoid harsh chemicals or abrasive cleaners. Dry thoroughly immediately after cleaning.
- **Storage:** Store the walker in a dry place away from direct sunlight and extreme temperatures to prevent warping or damage to the wood.
- **Inspection:** Periodically check all screws and connections for tightness. Tighten as necessary. Inspect for any splinters or sharp edges that may develop over time.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Walker feels unstable or tips easily.	Loose assembly, uneven surface, or child's weight distribution.	Ensure all screws are tightened. Use on a flat, level surface. Supervise child to ensure proper use.
Wheels are not rolling smoothly or making noise.	Debris in wheels, loose wheel attachment, or worn rubber.	Check wheels for debris and clean if necessary. Ensure wheels are securely attached. If rubber is worn, contact customer support.
Missing parts upon arrival.	Packaging error or transit damage.	Contact Leeshyah customer support immediately with your purchase details.

SPECIFICATIONS

Feature	Detail
Product Dimensions	13.98 x 13.39 x 21.6 inches
Item Weight	6.3 pounds
Model Number	SAIPO011
Recommended Age	18 months and up (Manufacturer recommended age: 36 months - 3 years, but product description states 18 months+)
Materials	Natural wood, non-toxic paints, rubber wheels
Included in Box	Wooden Push Walker (assembly required)



Image: Product dimensions for the Leeshyah Wooden Baby Walker.

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the documentation included with your purchase or contact Leeshyah customer service directly through the retailer where the product was purchased. Please have your model number (SAIPO011) and purchase date available when contacting support.

© 2024 Leeshyah. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F1T54BRP>

More documents and user manuals: **<https://manuals.plus/>**