

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VJIANGER](#) /

› [VJIANGER W08 4K 64MP Digital Camera Instruction Manual](#)

VJIANGER W08

VJIANGER W08 4K 64MP Digital Camera Instruction Manual

Your comprehensive guide to setup, operation, and maintenance.

[Introduction](#)

[What's in the
Box](#)

[Setup](#)

[Operating](#)

[Media
Management](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the VJIANGER W08 4K 64MP Digital Camera. This compact and versatile camera is designed for capturing high-resolution photos and 4K videos, making it suitable for photography enthusiasts and content creators. Please read this manual carefully to understand the camera's features and ensure optimal performance.



Figure 1: Front view of the VJIANGER W08 4K 64MP Digital Camera.

2. WHAT'S IN THE BOX

Upon unpacking, please ensure all the following items are included:

- VJIANGER W08 4K 64MP Digital Camera
- 2 x Rechargeable Batteries
- Type-C USB Cable
- Camera Bag
- Lanyard
- User Manual (this document)
- 32GB Micro SD Card



Figure 2: Standard accessories included with your VJIANGER W08 Digital Camera.

3. SETUP

3.1. Battery Installation

1. Locate the battery compartment cover on the bottom or side of the camera.
2. Slide the cover open.
3. Insert the battery, ensuring the correct polarity (match the + and - symbols).
4. Close the battery compartment cover until it clicks securely.

Important: If the battery is installed incorrectly, the camera will not charge or power on unless plugged in.

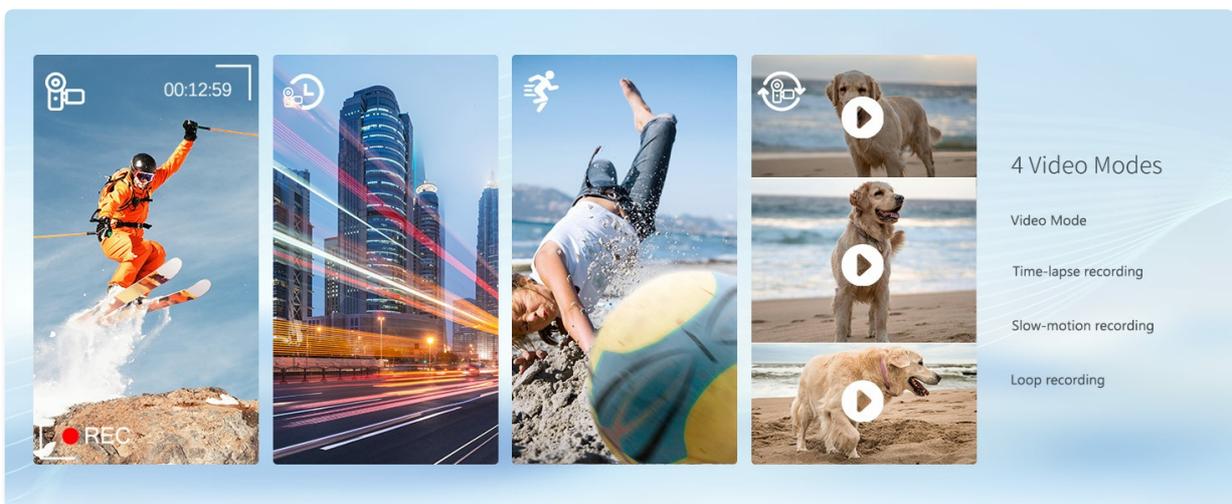


Figure 3: Correct battery installation.

3.2. Micro SD Card Installation

1. Locate the Micro SD card slot, usually near the battery compartment.
2. Insert the 32GB Micro SD card with the gold contacts facing down, pushing gently until it clicks into place.
3. To remove, press the card gently inward, and it will spring out.

Please install the battery correctly

If the battery is installed in the opposite direction, the camera will not be able to charge, it can only be turned on and used when it is plugged in.



Figure 4: Memory card slot location.

4. OPERATING THE CAMERA

4.1. Power On/Off

Press and hold the power button (usually located on the top or side) to turn the camera on or off.

4.2. Using the Flip Screen

The 3-inch 180° flip screen allows for easy self-recording and vlogging. Simply flip the screen upwards to view yourself while recording or taking photos.



Figure 5: Camera with flip screen engaged.

4.3. Shooting Modes

The camera offers various shooting modes to suit different scenarios:

- **Photo Mode:** For capturing still images.
- **Video Mode:** For recording 4K UHD 2160p or 1080p videos.
- **Continuous Shooting:** Captures multiple photos in quick succession.
- **Slow Motion:** Records video at a higher frame rate for slow-motion playback.
- **Time-lapse:** Captures images at set intervals to create a time-lapse video.
- **Loop Video:** Records video in a continuous loop, overwriting older footage.
- **Timer:** Sets a delay before taking a photo.
- **Auto Mode:** Camera automatically adjusts settings for optimal results.



Figure 6: Available shooting modes.

4.4. Zoom Function

The camera features 18X digital zoom. Use the W/T (Wide/Telephoto) button to zoom in or out while recording video or taking still images.

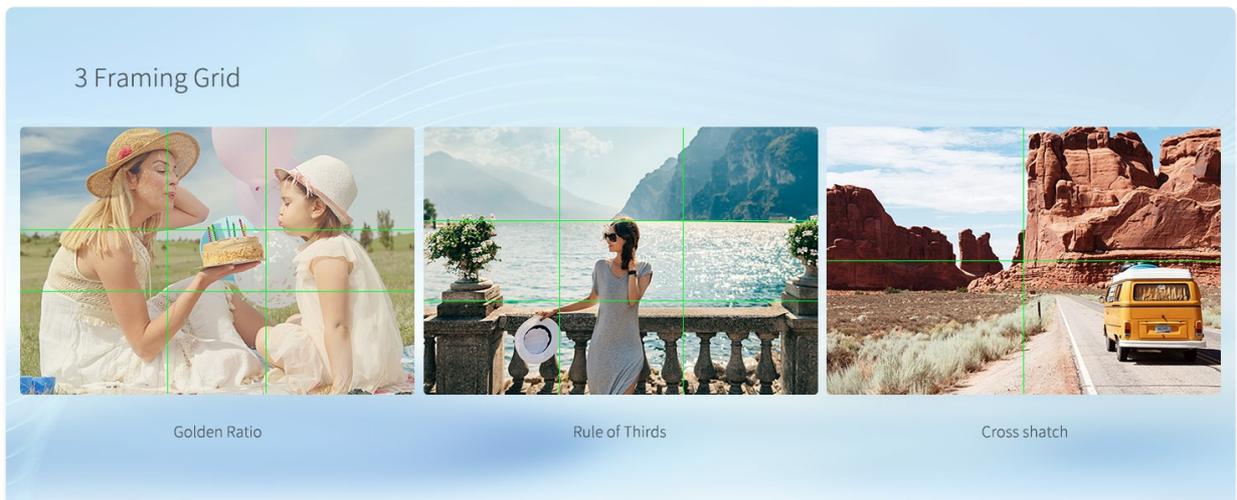


Figure 7: Digital zoom in action.

4.5. Built-in Flash

The camera includes a built-in flash for illuminating subjects in low-light conditions. The flash mode can be set to Fill Flash.

4.6. Webcam Functionality

Connect the camera to your PC using the provided USB cable. Select "Camera mode" on the device to use it as a webcam for video calls or live streaming.

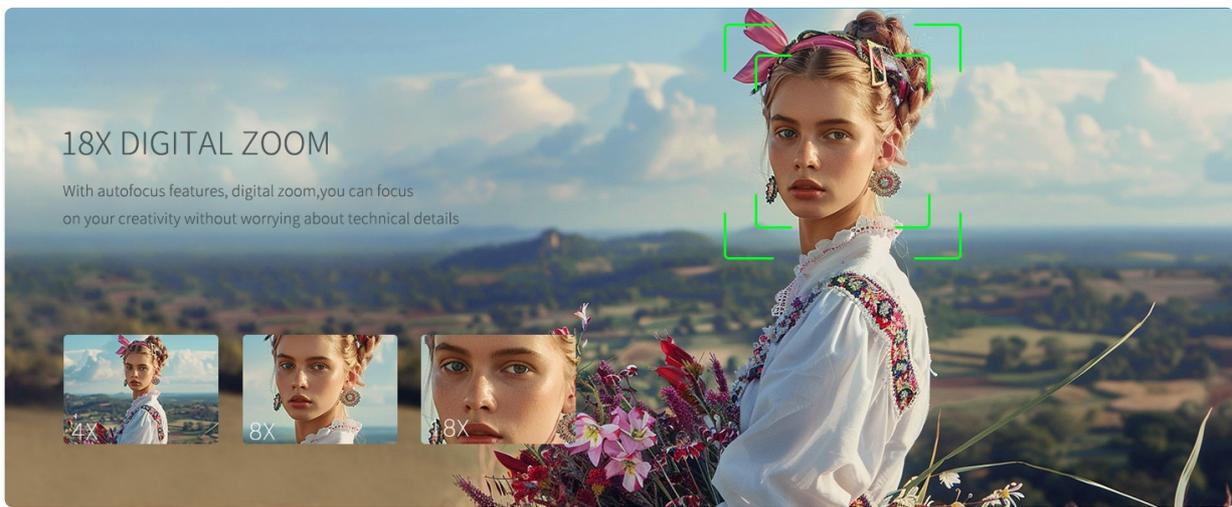


Figure 8: Camera used as a webcam.

4.7. Additional Features

- **Beauty Function:** Enhances portrait skin tones.
- **Filters:** Over 10 types of filters for creative effects.
- **Framing Grid:** Includes Golden Ratio, Rule of Thirds, and Crosshatch for composition.
- **Smile Face Capture:** Automatically detects and captures smiling faces.

5. MEDIA MANAGEMENT

5.1. Transferring Photos and Videos

You can transfer your media using several methods:

- **Wi-Fi Connection:** Use the camera's built-in Wi-Fi to transfer photos and videos to your smartphone or tablet via a dedicated app. This allows for quick sharing on social media.
- **USB Connection:** Connect the camera directly to your computer using the Type-C USB cable to transfer files.
- **Card Reader:** Remove the Micro SD card from the camera and insert it into a card reader connected to your computer for direct file access.



Figure 9: Media transfer options.

5.2. Viewing Media

Use the camera's playback mode to review your captured photos and videos on the flip screen.

6. MAINTENANCE

- **Cleaning the Lens:** Use a soft, lint-free cloth specifically designed for camera lenses to gently wipe away dust or smudges. Avoid using harsh chemicals.
- **Cleaning the Screen:** Use a microfiber cloth to clean the flip screen.
- **Battery Care:** Store batteries in a cool, dry place. If not using the camera for an extended period, remove the batteries.
- **Storage:** Store the camera in its protective bag when not in use to prevent scratches and dust accumulation.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Low battery; incorrectly installed battery.	Charge the battery; ensure battery is inserted with correct polarity.
Cannot take photos/videos.	No SD card; SD card full; SD card error.	Insert SD card; delete files or use a new SD card; format SD card (backup data first).
Poor image/video quality.	Low light; dirty lens; incorrect settings.	Use flash or better lighting; clean the lens; adjust shooting mode or settings.
Wi-Fi connection issues.	Incorrect password; camera too far from device; app not installed.	Verify Wi-Fi password; move camera closer; install the correct companion app.

8. SPECIFICATIONS

Feature	Detail
Brand	VJIANGER
Model Name	W08
Effective Still Resolution	64 MP
Video Resolution	4K UHD 2160p, 1080p
Digital Zoom	18x
Screen Size	3 Inches
Connectivity Technology	Wi-Fi
Storage Media	Micro SD (up to 32 GB included)

Feature	Detail
Battery Type	Lithium Ion
Battery Average Life	2 Hours
Image Stabilization	Digital
Supported File Format	JPEG, MP4
Item Weight	0.4 Kilograms
Flash Modes	Fill Flash
Continuous Shooting	30 FPS

9. WARRANTY & SUPPORT

9.1. Return Policy

This product is eligible for a refund or replacement within 30 days of purchase, subject to the retailer's return policy.

9.2. Customer Support

For any questions, technical assistance, or support regarding your VJIANGER W08 Digital Camera, please contact the seller directly through the platform where you made your purchase.

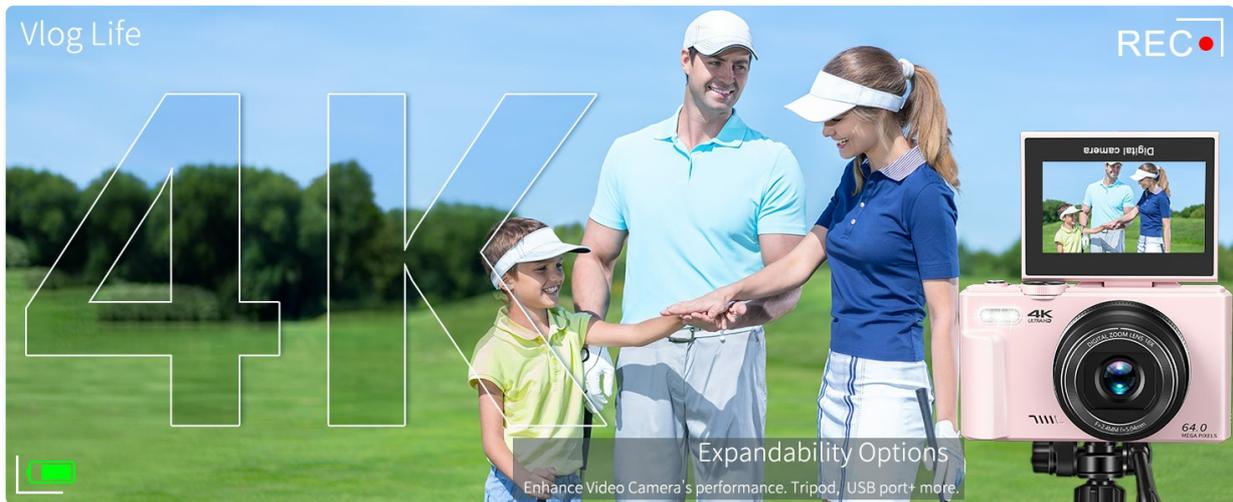


Figure 10: How to contact the seller for support.

10. PRODUCT VIDEOS

4K Digital Camera for Photography

Your browser does not support the video tag.

This video provides a general overview of the VJIANGER 4K digital camera's features and capabilities for photography.

4K Digital Camera for Photography and Video

Your browser does not support the video tag.

This video demonstrates the VJIANGER 4K digital camera's performance for both photography and video recording.

© 2024 VJIANGER. All rights reserved.