

[Manuals.plus](#) /

- › [Cambridge Casual](#) /
- › Cambridge Casual Logan Teak Wood Porch Swing Bed User Manual

Cambridge Casual Teak Wood

Cambridge Casual Logan Teak Wood Porch Swing Bed

USER MANUAL

Product Overview

The Logan Teak Wood Outdoor Swing Daybed with Off-White Cushion is designed to bring elegance, comfort, and durability to your outdoor living space. Crafted from premium Indonesian teak, this spacious 3-seater swing daybed features natural wood tones and soft off-white cushions, creating an inviting atmosphere for relaxation. Its robust construction ensures long-lasting enjoyment in various outdoor settings.



Image: The Logan Teak Wood Porch Swing Bed, showcasing its design and comfort in an outdoor environment.

Important Safety Information

- **Weight Limit:** Do not load more than 750 pounds onto the swing daybed. Exceeding this limit may cause damage or injury.
- **Handling:** Exercise caution around sharp edges when handling the unfinished teak wood during assembly and relocation.
- **Rope Security:** Always ensure the hanging ropes are properly secured to a sturdy support structure to prevent falls or strangulation hazards. Regularly inspect ropes for wear and tear.
- **Assembly:** Follow all assembly instructions carefully and completely to ensure the stability and structural integrity of the swing daybed. Improper assembly can lead to collapse.

Package Contents

Before beginning assembly, please verify that all components are present and undamaged. If any parts are missing or damaged, contact customer support immediately.

- Teak Wood Frame Components (sides, back, base)
- Plush Seat Cushion (Off-White)
- Accent Bolsters (2, Off-White)
- Weather-Resistant Hanging Ropes
- Assembly Hardware (screws, bolts, washers, etc.)
- Assembly Tool (e.g., Allen wrench)

Setup and Assembly

The Logan Teak Wood Porch Swing Bed is designed for easy assembly. It is recommended that two adults perform the assembly. Ensure you have adequate space and all components laid out before starting.

1. Unpack all components and verify against the package contents list.
2. Attach the side frames to the back frame using the provided hardware. Do not fully tighten screws until all major components are aligned.
3. Secure the base slats to the assembled frame.
4. Once the frame is fully assembled, tighten all screws and bolts securely.
5. Attach the weather-resistant ropes to the designated hanging points on the swing frame. Ensure knots are secure and properly tied.
6. Place the plush seat cushion and accent bolsters onto the swing daybed.
7. Hang the swing daybed from a sturdy, load-bearing structure (e.g., a reinforced porch beam or a dedicated swing stand) using appropriate hanging hardware (not included). Ensure the hanging points can support the swing's weight plus the maximum load capacity.

SWING DIMENSIONS

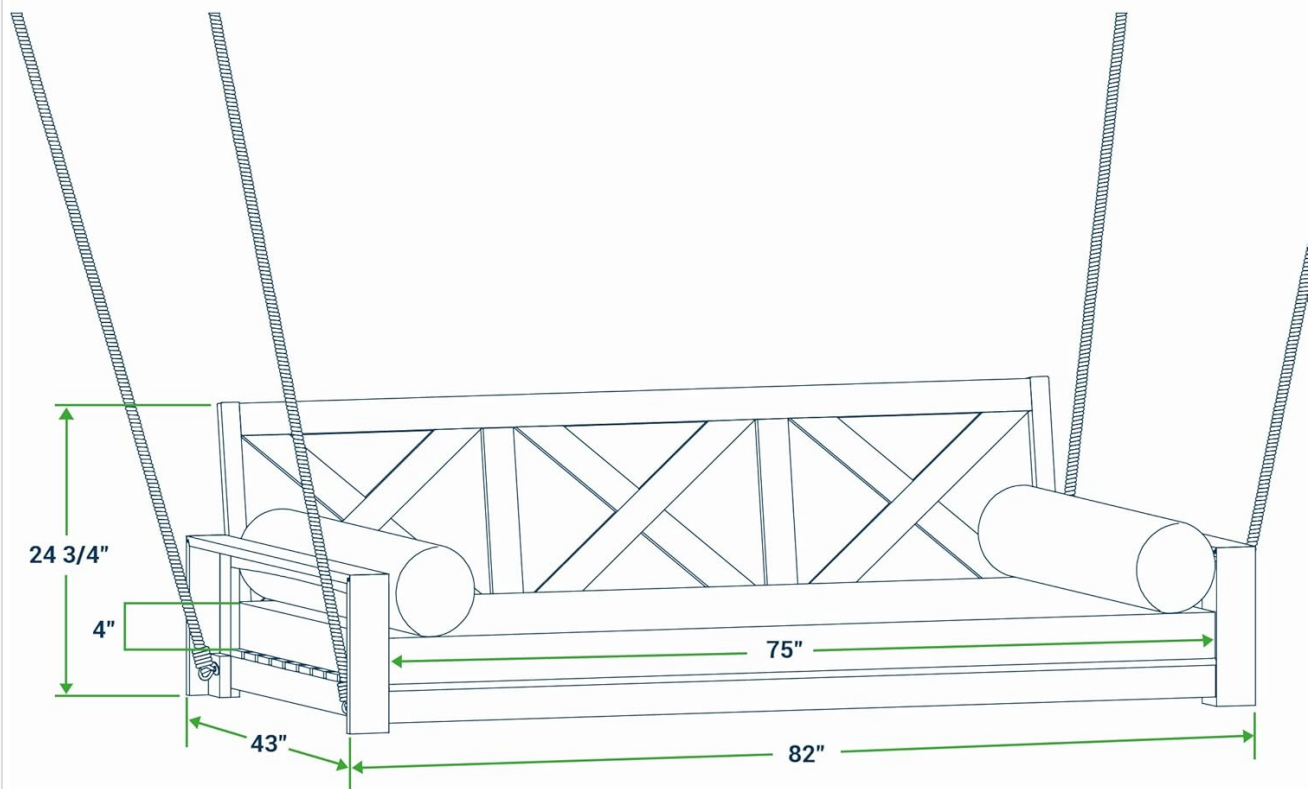


Image: Detailed dimensions of the swing daybed, useful for planning installation space.



Image: Close-up of the secure rope attachment point on the swing frame.

Operating Instructions

The Logan Teak Wood Porch Swing Bed is designed for comfortable outdoor lounging. To ensure safe and enjoyable use:

- Gently sit on the swing daybed, distributing your weight evenly.
- Avoid sudden movements or excessive swinging that could strain the ropes or frame.
- Ensure the total weight of occupants and any items on the swing does not exceed 750 pounds.
- Keep children supervised when using the swing daybed.



Image: The swing daybed providing a comfortable spot for relaxation.

Maintenance and Care

Proper care will extend the life and beauty of your swing daybed.

- **Teak Wood Care:** The teak wood is unfinished and will naturally weather to a silvery-gray patina over time. To maintain its original golden-brown color, apply a teak sealer or oil annually. Clean the wood with a soft brush and mild soap solution, then rinse thoroughly and allow to dry completely.
- **Cushion Care:** The off-white cushions are fade-resistant. For general cleaning, spot clean with a mild soap and water solution. For deeper cleaning, remove covers if possible and follow fabric care instructions. Store cushions indoors during prolonged periods of non-use or inclement weather to prevent mildew and extend their lifespan.
- **Rope Inspection:** Periodically inspect the hanging ropes for any signs of fraying, wear, or damage. Replace ropes immediately if any damage is detected.
- **Hardware Check:** Annually, check all screws and bolts to ensure they remain tight. Retighten as necessary to maintain structural integrity.



Image: Detail of the cushion and teak wood, highlighting the materials for care instructions.

Troubleshooting

If you encounter issues with your swing daybed, refer to the following common solutions:

- **Swing feels unstable:** Ensure all assembly hardware is fully tightened. Verify that the swing is hung from a stable, level, and adequately strong support structure.
- **Creaking noises:** Check all bolted connections and tighten if loose. Apply a small amount of silicone spray to metal-on-metal contact points if applicable, avoiding contact with wood or fabric.
- **Cushions appear dirty:** Refer to the "Cushion Care" section under Maintenance for cleaning instructions.
- **Wood color changing:** This is a natural process for unfinished teak. Refer to the "Teak Wood Care" section for options to maintain its original color or embrace the weathered look.

Specifications

Feature	Detail
---------	--------

Product Dimensions	82"L x 42.75"W x 24.75"H
Item Weight	136 pounds
Material	Premium Indonesian Teak Wood
Finish Type	Unfinished
Color	Teak, Off-white Cushion + Bolsters
Special Feature	Fade Resistant Cushions
Assembly Required	Yes
Form Factor	Swing Daybed
Maximum Load Capacity	750 pounds

Warranty and Support

Cambridge Casual stands behind the quality of its products. For specific warranty details, please refer to the documentation included with your purchase or visit the official Cambridge Casual website. If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact Cambridge Casual customer support.

For customer support, please refer to the contact information provided on the product packaging or the Cambridge Casual brand store on Amazon.