

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Acogedor](#) /

› [Acogedor 4K Action Camera User Manual - Model Acoge4fb8ne61dr](#)

Acogedor Acoge4fb8ne61dr

Acogedor 4K Action Camera User Manual

Model: Acoge4fb8ne61dr

1. INTRODUCTION

Thank you for choosing the Acogedor 4K Action Camera. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

This camera is designed to capture high-quality video and photos of your adventures, featuring 4K video recording, 16MP photos, a 170-degree wide-angle lens, and a 2.0-inch HD screen.

2. SAFETY INFORMATION

- Do not expose the camera to extreme temperatures or direct sunlight for extended periods.
- Keep the camera away from strong magnetic fields to prevent data loss or malfunction.
- Ensure all ports are securely closed if using the camera in or near water (if applicable with a waterproof case, not explicitly stated for the camera itself).
- Use only the specified charging cable and battery to avoid damage or fire hazards.
- Do not attempt to disassemble or repair the camera yourself. Contact customer support for assistance.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 4K Camera x 1
- Charging Cable x 1
- Extension Frame Components x 5
- Handlebar Components x 4
- Strap x 1
- Hook and Loop Fastener x 1
- User Manual x 1



Image: All included accessories for the Acogedor 4K Action Camera.

4. PRODUCT OVERVIEW

Familiarize yourself with the main components and features of your Acogedor 4K Action Camera.



Image: Front view of the camera, highlighting the lens and Wi-Fi indicator.



Image: Side view of the camera, displaying the control buttons and Micro USB port.



Image: Back view of the camera, featuring the 2.0-inch HD display.

Key Features:

- **4K Video & 16MP Photos:** Capture high-resolution footage and images.
- **170-Degree Wide-Angle Lens:** Provides a broad field of view for immersive shots.

- **2.0-inch HD Screen:** For easy framing and playback.
- **Multi-Axis Anti-Shake Technology:** Minimizes motion blur for stable footage.
- **Wi-Fi Connectivity:** Seamlessly sync with the GoPlus CamPro app for remote control and file transfer.

5. SETUP

5.1. Insert Memory Card

The camera supports a memory card up to 64GB (not included). Locate the memory card slot on the side of the camera. Insert the memory card with the contacts facing the correct direction until it clicks into place.

5.2. Charging the Battery

The camera comes with a 1050mAh Polymer Lithium Ion battery. Connect the camera to a power source using the provided Micro USB charging cable. The charging indicator will illuminate during charging and turn off when fully charged.

5.3. Attaching Accessories

Utilize the various included accessories, such as the handlebar components and extension frames, to mount your camera for different activities. Refer to the accessory diagrams for proper attachment.





Image: Camera mounted on a handlebar, demonstrating accessory use.

6. OPERATING INSTRUCTIONS

6.1. Power On/Off

To power on the camera, press and hold the power key. To power off, press and hold the power key again.

6.2. Mode Switching

Briefly press the 'Up' key to switch between different modes (e.g., Video, Photo, Playback). The current mode will be displayed on the 2.0-inch screen.



Image: Camera screen showing recorded footage.

6.3. Photo Functions

The camera supports various photo modes:

- **Single Shot:** Captures one photo per press.
- **Timed Shot:** Sets a delay before capturing a photo.
- **Continuous Shot:** Takes multiple photos in quick succession.

6.4. Wi-Fi Connection (GoPlus CamPro App)

To enable wireless functionality, briefly press the 'Up' key to activate Wi-Fi. Download the 'GoPlus CamPro' app on your smartphone. Connect your phone to the camera's Wi-Fi network. This allows for seamless photo and video transfer directly to your device for sharing.



Wireless synchronization function
Comes with wireless function, cell phone connects through APP, anytime, anywhere, cell phone control camera, convenient and comfortable.

Image: Wireless synchronization with the GoPlus CamPro app on a smartphone.

7. MAINTENANCE

7.1. Cleaning

- Use a soft, lint-free cloth to clean the camera body.
- For the lens and screen, use a specialized lens cleaning cloth and solution to avoid scratches.
- Do not use harsh chemicals or abrasive materials.

7.2. Battery Care

- Charge the battery fully before first use.
- Avoid completely draining the battery regularly to prolong its lifespan.
- Store the camera and battery in a cool, dry place when not in use.

8. TROUBLESHOOTING

If you encounter issues with your camera, refer to the following common solutions:

- **Camera not turning on:** Ensure the battery is charged and properly inserted. Try charging the camera for at least 30 minutes.
- **Memory card error:** Format the memory card (this will erase all data) or try a different, compatible memory card. Ensure the card is inserted correctly.
- **Poor image/video quality:** Check the lens for smudges or dirt. Ensure you are in adequate lighting conditions. Verify resolution settings.
- **Wi-Fi connection issues:** Restart both the camera and your smartphone. Ensure the GoPlus CamPro app is updated to the latest version.

If problems persist, please contact customer support for further assistance.

9. SPECIFICATIONS

Feature	Specification
Item Type	4K Camera
Material	ABS
Video Resolution	4K 30fps (Max)
Photo Resolution	16MP (Max)
Storage	Max 64GB Memory Card (Card not included)
Display Screen	2.0 inch HD Screen
Lens	170-degree Wide Angle 6-Glass Lens
Battery Type	Polymer Lithium Ion Battery, 1050mAh (Included)
Charging Interface	Micro USB
Photo Functions	Single Shot, Timed Shot, Continuous Shot, etc.
Language Support	Multi-language support
App Name	For GoPlus CamPro
Brand	Acogedor
Model Name	Acoge4fb8ne61dr
Product Weight	311g
Package Size	15 x 11 x 10 cm

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Acogedor website. Keep your proof of purchase for warranty claims.

