

Pretty Love 10298

Pretty Love Tommy Realistic Skin Vibrator

Model: 10298

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

1. SETUP

1.1 Unpacking and Initial Inspection

Carefully remove all components from the packaging. Inspect the vibrator and remote control for any visible damage. If any damage is found, do not use the product and contact customer support.

1.2 Charging the Main Unit

The main vibrator unit is rechargeable via magnetic USB. Locate the magnetic charging points on the base of the vibrator. Connect the provided USB charging cable to these points and plug the other end into a standard USB power adapter (not included) or a computer USB port. The indicator light will show charging status (specific light behavior may vary by production batch, refer to packaging if available). Ensure the unit is fully charged before first use.



Figure 1: Magnetic charging connection for the main unit and AAA battery compartment for the remote control.

1.3 Installing Remote Control Battery

The remote control requires one (1) AAA battery. Open the battery compartment on the back of the remote control. Insert one new AAA battery, ensuring correct polarity (+/-). Close the battery compartment securely.

1.4 Initial Cleaning

Before first use, clean the vibrator thoroughly. Refer to the 'Maintenance' section for detailed cleaning instructions.

2. OPERATION

2.1 Powering On/Off

To power on the vibrator, press and hold the ON/OFF button located on the remote control. The vibrator will start vibrating. To power off, press and hold the ON/OFF button again.



Figure 2: Remote control with ON/OFF and vibration intensity buttons.

2.2 Adjusting Vibration Intensity/Patterns

Once powered on, press the 'Vibration Button' (often indicated by a wave or similar symbol) on the remote control to cycle through different vibration intensities and patterns. Continue pressing until you find your preferred setting.

2.3 Using the Suction Cup Base

The vibrator features a strong suction cup base. To attach it to a smooth, flat, and clean surface, press the base firmly against the surface until it creates a vacuum seal. This allows for hands-free use. To remove, gently lift the edge of the suction cup to break the seal.



Figure 3: Demonstrating the suction cup base for hands-free use.

2.4 Water Resistance

The Pretty Love Tommy vibrator is waterproof. It can be used in the shower or bath. However, avoid submerging the remote control unless explicitly stated as waterproof in its separate instructions. Always ensure the charging port area is dry before charging.

3. MAINTENANCE

3.1 Cleaning

Clean the vibrator thoroughly before and after each use. Use warm water and a mild, toy-safe soap or a specialized toy cleaner. Rinse thoroughly with clean water. Avoid using harsh chemicals, alcohol-based cleaners, or petroleum-based lubricants, as these can damage the silicone material.

3.2 Drying

Pat the vibrator dry with a lint-free cloth or allow it to air dry completely before storage.

3.3 Storage

Store the vibrator in a clean, dry, and dust-free place, away from direct sunlight and extreme temperatures. Keep it separate from other toys made of different materials to prevent material degradation or reactions.

4. TROUBLESHOOTING

4.1 Vibrator Not Turning On

- **Check Battery:** Ensure the main unit is fully charged.
- **Remote Battery:** Verify the AAA battery in the remote control is correctly installed and not depleted. Replace if necessary.
- **Connection:** Ensure the remote control is within range and properly paired (if applicable, though this model typically pairs automatically).

4.2 Weak or Inconsistent Vibration

- **Recharge:** The main unit's battery may be low. Recharge fully.
- **Remote Battery:** Replace the AAA battery in the remote control.

4.3 Charging Issues

- **Cable Connection:** Ensure the magnetic charging cable is securely connected to both the vibrator and the USB power source.
- **Power Source:** Try a different USB port or power adapter.
- **Clean Contacts:** Ensure the magnetic charging contacts on the vibrator are clean and free of debris.

If problems persist, please contact customer support for further assistance.

5. SPECIFICATIONS

Model Number	10298
Material	Silicone, ABS
Insertable Length	15.5 cm
Diameter	4.2 cm
Total Height/Length	22.5 cm
Power Source (Main Unit)	USB Rechargeable (Magnetic)
Power Source (Remote)	1 x AAA Battery (included)
Water Resistance	Waterproof
Package Dimensions	25 x 15 x 10 cm
Package Weight	482 g

6. WARRANTY AND SUPPORT

6.1 Warranty Information

This product comes with a standard manufacturer's warranty. Please refer to your purchase documentation or the manufacturer's official website for specific warranty terms and conditions.

6.2 Customer Support

For any questions, concerns, or technical assistance, please contact Pretty Love customer support through their official website or the retailer from whom you purchased the product. Please have your model number (10298) and proof of purchase ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question