

## Adler AD 1906

# Adler AD 1906 Portable Digital AM/FM Radio User Manual

Model: AD 1906 | Brand: Adler

## 1. INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation of your Adler AD 1906 Portable Digital AM/FM Radio. Please read this manual thoroughly before using the device and retain it for future reference.

### Key Features:

- Digital LCD Display:** Clearly shows FM frequency, battery level, clock, alarm, snooze, and sleep functions.
- AM/FM Tuner:** Equipped with an extendable telescopic antenna for optimal signal reception.
- PLL Automatic Tuning System:** Ensures accurate station search without interference.
- Intuitive Controls:** Central control panel with selector button and volume adjustment for simple operation.
- Versatile Powering:** Battery operated (DC 4.5V, 3 AAA batteries, not included) for portability, and includes a USB port for additional connection.
- Compact Design:** Sleek black and white construction with a built-in front speaker, ideal for various spaces.
- Wide Frequency Range:** FM: 87.5-108 MHz, AM: 522-1620 kHz.
- Station Memory:** Stores 20 favorite stations for FM and 20 for AM.
- Audio Output:** 3.5mm headphone jack for private listening and 0.8W output power.

## 2. SAFETY INFORMATION

- Do not expose the device to rain or moisture.
- Avoid extreme temperatures, direct sunlight, and high humidity.
- Do not disassemble or attempt to repair the device yourself. Refer all servicing to qualified personnel.
- Use only specified batteries (3 x AAA). Ensure correct polarity when inserting batteries.
- Remove batteries if the device will not be used for an extended period.
- Keep out of reach of children.
- Clean the device only with a soft, dry cloth. Do not use liquid cleaners or aerosols.

### 3. PACKAGE CONTENTS

- Adler AD 1906 Portable Digital AM/FM Radio
- User Manual (this document)
- *Note: AAA batteries are not included and must be purchased separately.*

### 4. PRODUCT OVERVIEW



**Figure 4.1: Front View**

Shows the main speaker grille on the left, the LCD display on the right, and the circular control panel below the display. The telescopic antenna is extended upwards.



**Figure 4.2: Control Panel Detail**

A closer look at the LCD screen showing "FM U-14" and battery indicator. The control panel features "VOL+" and "VOL-" buttons, and a central "SELECT" button with directional arrows.



**Figure 4.3: Rear View with Battery Compartment**

The back of the radio with the battery cover removed, revealing slots for three AAA batteries. Product information and certification labels are visible.





**Figure 4.4: Side View**

The radio viewed from the side, showing the fully extended telescopic antenna and the row of control buttons along the top edge of the device.

### **Button Functions (Top Panel):**

- **POWER:** Turns the radio on/off.
- **AM/FM:** Switches between AM and FM bands.

- **PROG:** Program button for saving stations.
- **CLOCK SET:** Enters clock setting mode.
- **ALARM:** Sets or activates the alarm function.
- **SLEEP:** Activates the sleep timer function.
- **PREV/NEXT (<< / >>):** Skips to previous/next station or adjusts settings.

### Control Panel (Front):

- **VOL+ / VOL-:** Adjusts the volume level.
- **SELECT:** Confirms selections or enters menu options.
- **Left/Right Arrows:** Navigates through frequencies or menu options.

### Ports (Side/Rear):

- **USB Port:** For additional connectivity (e.g., power input, though primarily battery operated).
- **3.5mm Headphone Jack:** For private listening.

## 5. SETUP

---

### 5.1 Battery Installation

1. Locate the battery compartment on the back of the radio (refer to Figure 4.3).
2. Slide the battery compartment cover downwards and lift it off.
3. Insert three (3) AAA batteries (not included) into the compartment, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover, sliding it upwards until it clicks securely into place.

### 5.2 Initial Power On

Press the **POWER** button on the top panel to turn on the radio. The LCD display will illuminate.

## 6. OPERATING INSTRUCTIONS

---

### 6.1 Tuning Radio Stations

1. Extend the telescopic antenna for optimal reception.
2. Press the **AM/FM** button to select your desired band (AM or FM).
3. Use the Left/Right arrow buttons on the front control panel to manually tune to a specific frequency.
4. To automatically scan for stations, press and hold the Left/Right arrow buttons. The radio will stop at the next strong signal.

### 6.2 Saving Favorite Stations (Presets)

The radio can store up to 20 FM and 20 AM stations.

1. Tune to the desired station you wish to save.
2. Press the **PROG** button. The display will show a flashing preset number (e.g., "P01").
3. Use the Left/Right arrow buttons to select the desired preset number.

4. Press the **SELECT** button to confirm and save the station.

### 6.3 Recalling Saved Stations

Press the **PROG** button briefly, then use the Left/Right arrow buttons to cycle through your saved stations. Press **SELECT** to choose a station.

### 6.4 Adjusting Volume

Use the **VOL+** and **VOL-** buttons on the front control panel to increase or decrease the volume level.

### 6.5 Setting Clock, Alarm, Snooze, and Sleep Timer

Refer to the specific instructions below for each function:

- **Clock Set:** Press and hold **CLOCK SET**. Use arrow buttons to adjust hours/minutes, and **SELECT** to confirm.
- **Alarm:** Press and hold **ALARM**. Use arrow buttons to set alarm time, and **SELECT** to confirm. Press **ALARM** briefly to activate/deactivate.
- **Snooze:** When the alarm sounds, press any button (except **POWER**) to activate snooze. The alarm will sound again after a short interval.
- **Sleep Timer:** Press **SLEEP** repeatedly to cycle through sleep timer options (e.g., 15, 30, 60, 90 minutes, OFF). The radio will automatically turn off after the selected time.

### 6.6 Using Headphones

Plug any standard 3.5mm stereo headphones into the headphone jack located on the side of the radio for private listening. The internal speaker will automatically mute when headphones are connected.

## 7. MAINTENANCE

- **Cleaning:** Wipe the radio with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** If storing the radio for an extended period, remove the batteries to prevent leakage. Store in a cool, dry place.
- **Antenna Care:** Handle the telescopic antenna gently to avoid bending or breaking.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Radio does not turn on.	Batteries are dead or incorrectly inserted.	Replace batteries with new ones, ensuring correct polarity.
Poor radio reception.	Antenna not extended; weak signal area; interference.	Fully extend the telescopic antenna. Try repositioning the radio. Move away from electronic devices that may cause interference.
No sound from speaker.	Volume is too low; headphones are connected.	Increase the volume using <b>VOL+</b> button. Disconnect headphones if not needed.



Problem	Possible Cause	Solution
Display is dim or blank.	Low battery power.	Replace batteries.

## 9. SPECIFICATIONS

Feature	Detail
Brand	Adler
Model	AD 1906
Tuner Technology	Digital
Radio Bands Supported	AM, FM
FM Frequency Range	87.5-108 MHz
AM Frequency Range	522-1620 kHz
Display Type	LCD
Power Source	Battery Powered (DC 4.5V)
Batteries Required	3 x AAA (not included)
Speaker Output Power	0.8W (0.8 Watts)
Connectivity	USB-C, 3.5mm Headphone Jack
Material Type	Plastic
Product Dimensions (L x W x H)	8.5 x 3 x 15 cm
Item Weight	150 g

## 10. WARRANTY AND SUPPORT





Adler products are manufactured to high-quality standards. This product is covered by a standard manufacturer's warranty against defects in materials and workmanship from the date of purchase. Please retain your proof of purchase for warranty claims.

 
For technical support, warranty inquiries, or service, please contact your local retailer or the Adler customer service department. Contact information can typically be found on the product packaging or the official Adler website.

*Note: The warranty does not cover damage caused by misuse, neglect, unauthorized modification, or normal wear and tear.*

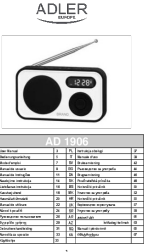

 
Related Documents

	<p><a href="#">Adler AD 1906 Portable Radio User Manual</a></p> <p>Comprehensive user manual for the Adler AD 1906 portable AM/FM radio, covering safety instructions, operation, specifications, and troubleshooting.</p>
	<p><a href="#">Adler AD 1181 WC Boombox: Features, Specifications, and Packaging</a></p> <p>Detailed specifications and features of the Adler AD 1181 WC Boombox, a battery and mains powered CD player with FM radio and USB playback. Includes physical parameters, power details, and packaging information.</p>
	<p><a href="#">Adler AD 1908 Portable Radio with Bluetooth - User Manual</a></p> <p>This user manual provides essential safety instructions and operating guides for the Adler AD 1908 portable radio. Learn about its FM radio capabilities, Bluetooth connectivity, and user controls for an optimal audio experience.</p>
	<p><a href="#">Adler AD 7725 Fan Heater - User Manual &amp; Safety Guide</a></p> <p>Comprehensive user manual and safety guide for the Adler AD 7725 fan heater. Learn about operation, features, and essential safety precautions for this home appliance.</p>

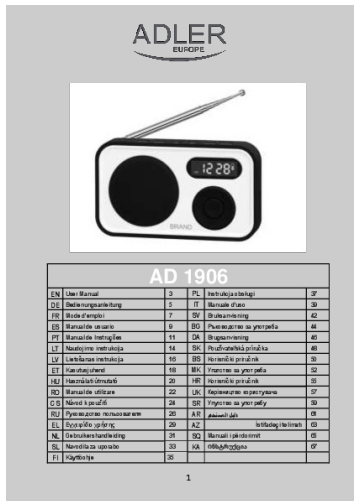[illegible]

Adler AD 1906 Portable Radio User Manual

lang:en score:34 filesize: 3.11 M page\_count: 80 document date: 2024-09-05

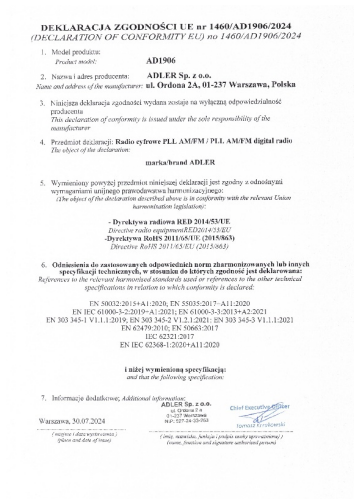

- Model problem:  
Product model:  
2. Nowy iświatłoczuły produkt  
Name and address of the manufacturer:  
A.D. 1966  
ADIER Sp. z o.o.  
ul. Ordona 24, 01-237 Warszawa, Polska  
3. Należy dokonać aktualizacji systemu notowań na wyliczonej odpowiedzialności producenta  
This declaration of conformity is issued under the sole responsibility of the manufacturer  
4. Produkt jest zgodny: Radio cyfrowe PL, AFM, PL, AFM, AFM digital radio  
The object of the declaration  
markawrand ADIER  
5. Wyświetlenie połączonych informacji technicznych (oznaczeń) jest zgodne z obowiązującymi wymaganiami legislacyjnymi przewidzianymi dla urządzeń  
The object of the declaration is in conformity with the relevant EU and harmonized legislation  
- Dyrektywa radiowa RED 2014/53/UE  
Dyrektywa RoHS 2011/65/UE (Załącznik I)  
Dyrektywa RoHS 2011/65/UE (Załącznik II)  
Directive (Radio) 2014/53/UE (2014/53/UE)  
6. Oświadczenie jest zgodne z następującymi normami harmonizacyjnymi lub innymi specyfikacjami technicznymi, które zostały opublikowane lub będą opublikowane  
References to the relevant harmonized standards used or references to the other relevant specifications or technical specifications to be published  
EN 50022:2015+A1:2019, EN 50023:2017, EN 50120:2012  
EN 60950-1:2012, EN 60950-2:2012, EN 60950-3:2012, EN 60950-4:2012  
EN 300 345-1 V1.1.2019, EN 300 345-2 V1.1.2021, EN 300 345-3 V1.1.2021  
EN 300 345-4 V1.1.2019, EN 300 345-5 V1.1.2021, EN 300 345-6 V1.1.2021  
EN 300 345-7 V1.1.2019, EN 300 345-8 V1.1.2021  
IEC 62321:2017  
EN IEC 62368-1:2019 (2019/858)
1. Informacje dodatkowe: Additional information:  
2. Informacje dodatkowe: Additional information:  
ADIER Sp. z o.o.  
ul. Ordona 24, 01-237 Warszawa, Polska  
E-mail: biuro@adier.pl  
www.adier.pl  
Główny Dyrektor  
[Signature]
- Warszawa, 30.07.2024  
(miejscu dla wytwórcy)  
[Signature]

[\[pdf\]](#)

ad 1906 adler pl dane deklaracje CE |||

...

lang:en score:15 filesize: 531 K page\_count: 1 document date: 2024-07-31



[\[pdf\]](#)

Adobe Photoshop tz giftbox ad 1906 adler pl dane flat |||

...

lang:en score:14 filesize: 3.18 M page\_count: 1 document date: 2025-01-08