

HEADNMORE PERM 1800

HEADNMORE Parkside PERM 1800 Electric Lawnmower and Keychain Bundle User Manual

Model: PERM 1800

1. IMPORTANT SAFETY INFORMATION

Please read this instruction manual carefully before operating the HEADNMORE Parkside PERM 1800 Electric Lawnmower. Failure to follow these instructions may result in serious injury or damage to the product. Keep this manual in a safe place for future reference.

General Safety Warnings:

- Always wear appropriate personal protective equipment (PPE) such as safety glasses, sturdy footwear, and hearing protection when operating the lawnmower.
- Ensure the work area is clear of stones, sticks, wires, and other debris that could be thrown by the blade.
- Do not operate the lawnmower in wet grass or rain.
- Keep children and pets away from the operating area.
- Disconnect the power supply before cleaning, adjusting, or performing maintenance on the lawnmower.
- Never lift or carry the lawnmower while the motor is running.
- Inspect the power cord for damage before each use. Do not use if the cord is damaged.

2. PRODUCT OVERVIEW

The HEADNMORE Parkside PERM 1800 Electric Lawnmower is designed for efficient lawn care, featuring a powerful 1800W motor and a 44 cm cutting width. This bundle also includes a HEADNMORE keychain bottle opener.



Figure 2.1: The HEADNMORE Parkside PERM 1800 Electric Lawnmower shown with the included HEADNMORE keychain.

Key Features:

- 1800W Turbo-Power motor for high traction force.
- 7-level central cutting height adjustment (approx. 20-70 mm).
- Sharpened special steel blade with 44 cm cutting width.
- Integrated lawn edge insert on both sides for precise cutting near edges.
- Lightweight construction for easy maneuverability.
- 55 L grass collection bag with fill level indicator.

- Knife brake function for enhanced safety.
- Height and angle adjustable handlebar with integrated cable strain relief.
- Ergonomic handle with soft grip and metal switch bar.
- Robust, impact-resistant plastic housing with central carrying handle.
- Foldable function for space-saving storage.

HEADNMORE Keychain:



Figure 2.2: Close-up view of the HEADNMORE keychain, which functions as a bottle opener.

- Material: Aluminum.
- Function: Bottle opener for bottles and cans with tabs.
- Dimensions: 55 mm (length) x 10 mm (width) x 15 mm (height).
- Weight: 14 g.

3. SETUP AND ASSEMBLY

The Parkside PERM 1800 Electric Lawnmower requires some assembly before first use. Please follow these steps carefully.



Figure 3.1: The product packaging, indicating key specifications of the Parkside PERM 1800 Electric Lawnmower.

1. **Unpacking:** Carefully remove all components from the packaging. Check for any damage or missing parts.
2. **Handlebar Assembly:**
 - Attach the lower handlebar sections to the main unit using the provided fasteners.
 - Connect the upper handlebar section, ensuring the cable is routed correctly and secured by the integrated strain relief.
 - Adjust the handlebar height and angle to a comfortable working position, then secure it firmly.
3. **Grass Collection Bag Assembly:** Assemble the grass collection bag according to the instructions provided in the separate manual (if applicable). Attach the assembled bag to the rear of the lawnmower.
4. **Power Connection:** Ensure the lawnmower is switched off before connecting it to a suitable power outlet. Use an extension cord rated for outdoor use and the lawnmower's power requirements.

4. OPERATING INSTRUCTIONS

Follow these steps for safe and effective operation of your electric lawnmower.

1. **Pre-Operation Check:**
 - Inspect the blade for sharpness and damage.
 - Ensure all fasteners are tight.
 - Check the grass collection bag is securely attached.
 - Clear the lawn of any debris.
2. **Adjusting Cutting Height:** The lawnmower features a 7-level central cutting height adjustment. Locate the adjustment lever (usually near the wheels) and move it to select your desired cutting height (approx. 20-70 mm).
3. **Starting the Lawnmower:**
 - Ensure the power cord is securely connected and routed to avoid entanglement.

- Press and hold the safety button, then pull the metal switch bar towards the handlebar. The motor will start.
- Release the safety button, but keep the switch bar held to maintain operation.

4. Mowing Technique:

- Mow in overlapping strips to ensure even coverage.
- For best results, cut no more than one-third of the grass height at a time.
- Utilize the lawn edge insert for clean cuts along borders and obstacles.
- Monitor the grass collection bag's fill level indicator and empty it when full.

5. **Stopping the Lawnmower:** Release the metal switch bar. The knife brake function will quickly stop the blade.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your lawnmower.

• Cleaning:

- Always disconnect from power before cleaning.
- Remove grass clippings from the underside of the deck and around the blade using a brush or scraper.
- Clean the exterior with a damp cloth. Do not use water jets or harsh chemicals.

• Blade Care:

- Regularly inspect the blade for sharpness and damage. A dull blade can tear grass, leading to an unhealthy lawn.
- If the blade is dull or damaged, have it sharpened or replaced by a qualified service technician.

• Storage:

- Clean the lawnmower thoroughly before storing.
- Utilize the foldable function to reduce storage space.
- Store in a dry, secure location, out of reach of children.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your lawnmower.

Problem	Possible Cause	Solution
Lawnmower does not start.	No power supply; safety switch not engaged; damaged cable.	Check power connection; ensure safety button and switch bar are correctly engaged; inspect cable for damage and replace if necessary.
Poor cutting performance.	Dull or damaged blade; cutting height too low for grass type; grass collection bag full.	Have blade sharpened or replaced; adjust cutting height; empty grass collection bag.
Excessive vibration.	Unbalanced or damaged blade; loose components.	Disconnect power and inspect blade for damage; tighten all visible fasteners. If vibration persists, seek professional service.

7. TECHNICAL SPECIFICATIONS

Parkside PERM 1800 Electric Lawnmower:

- **Operating Mode:** Electric
- **Power:** 1800 W
- **No-load Rotation Speed:** 3250 rpm
- **Cutting Width:** Approx. 44 cm
- **Cutting Height:** 7 levels, approx. 20-70 mm
- **Grass Collection Bag Volume:** Approx. 55 L
- **Material:** Plastic, Steel
- **Dimensions (L x W x H):** Approx. 121-137 cm x 48.5 cm x 101-121 cm
- **Weight:** Approx. 16.7 kg
- **Power Source:** Electric Cable
- **Assembly Required:** Yes

HEADNMORE Keychain:

- **Material:** Aluminum
- **Type:** Bottle Opener
- **Function:** Opens bottles and cans with tabs
- **Length:** 55 mm
- **Width:** 10 mm
- **Height:** 15 mm
- **Weight:** 14 g

8. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or contact HEADNMORE customer support. Keep your proof of purchase for warranty claims.

For technical support, spare parts, or service inquiries, please contact the manufacturer or your retailer. Always provide the model number (PERM 1800) when seeking assistance.

