

[Manuals.plus](#) /

› [SOCICO](#) /

› SOCICO Socico-3328 Men's Digital Sports Watch Instruction Manual

SOCICO Socico-3328

SOCICO Socico-3328 Men's Digital Sports Watch Instruction Manual

Model: Socico-3328

1. PRODUCT OVERVIEW

The SOCICO Socico-3328 Digital Sports Watch is designed for active individuals, offering a clear digital display and multiple functions in a durable, waterproof design. It is suitable for various outdoor activities and daily wear.




Front view of the SOCICO Socico-3328 Digital Sports Watch.

Key Features:

- **Digital Display:** Large face for clear time, date, and function visibility.

- **Waterproof Design:** Rated for 3ATM, suitable for swimming and water activities.
- **Multiple Functions:** Includes stopwatch, hourly chime, date display, alarm clock, and backlight.
- **Durable Construction:** Rugged ABS case, comfortable TPU band, and stainless steel back.
- **Backlight:** Green LED backlight for nighttime visibility.

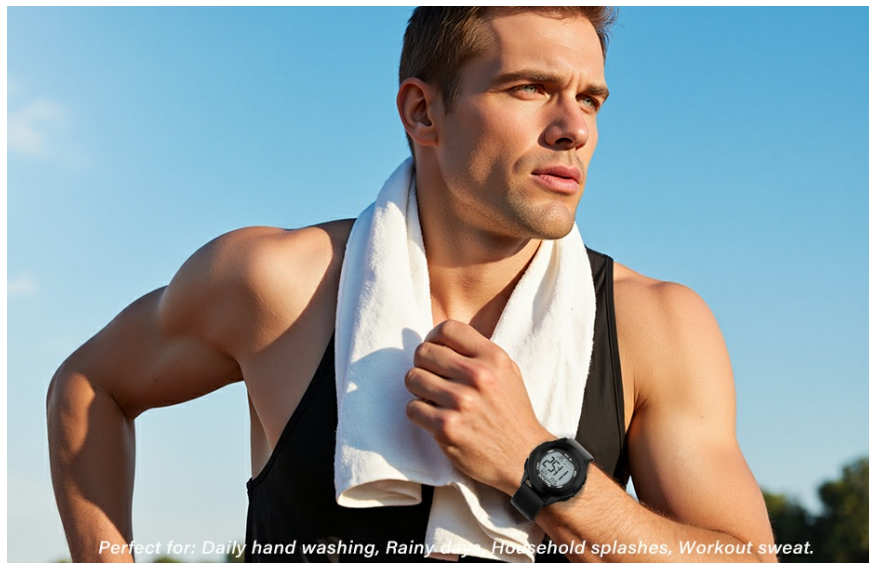

Perfect for: Daily hand washing, Rainy days, Household splashes, Workout sweat.



30M SPLASH RESISTANCE

Handles Rain, Sweat & Daily Life

Visual overview of the watch's various functions.

2. INITIAL SETUP

2.1 Setting Time and Date

1. Press the 'MODE' button three times to enter time setting mode.
2. Press the 'RESET' button once to select the hour, then use the 'START' button to adjust the hour.
3. Press 'RESET' again to select minutes, then use 'START' to adjust.
4. Continue pressing 'RESET' to cycle through year, month, and day settings, adjusting each with the 'START' button.
5. Once all settings are complete, press the 'MODE' button to exit.

Set Time Format (12/24-Hour)



1

Press "M" 3 times and "R" once to enter time setting



2

Press "S" and watch the letters displayed at the bottom of the screen



3

H = 24 hours (no A/P display)



4

A = 12 hours (AM)



5

P = 12 hours (PM)



6

When setting is complete, press "M" to exit setting

Step-by-step guide for setting the watch's time and date.

2.2 Adjusting 12/24-Hour Format

The watch supports both 12-hour (AM/PM) and 24-hour (military) time formats. Follow these steps to switch between them:

1. Press the 'MODE' button three times to enter time setting mode.
2. Press the 'RESET' button until the hour display is blinking.

3. Press the 'START' button to cycle through 'H' (24-hour), 'A' (12-hour AM), and 'P' (12-hour PM) indicators. Select your desired format.
4. Press the 'MODE' button to exit the settings.

Video tutorial on how to adjust the 12-hour or 24-hour time format on your watch.

3. OPERATING MODES

3.1 Stopwatch Function

The watch includes a precision stopwatch for timing activities.

1. Press the 'MODE' button once to enter stopwatch mode (display shows 'ST').
2. Press the 'START' button to begin timing.
3. Press 'START' again to pause the stopwatch.
4. Press 'RESET' to clear the stopwatch to zero.
5. Press the 'MODE' button to exit stopwatch mode and return to normal time display.

Video demonstration on how to use the stopwatch function.

3.2 Alarm Setting and Snooze

Set an alarm for daily reminders or wake-up calls. The snooze function provides an additional 5 minutes of sleep.

1. Press the 'MODE' button twice to enter alarm mode (display shows 'AL').
2. Press the 'RESET' button once to adjust alarm hours, then use 'START' to set the desired hour.
3. Press 'RESET' again to adjust alarm minutes, then use 'START' to set the desired minutes.
4. To activate the alarm, ensure the alarm symbol is displayed.
5. When the alarm sounds, press the 'MODE' button to activate snooze. The alarm will repeat after 5 minutes.
6. To stop the alarm immediately, press 'START' or 'RESET'.

Video guide on setting and using the snooze function for the alarm.

3.3 Backlight Activation

For visibility in low-light conditions, the watch features a green LED backlight.

- Press the 'LIGHT' button located on the top left side of the watch to activate the backlight.
- The backlight will illuminate the display for a few seconds before automatically turning off.

Video showcasing the easy-to-read large dial and backlight feature.

4. SPECIFICATIONS

Feature	Detail
Model Number	Socico-3328
Dial Diameter	46 mm / 1.81 inches
Case Thickness	14 mm / 0.55 inches


Feature	Detail
Weight	47 grams / 0.1 pounds
Water Resistance	3ATM (30 meters)
Case Material	ABS
Band Material	TPU (Thermoplastic Polyurethane)
Back Material	Stainless Steel
Battery	1 Nonstandard Battery (included)



Soft & Anti-allergic



14mm

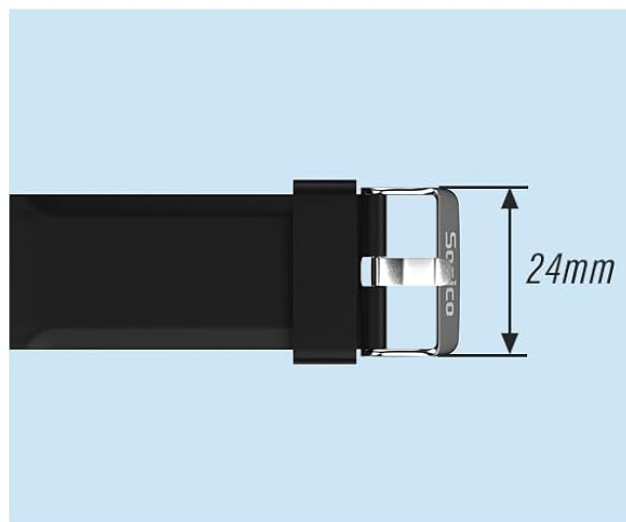

24mm

Detailed dimensions of the watch for proper fit assessment.



View of the watch's stainless steel back.

5. MAINTENANCE AND CARE

To ensure the longevity and optimal performance of your SOCICO digital watch, follow these maintenance guidelines:

- **Cleaning:** Wipe the watch regularly with a soft, damp cloth to remove dirt and sweat. Avoid harsh chemicals.
- **Water Resistance (3ATM):** The watch is designed to withstand splashes, rain, handwashing, and brief immersion in water (e.g., swimming). It is not recommended for diving, snorkeling, or prolonged underwater activities. Do not press buttons while the watch is submerged in water.
- **Temperature:** Avoid exposing the watch to extreme temperatures (hot or cold) as this can affect battery life and internal components.
- **Impact:** While durable, avoid strong impacts or dropping the watch to prevent damage to the display or internal mechanisms.

FUNCTION OVERVIEW



The watch demonstrating its 3ATM water resistance.

Short video highlighting the watch's waterproof capabilities for sports and daily use.

6. TROUBLESHOOTING

If you encounter any issues with your SOCICO digital watch, please refer to the following common solutions:

- **Display is blank or dim:** Check the battery. If the issue persists after battery replacement, contact support.

- **Buttons are unresponsive:** Ensure the watch is not in a locked mode. If submerged, ensure it is dry before attempting to press buttons.
- **Time is inaccurate:** Re-set the time and date following the instructions in Section 2.1.
- **Alarm not sounding:** Verify that the alarm is activated and set correctly in alarm mode.

For issues not covered here, please contact customer support.

7. WARRANTY AND SUPPORT

For any setup issues or product inquiries, please contact the seller, Ym Precision Time, directly through your purchase platform. They will assist you in resolving your issues as soon as possible upon receiving your message.

Please retain your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question