

[Manuals.plus](#) /

› [Electrolux](#) /

› Electrolux 800 3-in-1 Wet & Dry Cordless Cleaner User Manual EFW81713

Electrolux EFW81713

Electrolux 800 3-in-1 Wet & Dry Cordless Cleaner User Manual

Model: EFW81713

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Electrolux 800 3-in-1 Wet & Dry Cordless Cleaner. Please read this manual thoroughly before using the appliance and retain it for future reference.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. This appliance is for household use only. Do not use outdoors or on wet surfaces unless specifically designed for such use. Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts. Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes. Ensure the voltage rating on the charger matches your local power supply. Use only the charger supplied by the manufacturer. Do not operate the appliance with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.

PACKAGE CONTENTS

Verify that all components are present in the packaging:

- Electrolux 800 3-in-1 Wet & Dry Cordless Cleaner main unit
- Charging Dock
- Accessory Kit
- Crevice Tool
- Dusting Brush
- User Manual

SETUP

Assembly

Carefully unpack all components. Attach the main body of the cleaner to the floor nozzle until it clicks into place. Ensure all connections are secure before use.

Initial Charging

Before first use, fully charge the appliance. Place the cleaner on its charging dock. The charging indicator lights will illuminate to show charging status. A full charge takes approximately 4.5 hours. The battery is Lithium-Ion and provides up to 80 minutes of runtime.

OPERATING INSTRUCTIONS

3-in-1 Cleaning Functionality

The Electrolux 800 offers versatile 3-in-1 cleaning for various surfaces. It can vacuum dry debris, mop wet spills, and perform both actions simultaneously for a complete clean.



3-in-1 cleaning. One appliance

The 3-in-1 wet and dry stick vacuum delivers a complete cleaning solution for all surfaces.

Image: The Electrolux 800 3-in-1 cleaner demonstrating its capabilities for dry vacuuming, handheld spot cleaning, and wet mopping on different floor types.

TriAction Nozzle

The powerful TriAction nozzle is designed for efficient wet and dry cleaning, capable of mopping floors and vacuuming up to 99% of dry debris. This nozzle ensures thorough cleaning performance.



Effortlessly powerful

The powerful TriAction nozzle efficiently mops floors and vacuums up to 99%* of dry debris.

*See electrolux.com for disclaimers

Image: A detailed view of the TriAction nozzle in action, demonstrating its effectiveness in collecting dry debris.

Ultra-Versatile Vacuuming with Hand Unit

For targeted cleaning, detach the hand unit and attach the multi-surface nozzle (from the accessory kit). This configuration is ideal for all-floor cleaning with 100% dust pick-up, reaching tight spaces or elevated surfaces.



Ultra-versatile vacuuming

Attach the multi-surface nozzle to the hand unit for all-floor cleaning with 100%* dust pick-up.

*See electrolux.com for disclaimers

Image: The handheld unit of the Electrolux 800 vacuuming small particles, highlighting its versatility.

Smart Dirt Detection

The cleaner features smart dirt detection, which automatically adjusts the power level and water dosage for optimal cleaning results. This ensures efficient cleaning and spotless floors.

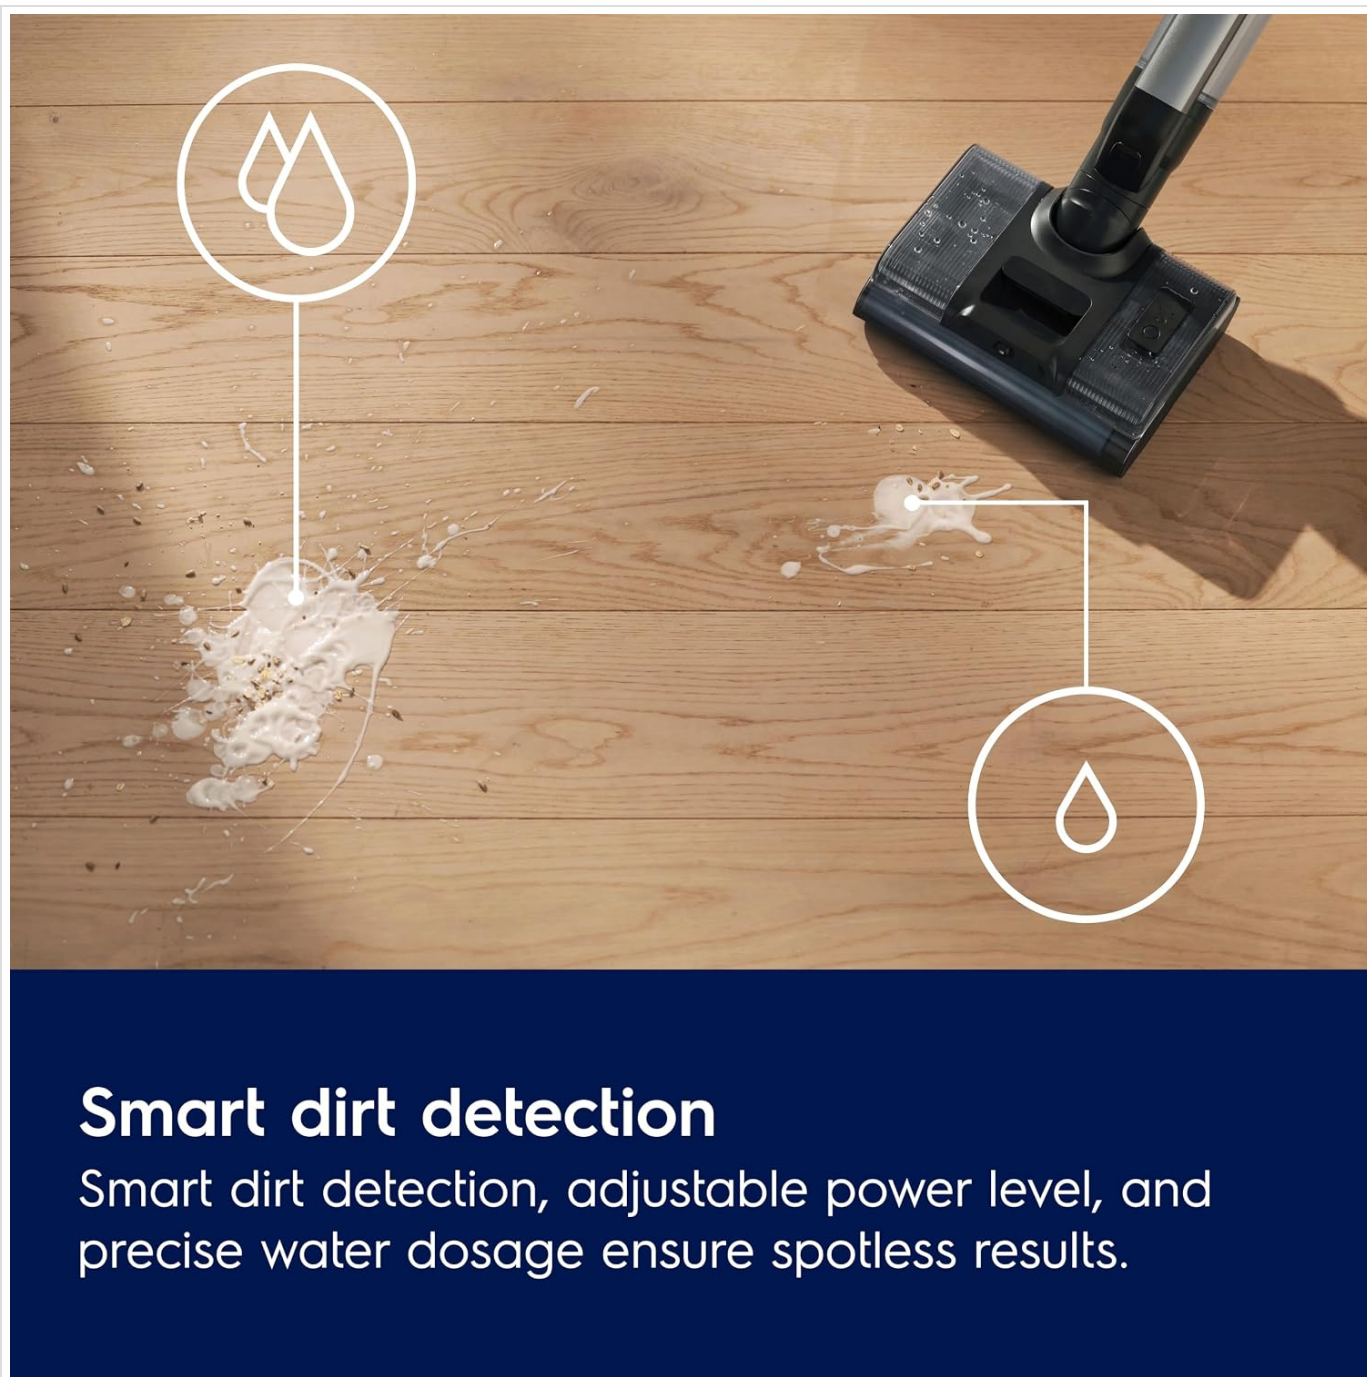


Image: Visual representation of the smart dirt detection system, showing how the cleaner identifies and addresses different types of spills and dirt.

Maneuverability

Designed for maximum flexibility, this self-standing vacuum offers easy maneuverability, allowing you to clean around furniture and into corners with minimal effort.



Smooth moves

This self-standing vacuum is designed for maximum flexibility and easy manoeuvrability.

Image: The Electrolux 800 cleaner navigating smoothly around obstacles and cleaning along edges, showcasing its flexible design.

MAINTENANCE

Self-Cleaning Function

The self-cleaning feature with auto-drying ensures the DualRolls are always fresh, clean, and ready for the next use. Activate this function after each wet cleaning session to maintain hygiene and performance.



Stays fresh with self-cleaning

Self-cleaning with auto-drying ensures the DualRolls are always fresh, clean and ready for use.

Image: The Electrolux 800 cleaner docked for self-cleaning, showing the rollers being cleaned and dried automatically.

Cleaning the Dual Water Tank

The integrated dual water tank separates debris from the water, providing a hygienic way to clean. Regularly empty and clean both the clean water and dirty water tanks to prevent odors and maintain optimal performance.



A hygienic way to clean

The integrated dual water tank separates debris from the water for easy cleaning and waste removal.

Image: A close-up of the cleaner's transparent dirty water tank, illustrating the separation of debris from water for hygienic disposal.

Filter Maintenance

The appliance uses a washable pleated filter. Regularly remove and rinse the filter under running water. Allow it to air dry completely before reinserting it into the cleaner. Do not operate the cleaner without the filter properly installed.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on	Battery is not charged.	Place the cleaner on the charging dock and allow it to charge for 4.5 hours.
Reduced suction power	Filter is clogged or dirty.	Clean or replace the washable pleated filter.

Problem	Possible Cause	Solution
Water not dispensing or unevenly dispensing	Clean water tank is empty or clogged.	Refill the clean water tank. Check for any blockages in the water dispensing nozzles.
Unpleasant odor from cleaner	Dirty water tank or rollers need cleaning.	Empty and thoroughly clean the dirty water tank. Run the self-cleaning cycle for the rollers.

SPECIFICATIONS

Feature	Specification
Model Name	3-in-1 Wet & Dry Stick Vacuum
Model Number	EFW81713
Brand	Electrolux
Power Source	Battery Powered
Voltage	21.6 Volts
Wattage	400 watts
Amperage	13 Amps
Battery Type	Lithium-Ion
Battery Charge Time	4.5 Hours
Battery Life / Runtime	80 minutes / 1 hour and 20 minutes
Capacity (Water Tank)	0.4 Liters
Filter Type	Washable Pleated Filter
Item Weight	9.05 Kilograms
Item Dimensions (L x W x H)	47L x 29.5W x 70H centimetres
Surface Recommendation	Hard Floor
Number of Power Levels	3
Included Components	Accessory Kit, Charging Dock, Crevice Tool, Dusting Brush

WARRANTY AND SUPPORT

Electrolux provides a manufacturer's warranty for this product. For specific warranty terms, registration, and support, please refer to the warranty card included with your purchase or visit the official Electrolux website. Keep your proof of purchase for warranty claims.

