



[Manuals.plus](#) /

› [GAIGAICHONG](#) /

› Replacement Remote Control Instruction Manual

## GAIGAICHONG D125031901E03

# Replacement Remote Control

## INSTRUCTION MANUAL

### 1. Product Overview

---

This manual provides instructions for the GAIGAICHONG Replacement Remote Control, designed for various under-desk elliptical machines and seated pedal exercisers. This remote is a direct replacement and requires no programming for immediate use. It features oversized buttons for ease of operation.



Figure 1: GAIGAICHONG Replacement Remote Control. This image displays the front view of the white remote control with large, clearly labeled buttons.

### Key Features:

- No programming required for setup.
- Features oversized buttons for enhanced usability.
- Designed for compatibility with a wide range of under-desk elliptical machines.
- Utilizes AAA 1.5V batteries for long life and easy replacement.

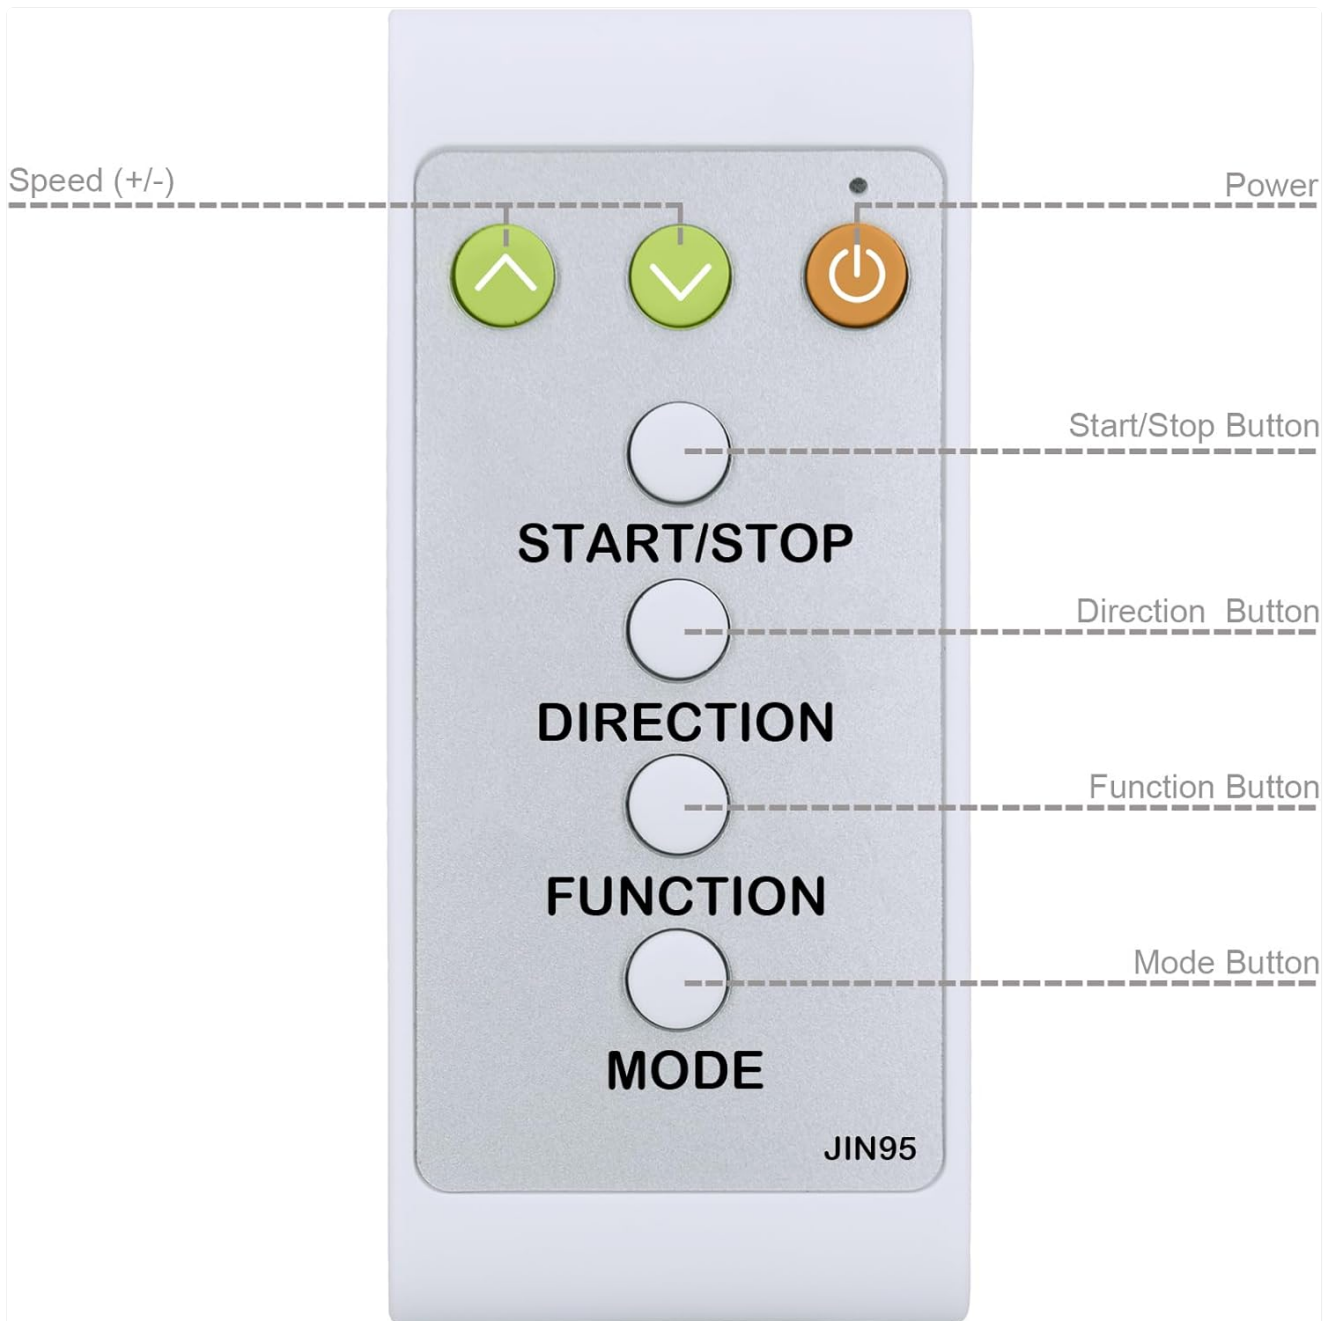



Figure 2: Key features of the remote control. This image highlights features such as "No programming needed!", "Oversized buttons!", "Cheap Battery (AAA 1.5V)", "Great for Seniors!", "Not Easy Broken", "Easy Operating", "Easy Hold", "Not Easy Lost", "Reliable Quality", and "Long Life".

## 2. Setup and Battery Installation

---

The remote control requires two AAA 1.5V batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA 1.5V batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

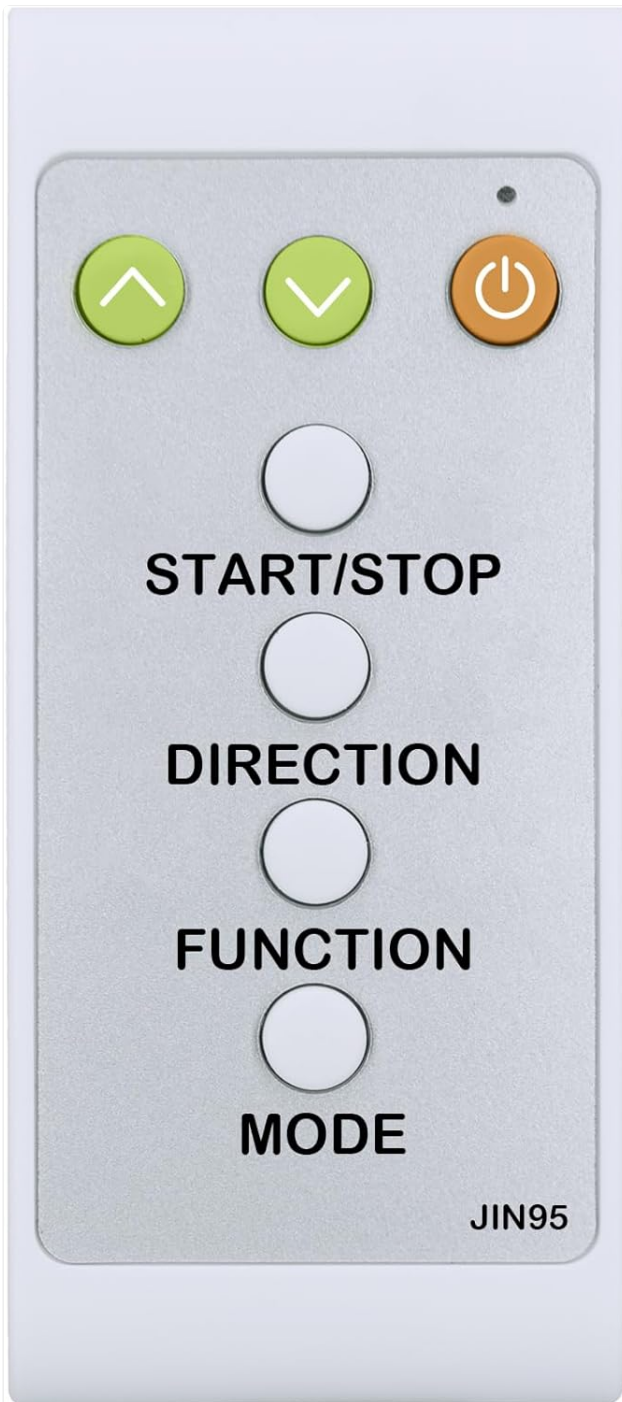

## New good design



### Silicone button

- \*Easy Operating
- \*Reliable quality
- \*Long Life(Over 5 years)
- \*Big buttons

## Old bad design



### PVC surface button

- \*Easy to damage
- \*Easy to press wrong buttons
- \*Easy to lose
- \*Short life(1~2 years)
- \*Thin and small buttons

Figure 3: Battery installation. The left image shows the open battery compartment on the back of the remote. The right image specifies the required battery type: AAA 1.5V.

No programming is needed for this remote control; it is ready for use once batteries are installed.

### 3. Operating Instructions

Point the remote control directly at the receiver on your under-desk elliptical machine. The buttons are designed for intuitive operation:

# An Industry Secret You Probably Don't Know

Two AAA batteries = 9 Coin Cell batteries.

## NEW

Good design  
with AAA 1.5V  
high-capacity battery

Long life: 3-5 years.



## OLD

Bad design  
with Coin Cell  
low-capacity battery

Short life: 0.5-1 year.



Figure 4: Remote control button functions. This image labels each button on the remote: Speed (+/-), Power, Start/Stop, Direction, Function, and Mode.


- **Power Button** (●): Turns the elliptical machine on or off.
- **Speed Buttons** (▲ / ▼): Adjusts the speed of the elliptical motion. The up arrow increases speed, and the down arrow decreases speed.
- **START/STOP Button** (○): Initiates or pauses the elliptical machine's operation.
- **DIRECTION Button** (○): Changes the direction of the elliptical motion.
- **FUNCTION Button** (○): Activates or cycles through various functions of the elliptical machine. Refer to your elliptical machine's manual for specific functions.
- **MODE Button** (○): Changes the operating mode of the elliptical machine. Refer to your elliptical machine's manual for specific modes.

## 4. Compatibility

This remote control is compatible with a wide range of under-desk electric steppers and elliptical machines. Below is a list of some compatible models and brands:

- GUGTTR
- Putnen: FZH834
- HJDFGSS: TY59, KMSO16M, KMS011M
- OLIXIS
- Fitvids
- YOSUDA: YSD-SE01
- DamKee: DK-066
- Hohouy
- DUREXO: EB-030, EB-027
- ARTHOOT: AH-40
- Morelax: Ellipse Leg Exerciser M858 Black
- Rollingsurfer: EM-02, EM-01
- GymCope: KMS009M
- Tixmac
- REPOWER: RP-ME04, Ellipticals Electri
- RCHDFL: RL-W2
- Wesec: TY001
- JISUO: 003
- CITYSPORTS
- Yagud
- ANCHEER

If your elliptical machine is not listed, compare your original remote with the product image to ensure compatibility. This remote is designed to be a direct replacement for the remote pictured in the item description.

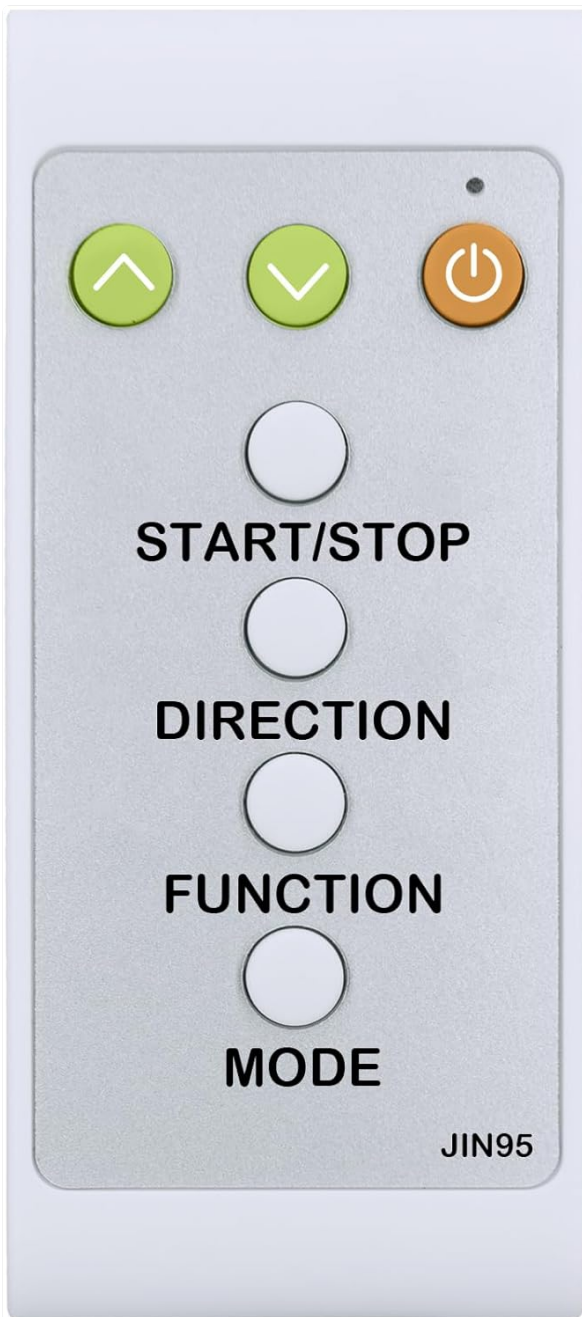

You will get 1 pc of the left remote.

- No programming needed!**
- Oversized buttons!**
- Cheap Battery (AAA 1.5V)**
- Great for Seniors!**
- Not Easy Broken**
- Easy Operating**
- Easy Hold**
- Not Easy Lost**
- Reliable Quality**
- Long Life**

Figure 5: Compatibility overview. This image shows the GAIGAICHONG remote on the left and two other compatible remote designs on the right, indicating broad compatibility.

## 5. Maintenance

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's responsiveness decreases or it stops functioning. Always use fresh AAA 1.5V batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Life:** The remote is designed for long battery life (3-5 years) when using AAA 1.5V batteries, which offer higher capacity compared to coin cell batteries found in older designs.







Figure 6: Battery life comparison. This image illustrates the difference in battery life between new designs using AAA 1.5V batteries (3-5 years) and old designs using coin cell batteries (0.5-1 year).

The remote features durable silicone buttons, which are less prone to damage and offer a longer lifespan compared to older PVC surface buttons.



Figure 7: Button design comparison. This image contrasts the "New good design" with silicone buttons (easy operating, reliable quality, long life, big buttons) against "Old bad design" with PVC surface buttons (easy to damage, easy to press wrong buttons, easy to lose, short life, thin and small buttons).

## 6. Troubleshooting

---

If you experience issues with your remote control, refer to the following common troubleshooting steps:

- **Remote Not Responding:**

- Ensure batteries are inserted correctly with the correct polarity (+/-).
- Replace old or depleted batteries with fresh AAA 1.5V batteries.
- Ensure there are no obstructions between the remote control and the elliptical machine's receiver.
- Verify that the elliptical machine is powered on.

- **Intermittent Functionality:**

- Check battery connections for looseness.
- Ensure you are within the effective range of the elliptical machine's receiver.

- **Buttons Not Working:**

- Confirm batteries are fresh.
- Inspect buttons for any physical damage or debris that might prevent proper pressing.

This remote control does not require programming. If issues persist after troubleshooting, contact customer support.

## 7. Specifications

---

<b>Brand</b>	GAIGAICHONG
<b>Model Number</b>	D125031901E03
<b>Compatible Devices</b>	Under Desk Elliptical Machine
<b>Battery Type</b>	2 x AAA 1.5V batteries (not included)
<b>Item Weight</b>	1.13 ounces
<b>Package Dimensions</b>	7.2 x 3.39 x 1.26 inches
<b>Special Feature</b>	Oversized Buttons

## 8. Warranty and Support

---

For any questions, concerns, or technical support regarding your GAIGAICHONG Replacement Remote Control, please contact the seller or manufacturer directly through the platform where the product was purchased. Please refer to your purchase details for specific contact information.

Keep your purchase receipt or order number handy as it may be required for warranty claims or support inquiries.