

FUNYET FUNBOOK

FUNYET FUNBOOK 2-in-1 Tablet PC N100 User Manual

Model: FUNBOOK

1. INTRODUCTION

Thank you for choosing the FUNYET FUNBOOK 2-in-1 Tablet PC N100. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device. Please read this manual thoroughly before using the product to ensure proper and safe operation. Keep this manual for future reference.

2. PRODUCT OVERVIEW

The FUNYET FUNBOOK is a versatile 2-in-1 device, combining the functionality of a laptop with the portability of a tablet. It features a 14-inch Full HD IPS touch display, powered by an Intel Alder Lake-N100 processor, 16GB of LPDDR5 RAM, and a 1TB SSD. It comes pre-installed with Windows 11 Pro and WPS Office.

Key Features:

- **Display:** 14-inch FHD (1920x1200) IPS Touch Display with 16:10 aspect ratio.
- **Processor:** Intel Alder Lake-N100 (4 Cores, 4 Threads, up to 3.4 GHz).
- **Memory:** 16GB LPDDR5 RAM.
- **Storage:** 1TB SSD for fast data access and ample storage.
- **Operating System:** Windows 11 Pro.
- **Connectivity:** Wi-Fi 6 (AX101) and Bluetooth 5.2.
- **Ports:** 1x Micro HDMI, 1x Type-C (Data/Charging), 1x Full-function Type-C.
- **Cameras:** 2MP Front Camera, 5MP Rear Camera.
- **Keyboard:** Detachable keyboard with 7-color RGB backlight.
- **Battery:** 38Wh 5000mAh Lithium battery.



Image: The FUNYET FUNBOOK in laptop mode, highlighting its 14-inch FHD 1920x1200 IPS display with a 16:10 aspect ratio and detachable Bluetooth keyboard.

LPDDR5 高度なマルチタスク・パフォーマンス



**16GB
LPDDR5**



**512GB
SSD**

LPDDR4	<div style="width: 100%; height: 10px; background: linear-gradient(to right, blue, orange);"></div> 1600MHz	<div style="width: 100%; height: 10px; background: linear-gradient(to right, blue, orange);"></div> 4400MHz	↑ 175%
LPDDR5			
HDD	<div style="width: 100%; height: 10px; background: linear-gradient(to right, blue, orange);"></div> 100MB/S	<div style="width: 100%; height: 10px; background: linear-gradient(to right, blue, orange);"></div> 500MB/S	↑ 400%
SSD			



Image: Diagram showing the device's ports and buttons, including Micro HDMI, two Type-C ports (one for data/charging, one full-function), power button, and volume buttons.

3. SETUP

3.1 Unpacking and Initial Inspection

Carefully remove all components from the packaging. Verify that all items listed in the package contents are present and undamaged. Package contents typically include: Tablet Computer, Detachable Keyboard, User Manual, Charging Cable.

3.2 Charging the Device

Before first use, fully charge the device. Connect the provided charging cable to one of the Type-C ports on the tablet and plug the adapter into a power outlet. The charging indicator light will illuminate.

3.3 Attaching the Keyboard

Align the magnetic connectors on the keyboard with the corresponding connectors on the bottom edge of the tablet. The keyboard will snap into place magnetically. Ensure a secure connection for proper functionality.

3.4 Powering On

Press and hold the Power button (located on the side of the tablet) for a few seconds until the screen illuminates. Follow the on-screen instructions for the initial Windows 11 Pro setup, including language selection, network connection, and user account creation.

4. OPERATING INSTRUCTIONS

4.1 Switching Between Laptop and Tablet Modes

The FUNBOOK can be used in multiple configurations:

- **Laptop Mode:** Attach the keyboard and adjust the integrated stand for a traditional laptop experience.
- **Tablet Mode:** Detach the keyboard to use the device as a standalone tablet with touch input.
- **Monitor Mode:** Use the integrated stand to prop up the tablet for viewing content without the keyboard.



Image: Illustrations demonstrating the correct and incorrect ways to position the multi-angle stand for optimal stability and viewing.

4.2 Using the Backlit Keyboard

The detachable keyboard features a 7-color RGB backlight. To change the backlight color or intensity, refer to the specific function keys (Fn combinations) indicated on the keyboard. Typically, this involves pressing the 'Fn' key along with a designated function key (e.g., 'Fn + Spacebar' or 'Fn + Fx' key).

4.3 Connecting to Wi-Fi and Bluetooth

- **Wi-Fi:** Access Windows Settings, navigate to 'Network & Internet', then 'Wi-Fi'. Select your desired network and enter the password.
- **Bluetooth:** In Windows Settings, go to 'Bluetooth & devices'. Turn on Bluetooth and select 'Add device' to pair with Bluetooth accessories.



Image: The FUNYET FUNBOOK in use, highlighting its integrated webcams (2MP front, 5MP rear), Wi-Fi 6, and Bluetooth 5.2 capabilities for seamless connectivity.

4.4 Using WPS Office

The device comes with WPS Office International Version pre-installed. This suite includes word processing, spreadsheet, and presentation applications. You can switch languages within the WPS Office settings. To launch, find WPS Office in the Start Menu or on the desktop.

5. MAINTENANCE

5.1 Cleaning the Device

Use a soft, lint-free cloth to clean the screen and exterior surfaces. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution. Avoid using harsh chemicals, abrasive materials, or excessive moisture.

5.2 Battery Care

- Avoid fully discharging the battery frequently.
- Do not expose the device to extreme temperatures.

- If storing the device for an extended period, ensure the battery is charged to approximately 50-70%.

5.3 Software Updates

Regularly check for and install Windows updates to ensure optimal performance, security, and compatibility. Go to Windows Settings > 'Windows Update' to check for available updates.

6. TROUBLESHOOTING

6.1 Device Does Not Power On

- Ensure the device is sufficiently charged. Connect the charger and wait a few minutes before attempting to power on again.
- Press and hold the Power button for 10-15 seconds to perform a hard reset.

6.2 Display Issues

- If the screen is blank, try adjusting the brightness settings.
- Restart the device.
- If using an external monitor, ensure the Micro HDMI cable is securely connected and the correct input source is selected on the monitor.

6.3 Keyboard Not Responding

- Ensure the keyboard is securely attached to the tablet.
- Restart the tablet.
- Check Bluetooth settings if the keyboard connects wirelessly (though this model's keyboard is typically magnetic/pogo pin).

6.4 Wi-Fi or Bluetooth Connectivity Problems

- Toggle Wi-Fi or Bluetooth off and on in Windows Settings.
- Restart your router/modem for Wi-Fi issues.
- Ensure the device is within range of the Wi-Fi network or Bluetooth accessory.

7. SPECIFICATIONS

FUNYET 2-in-1 タブレットPC/ノートパソコン



Image: The FUNYET FUNBOOK highlighting its 16GB LPDDR5 RAM and 1TB SSD, demonstrating enhanced multitasking performance and faster data access compared to older technologies.

Feature	Specification
Brand	FUNYET
Model Name	FUNBOOK
Screen Size	14 Inches
Native Resolution	1920x1200 Pixels (FHD)
Display Type	LCD (IPS)
Touchscreen Type	Capacitive
CPU Model	Intel Alder Lake-N100
CPU Speed	Up to 3.4 GHz
RAM Memory Size	16 GB LPDDR5
Hard Disk Capacity	1 TB SSD
Operating System	Windows 11 Pro
Graphics Hardware	Intel UHD Graphics (Integrated)
Wireless Type	Wi-Fi 6 (802.11ax), Bluetooth 5.2
Ports	1x Micro HDMI, 1x Type-C (Data/Charging), 1x Full-function Type-C
Front Camera Resolution	2 MP

Feature	Specification
Rear Camera Resolution	5 MP
Battery Type	Lithium Ion (38Wh, 5000mAh)
Dimensions (L x W x H)	31.7 x 21.4 x 1.2 cm
Item Weight	950g
Included Components	Keyboard, Tablet Computer, User Manual, Charging Cable

8. WARRANTY AND SUPPORT

8.1 Manufacturer's Warranty

The FUNYET FUNBOOK N100 comes with a **1-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or natural disasters.

8.2 After-Sales Service

FUNYET provides 24-hour after-sales service to ensure a smooth and reliable experience. If you encounter any issues with your product, please contact us promptly through Amazon. We are committed to providing continuous support and will respond quickly to address any product malfunctions or concerns.

For warranty claims or technical assistance, please contact FUNYET customer support via the Amazon platform where you purchased the product.