

groov e GVDP02BK

Groov-e 10.1-Inch Portable DVD Player User Manual

Model: GVDP02BK

1. PRODUCT OVERVIEW

The Groov-e 10.1-Inch Portable DVD Player is designed for versatile entertainment on the go. It features a high-resolution TFT LCD swivel screen, built-in speakers, and broad compatibility with various media formats including DVDs, CDs, and MP3s. It also includes USB and SD card slots for digital media playback. The unit is powered by a rechargeable battery for portable use or can be connected to mains power or an in-car power source.



Figure 1: Front view of the Groov-e 10.1-Inch Portable DVD Player with the screen open.

2. PACKAGE CONTENTS

Please check the package contents carefully. If any items are missing or damaged, contact customer support.

- Groov-e 10.1-Inch Portable DVD Player
- Remote Control
- Mains Power Adapter
- In-Car Cable
- User Manual (this document)

3. SETUP

3.1 Charging the Battery

Before first use, fully charge the built-in rechargeable battery. Connect the provided mains power adapter to the DC IN port on the player and plug it into a wall outlet. The charging indicator light will illuminate. A full charge provides approximately 2.5 hours of playback.

3.2 Powering On/Off

To power on the device, slide the POWER switch to the ON position. To power off, slide the switch to the OFF position. Ensure the device is fully charged or connected to a power source for operation.

3.3 Connecting to Power Sources

- **Mains Power:** Use the included AC adapter to connect to a standard wall socket.
- **In-Car Power:** Use the included in-car cable to connect to your vehicle's 12V power outlet (cigarette lighter socket).

4. OPERATING INSTRUCTIONS

4.1 Inserting a Disc

1. Gently open the disc cover.
2. Place the DVD or CD disc onto the spindle with the label side facing up.
3. Press down gently on the center of the disc until it clicks into place.
4. Close the disc cover firmly.

4.2 Playing Media

- **DVD/CD Playback:** After inserting a disc, the player will typically begin playback automatically. Use the control buttons on the player or remote control for Play/Pause, Stop, Skip, and Volume.
- **USB/SD Card Playback:** Insert a USB flash drive into the USB port or an SD card into the SD card slot. The player will detect the media and display a menu to select files (e.g., videos, music, photos). Navigate using the directional buttons and confirm with the OK/Enter button.

4.3 Using the Swivel Screen

The 10.1-inch TFT LCD screen can swivel up to 270 degrees horizontally and fold flat against the base, allowing for multiple viewing angles and compact storage. Gently rotate the screen to your desired position.



Figure 2: The swivel screen allows for flexible viewing angles.

4.4 Remote Control Functions

The included remote control provides full functionality for operating the DVD player from a distance. Ensure the remote control has working batteries and is pointed towards the player's IR receiver.

Button	Function
POWER	Turns the player on or off.
PLAY/PAUSE	Starts or pauses playback.
STOP	Stops playback.
VOL +/-	Adjusts volume level.

Button	Function
MENU	Accesses the disc or system menu.
DIRECTIONAL ARROWS	Navigates through menus and options.
OK/ENTER	Confirms selection.

5. MAINTENANCE

- Cleaning:** Use a soft, dry cloth to clean the exterior of the player. For the screen, use a soft, lint-free cloth specifically designed for electronics screens. Do not use liquid cleaners or abrasive materials.
- Disc Care:** Handle discs by their edges. Keep discs clean and free from scratches. Use a soft, lint-free cloth to wipe discs from the center outwards if cleaning is necessary.
- Storage:** When not in use, store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- Battery:** To prolong battery life, avoid fully discharging the battery frequently. If storing for a long period, charge the battery to about 50% every few months.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not turn on.	Battery is depleted; Power switch is OFF; Power adapter not connected properly.	Charge the battery; Slide power switch to ON; Ensure power adapter is securely connected.
No disc playback.	Disc is dirty or scratched; Disc inserted incorrectly; Incorrect disc format.	Clean the disc; Re-insert disc correctly; Ensure disc is a compatible format (DVD, CD).
No sound.	Volume is too low or muted; Headphones connected.	Increase volume; Check mute setting; Disconnect headphones if using built-in speakers.
Remote control not working.	Batteries are dead or inserted incorrectly; Obstruction between remote and player.	Replace batteries; Ensure correct polarity; Remove any obstructions.

7. SPECIFICATIONS

Feature	Detail
Model Number	GVDP02BK
Screen Size	10.1 inches
Display Type	TFT LCD
Disc Compatibility	DVD, CD
Digital Media Support	USB, SD Card (MP3, etc.)
Battery Life	Up to 2.5 hours (rechargeable)
Power Options	Mains (AC adapter), In-Car (12V adapter)
Weight	1.55 kg

Feature	Detail
Dimensions (Package)	36.7 x 26.1 x 9.7 cm

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included in your product packaging or visit the official Groov-e website. Keep your proof of purchase for any warranty claims.

Website: www.groov-e.co.uk (Example link, actual link may vary)

© 2025 Groov-e. All rights reserved.