

[Manuals.plus](#) /

> [Haier](#) /

> Haier 80cm (32) HD Ready Smart LED Google TV LE32W400G-N User Manual

## Haier LE32W400G-N

# Haier 80cm (32) HD Ready Smart LED Google TV User Manual

MODEL: LE32W400G-N

## 1. Introduction

This manual provides essential information for the safe and efficient operation of your new Haier 80cm (32) HD Ready Smart LED Google TV, model LE32W400G-N. Please read this manual thoroughly before using the television and retain it for future reference.



Image: Haier 32-inch HD Ready Smart LED Google TV, model LE32W400G-N, showcasing its sleek design and Google TV interface.

### Key Features:

- **HD Ready Display:** 1366x768 resolution with HDR 10 support for enhanced picture quality.
- **Google TV OS:** Access to a vast library of apps, movies, and shows with a personalized experience.
- **Dolby Audio & Surround Sound:** 16 Watts output with 2.0ch powerful stereo speakers for immersive audio.
- **Smart Connectivity:** Built-in Wi-Fi 5, Bluetooth, 3 HDMI ports, and 2 USB ports.
- **Chromecast Built-in:** Easily cast content from your mobile devices.
- **Google Assistant:** Voice control for convenient navigation and content search.

## 2. Setup Guide

---

### 2.1 Unboxing and Package Contents

Carefully remove all items from the packaging. Ensure all components are present before proceeding with installation.



Image: Diagram showing the contents of the product package, including the Haier LED TV, two table stand bases, one remote control, one AV IN adapter, one AC cord, and two AAA batteries.

## Package Includes:

- 1 x Haier LED TV
- 2 x Table Stand Base
- 1 x Remote Control
- 1 x AV IN Adapter
- 1 x AC Power Cord
- 2 x AAA Batteries (for remote control)

## 2.2 Installing the TV Stand

If you are placing the TV on a table, attach the two table stand bases to the bottom of the TV using the provided screws. Ensure the stands are securely fastened to prevent the TV from tipping.

## 2.3 Wall Mounting (Optional)

For wall mounting, please refer to the instructions provided with your wall mount bracket. Ensure the bracket is compatible with VESA standards for your TV model. Professional installation is recommended for wall mounting.

## 2.4 Connecting Peripherals

Connect your set-top box, gaming console, or other external devices to the TV's HDMI ports. Use the USB ports for connecting hard drives or other USB devices.



Image: Illustration of the Haier TV's smart connectivity options, highlighting in-built Wi-Fi, 3 HDMI ports, and 2 USB ports.

## 2.5 Powering On

Connect the AC power cord to the TV and then to a power outlet. Press the power button on the TV or the remote control to turn on the television.

## 3. Operating Instructions

---

### 3.1 Remote Control Overview

Insert the two AAA batteries into the remote control, ensuring correct polarity. The remote allows you to navigate the TV's interface, adjust settings, and access quick launch buttons for popular streaming services.



Image: Close-up of the Haier TV remote control, showing dedicated quick launch buttons for Netflix, Prime Video, and Google Assistant, along with standard navigation and power buttons.

### 3.2 Initial Setup and Google TV

Upon first power-on, the TV will guide you through the initial setup process, including language selection, network connection, and Google account sign-in. Follow the on-screen prompts to complete the setup.



Image: The Google TV interface displayed on the Haier TV, illustrating easy access to various streaming applications like Netflix, Prime Video, YouTube, and more.

### 3.3 Network Connection

To access smart features and online content, connect your TV to a Wi-Fi network. Navigate to *Settings > Network & Internet* and select your Wi-Fi network, then enter the password.

### 3.4 Using Chromecast Built-in

The TV features built-in Chromecast, allowing you to cast content (videos, photos, music) from compatible apps on your smartphone or tablet directly to the TV. Ensure your mobile device and TV are on the same Wi-Fi network.

# Smart Connectivity



Image: A hand holding a smartphone, demonstrating the Chromecast built-in feature, effortlessly casting content from the phone to the Haier TV.

## 3.5 Audio Settings

Your TV supports Dolby Audio and features 16-watt speakers for an enhanced sound experience. You can adjust audio settings via the TV's menu to optimize sound for different content types.

# Haier


 **16W**  
SPEAKER

For The Engrossing  
Aural Experience



Image: An exploded view diagram illustrating the components of the 16 Watt speaker system, designed for an engrossing aural experience.

# Haier

 **Dolby**  
AUDIO WITH  
**Surround sound**

Hear what you have  
been missing



Image: Visual representation of Dolby Audio with Surround Sound, showing sound waves emanating from the TV, indicating an immersive audio experience.

## 4. Maintenance

---

### 4.1 Cleaning the TV

To clean the screen, gently wipe it with a soft, lint-free cloth. For stubborn marks, dampen the cloth slightly with water or a specialized screen cleaner. Avoid using harsh chemicals or abrasive materials. For the TV body, use a dry, soft cloth.

## 4.2 Software Updates

Your Google TV may receive periodic software updates to improve performance and add new features. Ensure your TV is connected to the internet to receive these updates automatically or check for them manually in *Settings > System > About > System update*.

## 5. Troubleshooting

---

If you encounter issues with your TV, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No Power	Power cord disconnected; Power outlet issue	Check power cord connection; Try a different outlet; Press power button on TV.
No Picture, but Sound is Present	Incorrect input source; Loose HDMI cable	Press the 'Input' button on the remote to select correct source; Reconnect HDMI cable.
No Sound, but Picture is Present	Volume muted or too low; External audio system issue	Unmute or increase volume; Check connections to external audio devices.
Cannot Connect to Wi-Fi	Incorrect password; Router issue; TV too far from router	Verify Wi-Fi password; Restart router; Move TV closer to router or use a Wi-Fi extender.
Remote Control Not Working	Dead batteries; Obstruction between remote and TV	Replace batteries; Remove any obstructions; Ensure remote is pointed at the TV's IR receiver.

If the problem persists after trying these solutions, please contact Haier customer support.

## 6. Specifications

---

Feature	Detail
Model Name	LE32W400G-N
Screen Size	80 cm (32 Inches)
Display Technology	LED
Resolution	HD Ready (1366x768 Pixels)
Refresh Rate	60 Hz
HDR Support	HDR10
Operating System	Google TV
Memory Storage Capacity	1.5GB RAM + 8GB ROM

Feature	Detail
Audio Output	16 Watts (2.0ch Powerful Stereo Speaker)
Audio Technology	Dolby Audio, Surround Sound
HDMI Ports	3
USB Ports	2
Wireless Connectivity	Wi-Fi 5, Bluetooth
Special Features	Google Assistant, Chromecast Built-in, Watchlist, Supported Apps (Prime Video, Netflix, Jio Hotstar, Sony Liv, Zee5, Apple TV)
Product Dimensions (D x W x H)	18.2 x 72.5 x 47.9 cm
Item Weight	3.8 kg
Energy Rating	1 Star (Annual Energy Consumption: 62kWh/Year)

## 7. Warranty and Support

---

### 7.1 Product Warranty

Brand warranty can be availed using the invoice. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Haier India website.

### 7.2 Customer Support

For technical assistance, service requests, or any queries regarding your Haier TV, please contact Haier customer support. Contact details can typically be found on the official Haier website or in the product documentation.