

[Manuals.plus](#) /

› [Auertech](#) /

› Auertech Portable Washing Machine User Manual

Auertech washer

Auertech Portable Washing Machine User Manual

Model: washer

INTRODUCTION

Thank you for purchasing the Auertech Portable Washing Machine. This manual provides important information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read this manual thoroughly before using the washing machine and keep it for future reference.

This portable washing machine is designed for small loads, making it ideal for apartments, dorms, RVs, and other compact living spaces. It features separate tubs for washing and spinning, offering flexibility and efficiency.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

- Read all instructions before using the appliance.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they emit vapors that could ignite or explode.
- Do not add gasoline, dry-cleaning solvents, or other flammable or explosive substances to the wash water. These substances give off vapors that could create a fire or explosion.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Before the appliance is removed from service or discarded, remove the door to the washing compartment.
- Do not reach into the appliance if the tub or agitator is moving.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.

- Always disconnect the appliance from the power supply before cleaning or performing any maintenance.
- Ensure the power cord is not damaged and is properly grounded.

PRODUCT OVERVIEW

The Auertech Portable Washing Machine is a twin-tub design, featuring separate compartments for washing and spinning. This allows for simultaneous or sequential operation of both functions.



Figure 1: Front view of the Auertech Portable Washing Machine, showing the wash and spin tubs with control knobs on top.

Key Features:

- **Large Capacity:** 18 lbs washing capacity and 10 lbs spinning capacity.
- **Separate Timers:** Independent timers for washing (0-15 minutes) and spinning (0-5 minutes).
- **Compact Design:** Ideal for small living spaces.
- **Built-in Pump:** Features an extended drain hose for convenient water drainage.



Figure 2: The portable washing machine with its dimensions indicated: 32 inches height, 27 inches length, and 15 inches width. Also highlights the separate timers for washing and spinning.

Large Capacity Washing Machine

18 lbs | 10 lbs

Washing Capacity

Spinning Capacity



Figure 3: Illustration of the washing machine emphasizing its large capacity: 18 lbs for washing and 10 lbs for spinning.



Figure 4: The washing machine demonstrating its built-in pump and extended drain hose, which is 3.7 feet long, facilitating easy water drainage.

SETUP AND INSTALLATION

Unpacking:

Carefully remove the washing machine from its packaging. Inspect for any damage during transit. Keep all packaging materials until you are satisfied with the product.

Placement:

- Place the washing machine on a firm, level surface to minimize vibration and noise during operation.
- Ensure there is adequate space around the machine for ventilation and access to controls.
- Avoid placing the machine in direct sunlight or in areas with extreme temperatures.
- The machine features adjustable leveling legs. Adjust them to ensure the unit is stable and level.

Water Supply Connection:

- Connect the water inlet hose (not explicitly listed as included, but implied for operation) to a cold water tap. Ensure the connection is secure to prevent leaks.
- The machine is designed for manual water filling into the wash tub. You can use a bucket or a hose to fill the wash tub to the desired water level.

Drainage Setup:

- Attach the included drain hose to the machine's drain outlet.
- Position the other end of the drain hose into a sink, bucket, or floor drain. Ensure the hose is not kinked and is positioned lower than the machine's drain outlet for proper gravity drainage, or utilize the built-in pump for elevated drainage. The extended drain hose is approximately 3.7 feet long.

Power Connection:

- Plug the power cord into a grounded 110V/60Hz electrical outlet.
- Do not use extension cords or adapters.

OPERATING INSTRUCTIONS

Washing Cycle:

1. **Load Laundry:** Open the lid of the wash tub and place your clothes inside. Do not overload the machine; ensure clothes can move freely. The maximum washing capacity is 18 lbs.
2. **Add Water:** Fill the wash tub with water to the desired level. You can use the water inlet or manually pour water into the tub.
3. **Add Detergent:** Add the appropriate amount of laundry detergent directly into the wash tub.
4. **Select Wash Mode:** Turn the "Wash Mode" knob to select the desired wash setting (e.g., Standard, Gentle, Drain).
5. **Set Wash Timer:** Turn the "Wash Timer" knob to set the desired washing time (0-15 minutes). The machine will start washing automatically.
6. **Drain Water:** Once the wash cycle is complete, turn the "Wash Mode" knob to "Drain" to empty the water from the wash tub.

Spin Cycle:

1. **Transfer Laundry:** Carefully transfer the washed clothes from the wash tub to the spin tub. Distribute the clothes evenly to prevent imbalance. The maximum spinning capacity is 10 lbs.
2. **Close Lid:** Close the lid of the spin tub securely.
3. **Set Spin Timer:** Turn the "Spin Timer" knob to set the desired spinning time (0-5 minutes). The spin cycle will begin.
4. **Remove Laundry:** Once the spin cycle is complete, the machine will stop. Open the lid and carefully remove the spun clothes.

Control Panel Overview:

The control panel typically includes:

- **Wash Timer Knob:** Sets the duration of the wash cycle.
- **Wash Mode Selector Knob:** Controls wash intensity and drain function.
- **Spin Timer Knob:** Sets the duration of the spin cycle.

MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

Cleaning the Exterior:

- Wipe the exterior of the machine with a soft, damp cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals, as they may damage the ABS material.

Cleaning the Interior:

- After each use, wipe down the inside of the wash and spin tubs to remove any residue.
- Periodically run a wash cycle with hot water and a cup of white vinegar (without clothes) to clean the tubs and remove odors.

Drain Hose:

- Ensure the drain hose is clear of blockages.
- Periodically check for kinks or damage to the hose.

Storage:

- If storing the machine for an extended period, ensure all water is drained from both tubs and hoses.
- Store in a dry, well-ventilated area, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING GUIDE

Before contacting customer support, please refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start.	Not plugged in; Power outage; Timer not set.	Ensure power cord is securely plugged into a live outlet; Check circuit breaker; Set the wash/spin timer.
Water does not drain.	Drain hose kinked or blocked; Drain mode not selected.	Straighten the drain hose and check for blockages; Ensure "Wash Mode" knob is set to "Drain".
Excessive vibration or noise during spin.	Laundry unevenly distributed in spin tub; Machine not level.	Redistribute clothes evenly in the spin tub; Adjust leveling legs to ensure the machine is stable.
Water leaks.	Hose connections loose; Overfilling the tub.	Check and tighten all hose connections; Do not fill water above the maximum water level indicator.
Spin tub does not spin.	Spin lid not closed properly; Overloaded spin tub.	Ensure the spin tub lid is fully closed; Reduce the amount of laundry in the spin tub.

PRODUCT SPECIFICATIONS

Feature	Detail
Model	washer
Brand	Auertech

Feature	Detail
Washing Capacity	18 lbs
Spinning Capacity	10 lbs
Overall Dimensions (L x W x H)	27" x 15" x 32"
Net Weight	31 lbs
Voltage / Frequency	110V / 60Hz
Washing Motor Power	360W
Spinning Motor Power	160W
Material	ABS
Included Components	Drain Hose, Power Cord, Washing Machine
Drain Hose Length	Approx. 3.7 feet
Control Type	Knob
Access Type	Top Load
Special Features	Adjustable Leveling Legs, Built-in Drain Pump

WARRANTY INFORMATION

Specific warranty details for your Auertech Portable Washing Machine are typically provided with the product packaging or can be found on the official Auertech website. Please refer to these resources for information regarding warranty period, coverage, and terms and conditions.

Keep your purchase receipt as proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you encounter any issues that cannot be resolved using the troubleshooting guide, or if you require further assistance, please contact Auertech customer support.

For the most up-to-date contact information, please visit the official Auertech website or refer to the contact details provided in your product packaging.

Website: [Auertech Official Store on Amazon](#) (Note: This link leads to the brand's store on Amazon, which may contain support information.)

