

Tekswamp PDR-155

Tekswamp Replacement Remote Control for Onkyo PDR-155 DVD AV Controller User Manual

1. INTRODUCTION AND OVERVIEW

This manual provides instructions for the Tekswamp Replacement Remote Control, designed for use with the Onkyo PDR-155 DVD AV Controller. This remote offers most of the original commands for your device without requiring additional programming.

The remote is guaranteed to control basic functions such as powering the device on and off, accessing and navigating menus, and selecting input signals. Please note that some specific functions, including page flip, keystone correction, video adjustment, and numerical inputs, may not function identically to the original remote in all cases. This remote does not include a laser pointer function.



Figure 1: Top view of the Tekswamp Replacement Remote Control, showing all buttons.

2. SETUP: BATTERY INSTALLATION

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Important: Ensure batteries are inserted with correct polarity. Remove batteries if the remote will not be used for an extended period to prevent leakage.



Figure 2: Back view of the remote control, showing the battery compartment.

3. OPERATING INSTRUCTIONS

This remote control is designed to replicate the functions of your original Onkyo PDR-155 DVD AV Controller remote. Point the remote directly at your Onkyo device when operating.

3.1 Basic Functions

- **Power Button ():** Press to turn the Onkyo PDR-155 device on or off.
- **Input/Source (SRC):** Press to cycle through available input sources on your device.
- **Menu:** Access the device's main menu.

- **Navigation Buttons (Up, Down, Left, Right, OK):** Use these buttons to navigate through menus and confirm selections.
- **Volume Up/Down (V+/V-):** Adjust the audio volume.

3.2 Advanced Functions

The remote includes buttons for various advanced functions such as Play, Pause, Stop, Fast Forward, Rewind, Skip Track, Display (DISP), Subtitle (SUBT), Audio, Mode, Setup, and numerical input. Refer to your Onkyo PDR-155 device's original manual for specific functions and their corresponding buttons, as some advanced features may vary in compatibility.

4. FEATURES

- **Ergonomic Design:** Features comfortable, easy-to-reach buttons within a compact, rectangular body, suitable for daily use and portability.
- **Low Power Consumption:** The electrical circuit is designed for minimal power usage, allowing the remote to function effectively even when batteries are nearing depletion.
- **IR Signal Indicator:** An "ON" indicator light illuminates when any active button is pressed, confirming that the remote is transmitting an infrared signal to your device.
- **Durable Construction:** Manufactured from strong, durable plastic to resist breakage. Buttons are designed to be comfortable yet not overly sensitive, preventing accidental presses and premature wear.
- **Security Screw:** Includes a childproofing security screw feature to prevent unauthorized access to internal components, reducing choking hazards.

5. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or the indicator light fails to illuminate. Always replace both batteries simultaneously with new AAA alkaline batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries.

6. TROUBLESHOOTING

- **Remote Not Responding:**
 - Ensure the remote is pointed directly at the Onkyo PDR-155 device.
 - Check if the "ON" indicator light illuminates when a button is pressed. If not, replace the batteries.
 - Verify that there are no obstructions between the remote and the device's IR receiver.
- **Some Functions Not Working:**
 - As a replacement remote, some highly specific or advanced functions may not be fully compatible with all Onkyo PDR-155 units. Refer to your device's original manual for expected functionality.
 - Ensure the device is in the correct mode (e.g., DVD mode for DVD functions).

- **Short Operating Range:**

- Replace batteries with fresh ones.
- Ensure there are no strong light sources (like direct sunlight) interfering with the IR signal.

7. SPECIFICATIONS

Feature	Detail
Brand	Tekswamp
Model Number	PDR-155 (Compatible Device)
Connectivity Technology	Infrared (IR)
Compatible Devices	Onkyo PDR-155 DVD AV Controller (Audio System)
Max Number of Supported Devices	1
Color	Black
Button Quantity	31
Controller Type	Button Control
Maximum Range	10 Meters (approx. 33 feet)
Batteries Required	2 x AAA (not included)
Battery Type	Alkaline (recommended)
Item Weight	2 Ounces (approx. 57 grams)

8. WARRANTY INFORMATION

This Tekswamp Replacement Remote Control comes with a **60-day warranty** from the date of purchase. This warranty covers manufacturing defects and ensures the remote functions as described. Please retain your proof of purchase for warranty claims.

9. SUPPORT

For further assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact Tekswamp customer support through the retailer where the product was purchased or visit the official Tekswamp store page.

Online Support: [Tekswamp Store on Amazon](#)