

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

### B0F1Z41TSR

# Automatic Pet Feeder User Manual

Model: B0F1Z41TSR

## PRODUCT OVERVIEW

---

This Automatic Pet Feeder is designed to provide scheduled meals for cats and small dogs, accommodating both wet and dry food. It features a digital LED display for easy programming and a six-tray dispenser system.

- **Automatic Feeding:** Features six dispenser trays and a variable-timed feeding function, allowing up to four meals per day or six meals every three days (twice per day). Each tray has a 128 ml capacity, suitable for cats and small dogs.
- **Secure & Reliable Construction:** Made from durable ABS materials for daily use. A protective lid covers the control panel to prevent accidental dispensing or tampering by pets.
- **Sound & Display Functions:** The feeder plays a tone at meal times to alert pets. The LED display shows battery power and current time for convenient monitoring.
- **Easy to Clean:** The food tray is removable for effortless cleaning and refilling.



Image: Top-down view of the Automatic Pet Feeder, showing its circular design, central digital display, and a single open food tray.



Image: A small, fluffy white dog standing on a wooden floor, looking towards the Automatic Pet Feeder, which is dispensing food.

## SETUP

---

1. **Unpack:** Carefully remove all components from the packaging. Ensure all parts are present: main feeder unit, food tray, and lid.
2. **Battery Installation:** Locate the battery compartment on the underside of the feeder. Insert three AA batteries (not included), ensuring correct polarity.
3. **Assemble Food Tray:** Place the six-compartment food tray into the main unit, aligning it properly.
4. **Fill Trays:** Fill each of the six compartments with your pet's desired wet or dry food. Do not overfill.
5. **Secure Lid:** Place the main lid back onto the feeder, ensuring it is securely closed.

# 6 FOOD DISPENSER TRAYS



Image: A visual representation of the six food dispenser trays, showing examples of various food types such as wet grain, solid food, nutrition, snacks, dried beef, and canned fish.

## OPERATING INSTRUCTIONS

---

### Setting the Clock

1. Press the **ON/OFF** button to power on the device.
2. Press and hold the **SET** button until the hour digit flashes on the LED display.
3. Use the **TIME(+)** and **TIME(-)** buttons to adjust the hour.
4. Press **SET** again to move to the minute digit, then adjust using **TIME(+)** and **TIME(-)**.
5. Press **SET** to confirm the time.

### Scheduling Meal Times

The feeder allows you to set up to 4 meal times per day or 6 meal times every 3 days.

1. With the device powered on, press the **SET** button repeatedly to cycle through Timer 1, Timer 2, Timer 3, and Timer 4 settings.
2. When a timer (e.g., "Timer 1") is displayed and flashing, use the **TIME(+)** and **TIME(-)** buttons to set the desired hour for that meal.
3. Press **SET** to confirm the hour and move to minutes. Adjust minutes using **TIME(+)** and **TIME(-)**.
4. Press **SET** to confirm the meal time. Repeat for other timers as needed.
5. The feeder will automatically rotate to the next available food tray at each scheduled meal time.

# SCHEDULE MEAL TIMES

Can set up to *4 times per day* or *6 times every 3 days*.

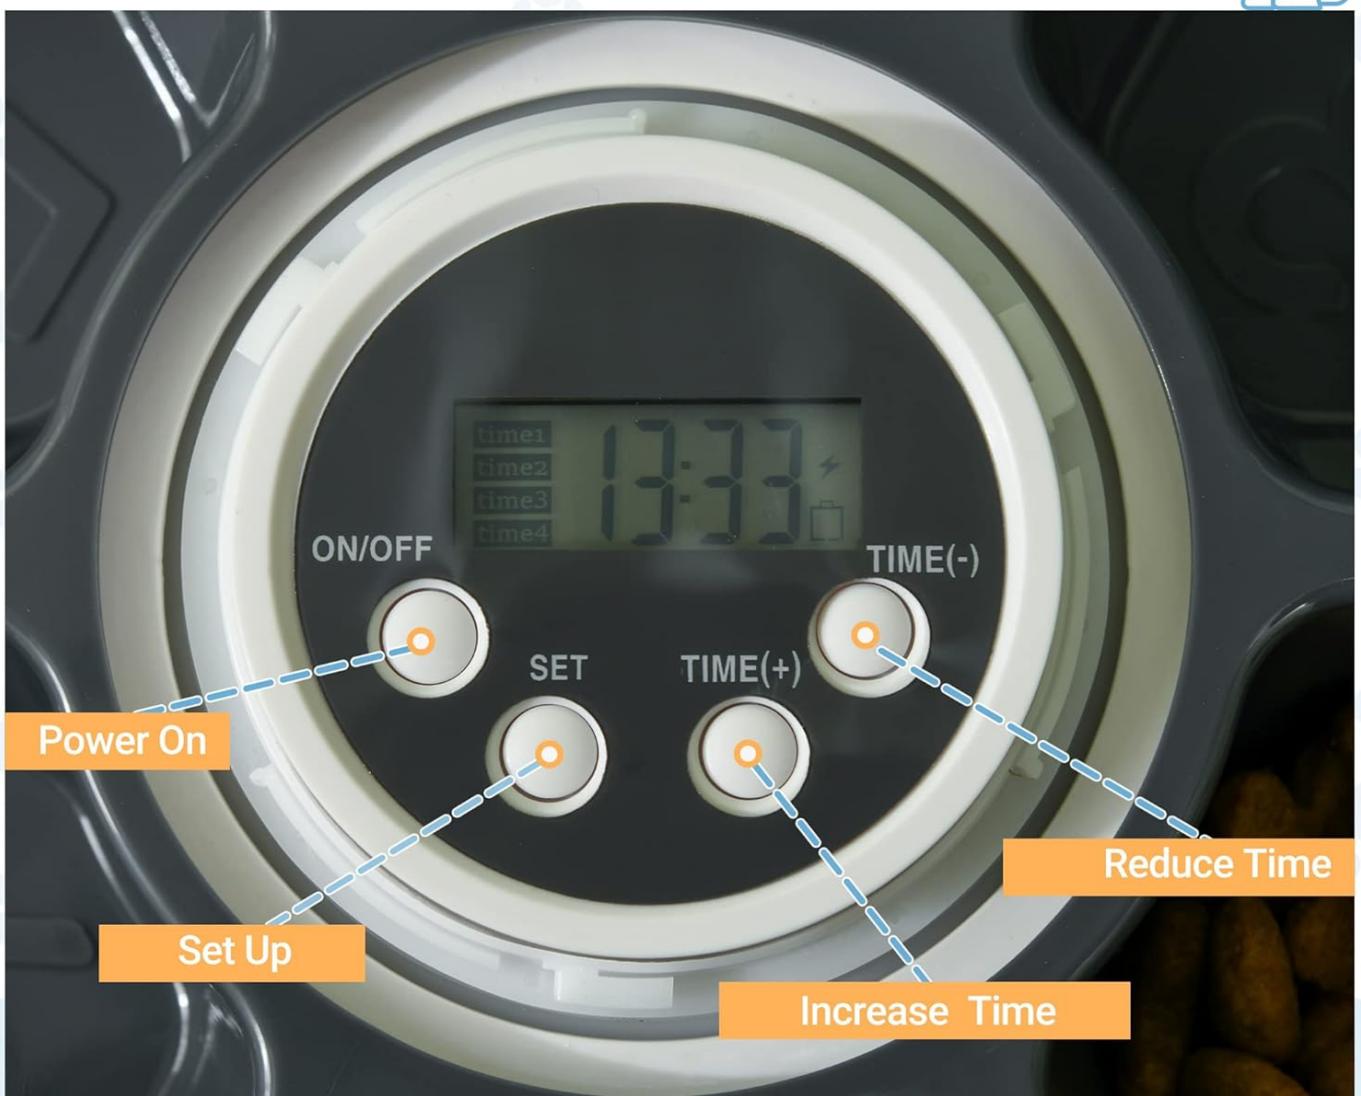


Image: A detailed view of the pet feeder's digital control panel, highlighting the "ON/OFF", "SET", "TIME(+)", and "TIME(-)" buttons, along with the LED display showing time and timer settings.

# MUSIC PROMPT

When the preset time comes,  
**music** will be played to remind the dog to eat



Image: A small dog looking intently at the pet feeder, with a graphic overlay indicating a "music prompt" feature that plays a sound when the preset meal time arrives to alert the pet.

## MAINTENANCE

- **Cleaning the Tray:** The food tray can be easily removed for cleaning. Wash the tray with mild soap and water, then rinse thoroughly and dry completely before reinserting.
- **Cleaning the Main Unit:** Wipe the exterior of the main feeder unit with a damp cloth **DO NOT submerge the main unit in water or wash it under running water**, as this will cause damage to the electronic components.
- **Battery Replacement:** When the battery indicator on the LED display shows low power, replace the three AA batteries promptly to ensure continuous operation.
- **Storage:** If storing the feeder for an extended period, remove the batteries to prevent leakage.



**Note:** This product cannot be washed, otherwise it will cause damage

Image: The pet feeder placed on a wooden floor, accompanied by a prominent text note warning users that the product cannot be washed, as doing so will cause damage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Feeder does not turn on.	Batteries are dead or incorrectly installed.	Check battery polarity. Replace with new AA batteries.
Food is not dispensing at scheduled time.	Incorrect timer settings; low battery; food jammed.	Verify timer settings. Replace batteries. Clear any food blockages in the tray rotation mechanism.
Display is dim or flickering.	Low battery power.	Replace the AA batteries.

Problem	Possible Cause	Solution
Pet is not eating from the feeder.	Pet is not accustomed to the feeder; food type.	Allow pet time to adjust. Ensure food is appealing. Consider placing familiar food initially.

## SPECIFICATIONS

**Model:** B0F1Z41TSR

**Brand:** Generic

**Material:** Acrylonitrile Butadiene Styrene (ABS)

**Color:** White

**Overall Dimensions:**  $\Phi$  12" x 2.75" H (Diameter 12 inches, Height 2.75 inches)

**Tray Capacity:** 128 ml per tray

**Power Source:** 3 x AA Batteries (not included)

**Feeding Schedule:** Up to 4 times per day or 6 times every 3 days

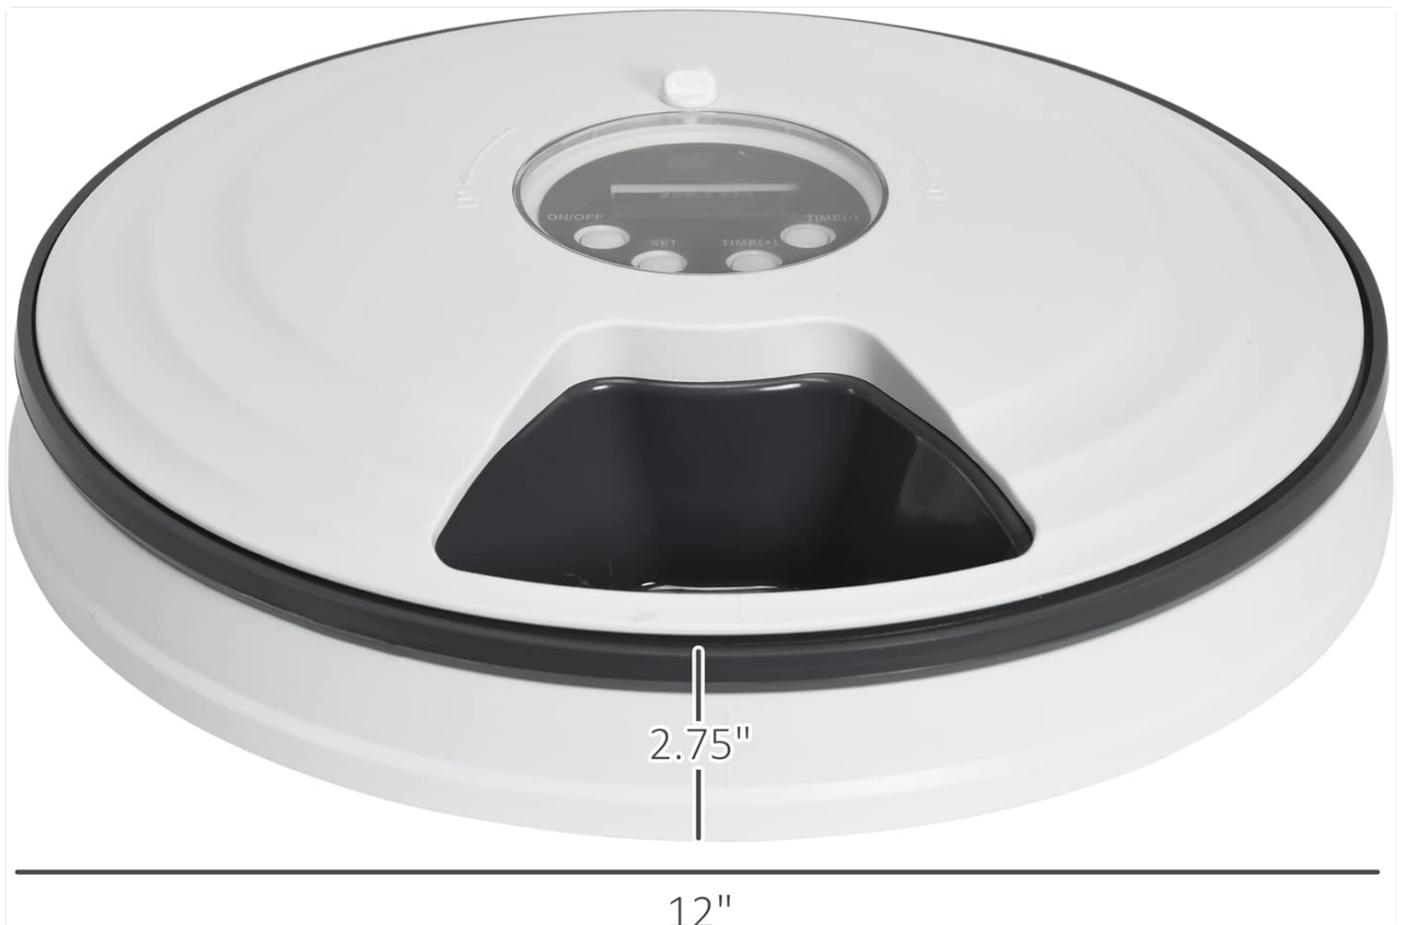


Image: A side view of the pet feeder with overlaid measurements indicating a diameter of 12 inches and a height of 2.75 inches.

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided by your retailer or the manufacturer's official website. Keep your purchase receipt as proof of purchase.

This product is designed for household pet use only. Any unauthorized modifications or misuse will void the warranty.



